

Grove GMK6400

North American Product Guide


ASME B30.5
Imperial 85%



Features

- 400 t (450 USt) rating
- 15,4 m - 60 m (51 ft - 197 ft) five-section boom
- 25 m - 79 m (82 ft - 259 ft) luffing jib
- Self-rigging MegaWingLift™
- 135 t (297,600 lb) counterweight with hydraulic removal system
- MegaDrive™ hybrid drive system
- Self-rigging auxiliary hoist

Features

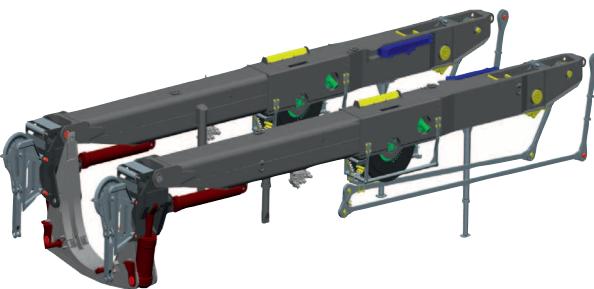

MegaWingLift™


The new, patented self-rigging MegaWingLift™ reduces transportation and erection costs to a minimum. Both the MegaWingLift™ and the auxiliary hoist can be installed without an auxiliary crane.

- Transport weight: < 11 t (24,000 lb)
- Transport height: < 2500 mm (8.2 ft)




Carrier cab

The new carrier cab offers increased comfort and ergonomic instrumentation, an improved heating and cooling system with air conditioning as standard, full width cab for added visibility, better aerodynamics, and is manufactured from rust free glass-fiber and aluminum composite to provide longer life and noise reduction.

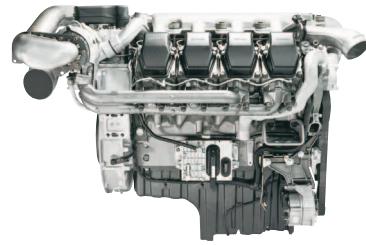

Engine


The GMK6400 comes equipped with a turbocharged OM 502 LA with eight-cylinder and 405kW Tier 4i/Euromot IIIb water-cooled Mercedes-Benz diesel engine.

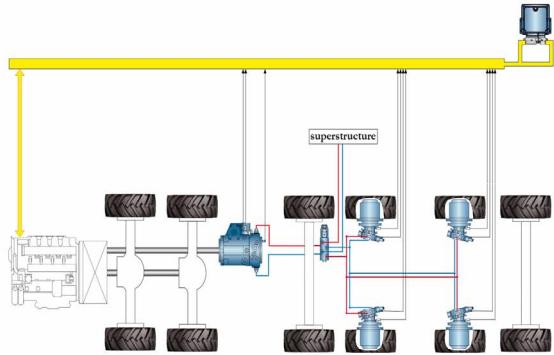

MegaDrive™

A mixture of conventional drive at the front and hybrid drive for slow speed. That creates the following advantages for you:

- Automatic on/off of MegaDrive™: over 25km/h (16 mph) off, less than 20 km/h (12 mph)
- Better traction in bad surface conditions
- Longer lifecycle of parts because of less direct contact
- Smooth and powerful acceleration from standstill

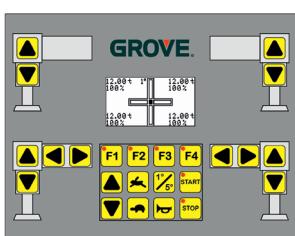

Man-Machine Interface

The new MMI display allows the control of the MEGATRAK™ suspension from both sides of the carrier. Adjustment of ground clearance independently of the outriggers. Flexibility on jobsite to react to varied site conditions. Outrigger pressure monitoring is standard. Active suspension control.

Additional features

- Strongest heavy duty 6-axle crane on the market
- Easy logistics and good transportability
- Easy and fast setup
- Symmetric 10 t (22,000 lb) counterweight slabs
- Self-rigging auxiliary hoist
- Strong 79 m (259 ft) luffing jib/ 64 m (210 ft) fixed lattice extension (shared components)

Contents

Specifications	4
Dimensions	7
Transport proposal	12
Load chart overview	15
Main boom (working range/load charts)	20
Main boom and MegaWingLift™ (working range/load charts)	30
Main boom and lattice extension (working range/load charts)	37
Main boom, lattice extension and MegaWingLift™ (working range/load charts)	44
Main boom and luffing jib (working range/load charts)	51
Main boom, luffing jib and MegaWingLift™ (working range/load charts)	68
Main boom and heavy duty jib (working range/load charts)	86
Main boom,heavy duty jib and MegaWingLift™ (working range/load charts)	91
Symbols glossary	96

Specifications

Superstructure

Boom

15,4 m - 60,0 m (51 ft - 197 ft) 5-section, full power MEGAFORM™ boom with TWIN-LOCK™ Pinning.

Maximum tip height: 63 m (206 ft).



Boom nose

Ten nylatron sheaves, mounted on heavy duty tapered roller bearings with removable pin-type rope guards. Quick reeve boom nose. Removable auxiliary boom nose with removable pin type rope guard.



Boom elevation

Single lift cylinder with safety valve provides boom angle from -1.5° to +82°.



*Optional jibs

25 m - 79 m (82 ft - 259 ft) luffing jib and offsettable 12 m - 64 m (39 ft - 210 ft) fixed jib (3° to 25°). Maximum tip height: 136.6 m (448 ft).

*MegaWingLift™

Lift enhancing system to improve load charts. The self-rigging MegaWingLift™ can be installed without the help of an auxiliary crane.



Load moment and anti-two-block system

Load moment and anti-two block system with audio/visual warning and control lever lockout provides electronic display of boom angle, length, radius, tip height, relative load moment, maximum permissible load, load indication and warning of impending two-block condition.



Cab

All aluminum constructed cab with acoustical lining, hydraulic tilted to 20°. Includes tinted safety glass, adjustable operator's seat, opening windows at side and rear, hinged windshield with wiper, sun visor and window shade. Other features include hot water heater/defroster, armrest integrated crane controls, ergonomically arranged instrumentation and radio/CD player, air conditioning, working range limiter.



Swing

3 planetary gear boxes with fixed displacement axial piston motors. Infinitely variable to 1.4 rpm. Free swing or hydrostatically engaged brake controlled by swing lever. Swing brake selected by foot operated switch.

Counterweight

135 t (297,600 lb) consisting of various sections with hydraulic installation/removal system controlled from the superstructure cab. Vehicle width 3,0 m (9.8 ft).



Electrical system

3 phase alternator: 28V/100A

2 batteries: 12V/170Ah

Lighting system and signals 24V.



Hydraulic motor

235 kW (315 hp) Rexroth. Maximum torque 660 Nm (487 ft/lb). Supplied by hydraulic carrier pumps.



Hydraulic system

Hydraulic tank capacity: 1300 L (343 gal)

Five separate circuits, three axial piston variable displacement pumps with power limiting control, one axial piston variable displacement pump for slewing and one fixed displacement pump for auxiliary gears. Standard thermostatically controlled oil coolers keep oil at optimum operating temperature. Driven by hydraulic motor.



Hoist

Main and auxiliary hoist are powered by axial piston motor with planetary gear and brake. "Thumb-thumper" hoist drum rotation indicator alerts operator of hoist movement.

	Main	Auxiliary
Rope length	380 m (1247 ft)	690 m (2263 ft)
Rope diameter	24 mm	24 mm
Line speed	120 m/min (394 fpm)	120 m/min (394 fpm)
Line pull	110 kN (24,728 lb)	104 kN (23,380 lb)

Hoist camera and light included.

Auxiliary hoist is self-rigging.

Specifications

Superstructure continued

*Optional hookblocks

Lifting capacity	Sheaves	Weight	Possible load with the crane*
250 t (275 USt)	9	3000 kg (6614 lb)	215 t (236 USt)
200 t (220 USt)	7	2400 kg (5291 lb)	181 t (199 USt)
160 t (176 USt)	5	1800 kg (3669 lb)	134 t (147 USt)
100 t (110 USt)	3	1300 kg (2866 lb)	87 t (96 USt)
40 t (44 USt)	1	850 kg (1874 lb)	38 t (42 USt)
16 t (18 USt)	H/B	450 kg (992 lb)	12,5 t (13.8 USt)

* varies depending on national regulations

0° over rear with additional equipment

*Optional equipment

- Work lights, mounted on boom base section
- Boom mounted aircraft warning light
- Hook blocks/headache ball
- Engine independent diesel cab heater, with engine pre-heater. Includes 24 hour timer
- Strobe light
- Data logger
- 360° NYC swing lock
- Boom removal kit
- 1 m (3.3 ft) adapter winch can be used to make up 3,5 m (11.5 ft) or 7,5 m (24.6 ft) heavy duty jib

Carrier



Chassis

Box type, torsion resistant frame is fabricated from high strength steel.



Transmission

ZF AS Tronic 12 Electronic automatic shifting. Kessler W2500 single stage transfer case.



Outrigger system

Four hydraulic two stage outrigger beams with vertical cylinders and outrigger pads, 700 mm (27.6 in) round. Outrigger can be set in 5 positions:

Full: 8,5 m (27.9 ft)

Partial: 7,4 m (24.3 ft)

Partial: 6,3 m (20.7 ft)

Partial: 5,0 m (16.4 ft)

Retracted: 2,7 m (8.9 ft)

Independent horizontal and vertical movement controlled from each side of carrier and the superstructure cab. Electronic crane level indicators. Hydraulic disconnect for front outrigger beams and removable rear outrigger box. Work light for each outrigger beam and outrigger pad load indicator with read out on both sides of carrier and in superstructure cabin. Includes outrigger monitoring system.



Drive/steer

12 x 8 x 12

MegaDrive™

Hydrostatic hybrid drive system with axles 4 and 5 hydrostatically driven. Axles disconnect at speeds greater than 25 km/h (16 mph) and connect at speeds below 20 km/h (12 mph).



Suspension

Grove exclusive MEGATRAK™ suspension. Independent hydro-pneumatic system acting on all wheels with hydraulic lockout. Suspension can be raised 220 mm (8.7 in) or lowered 80 mm (3.1 in), both longitudinally and transversely. Features an automatic leveling system for highway travel. Active suspension control on outrigger control units.

Specifications

Carrier continued

Axles

1st axle line – drive/steer
2nd axle line – drive/steer
3rd axle line – steer
4th axle line – drive/steer
 (disconnects >25 km/h [16 mph])
5th axle line – drive/steer
 (disconnects >25 km/h [16 mph])
6th axle line – steer
Axles 1 and 2 with planetary hub reduction and center mounted gearing. Axles 4 and 5 MegaDrive™.

Tires

12 tires, 16.00R25 (445/95R25)
(vehicle width – 3,0 m [9.8 ft])



Steering

Dual circuit, hydraulic power assisted steering system. Transfer case mounted, ground driven emergency steering pump. Axles 1, 2, 5 and 6 steer on highway, axles 3 and 4 disconnect at speeds greater than 25 km/h (16 mph). Separate steering (steer by wire) of the 3rd to 6th axles for all wheel and crab steering, controlled by an electronic rocker switch.



Engine

Mercedes Benz OM 502 LA, eight-cylinder Tier 4i
Horsepower: 405 kW (551 hp) at 1800 rpm
Torque: 2600 Nm (1918 ft/lb) at 1300 rpm
Engine emissions: EPA /CARB/EUROMOT (off road)



Fuel tank capacity

650 L (172 gal)



Brakes

Service brakes: pneumatic dual circuit acting on all wheels.
Parking brake: pneumatically operated spring loaded brake acting on axle lines 2, 4, 5 and 6.
Air dryer.



Cab

Two-man, composite designed aluminum and fiber reinforced plastic construction with the following features: safety glass, driver seat with pneumatic suspension, engine-dependent hot water heater, power windows, heated rear view mirrors, complete instrumentation, driving controls, reversing camera system, air conditioning, radio/CD player, 12V plug and fire extinguisher.



Electrical system

24V system with three phase alternator, 28V/100A
2 batteries, 12V/170 Ah



Maximum speed

85 km/h (53 mph)



Gradeability (theoretical)

50% - 14.00R25 (385/95R25) tires
50% - 16.00R25 (445/95R25) / 20.5R25 (525/80R25) tires



Miscellaneous standard equipment

Work lights; tool kit, fire extinguishers, auxiliary boom nose and wind speed indicator, CraneSTAR asset management system.

*Optional equipment

- 14.00R25 (385/95R25) tires
(vehicle width. 3 m [9.8 ft])
- 20.5R25 (525/80R25) tires
(vehicle width. 3,1 m [10.2 ft])
- Hydraulic driveline retarder integrated into Allison transmission
- Engine independent diesel cab heater, with engine pre-heater. Includes 24 hour timer.
- Strobe light
- Spare tire and wheel with carry bracket
- Trailer hitch
- Steel outrigger pads
- Engine shut down valve
- Tier III Engine: Mercedes Benz OM 502 LA, 420 kW (571 hp) at 1800 rpm.
Max-torque: 2700 Nm at 1080 rpm

Dimensions

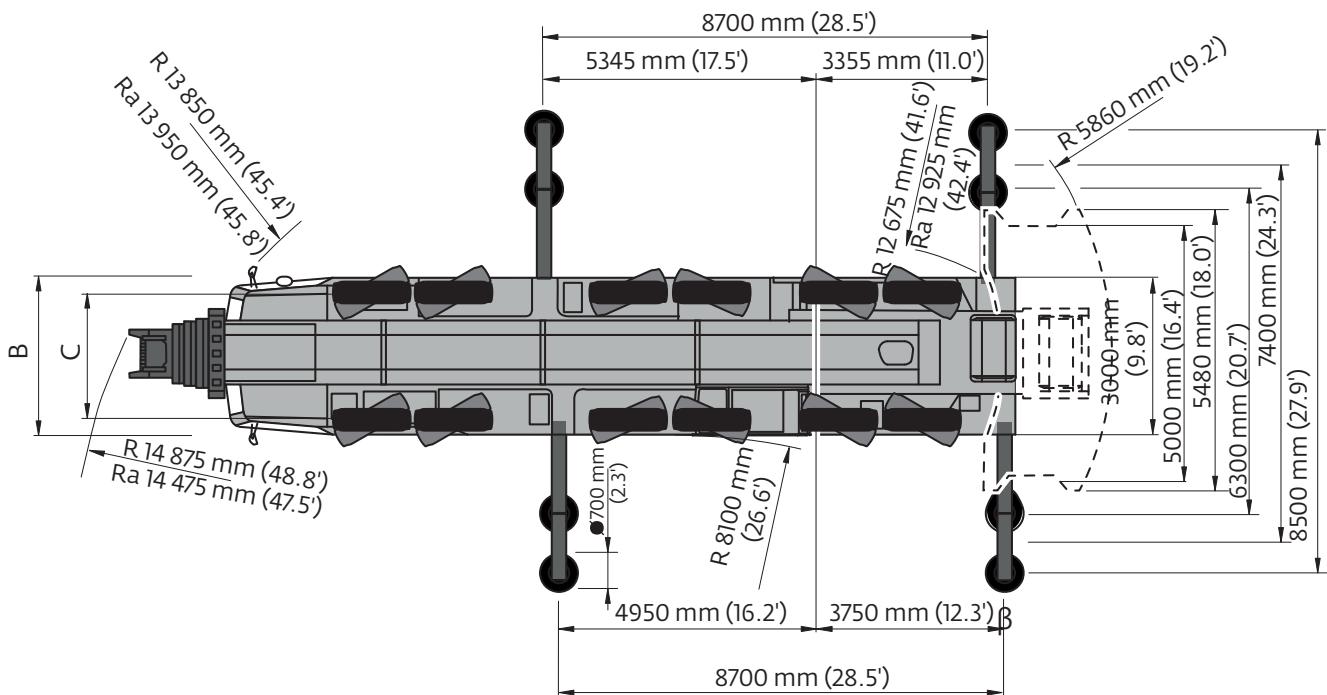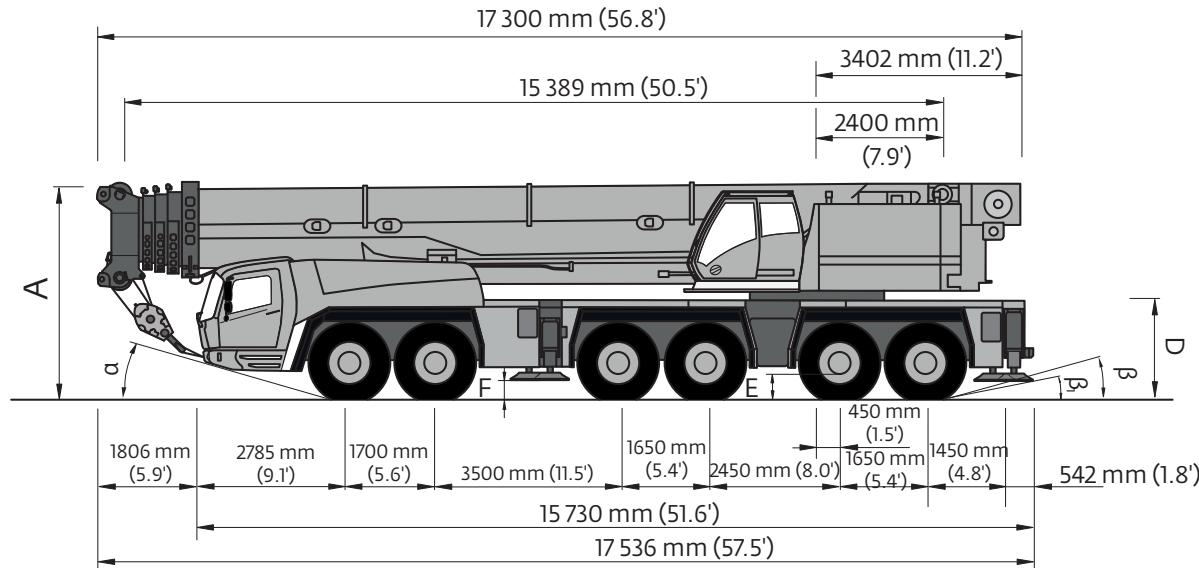


Tires	A	^{*130 mm (0.4')} A	B	C	D	E	F	α	β	β_1
14.00 R25	3956 mm (13.0')	3826 mm (12.6')	2970 mm (9.7')	2570 mm (8.4')	1815 mm (6.0')	400 mm (1.3')	209 mm (0.7')	14°	11°	8°
16.00 R25	4000 mm (13.1')	3870 mm (12.7')	2975 mm (9.8')	2510 mm (8.2')	1865 mm (6.1')	450 mm (1.5')	260 mm (0.9')	16°	13°	10°
20.5 R25	4000 mm (13.1')	3870 mm (12.7')	3070 mm (10.1')	2530 mm (8.3')	1865 mm (6.1')	450 mm (1.5')	260 mm (0.9')	16°	13°	10°

Ra = Radius all wheels steered

*Lowered

Dimensions

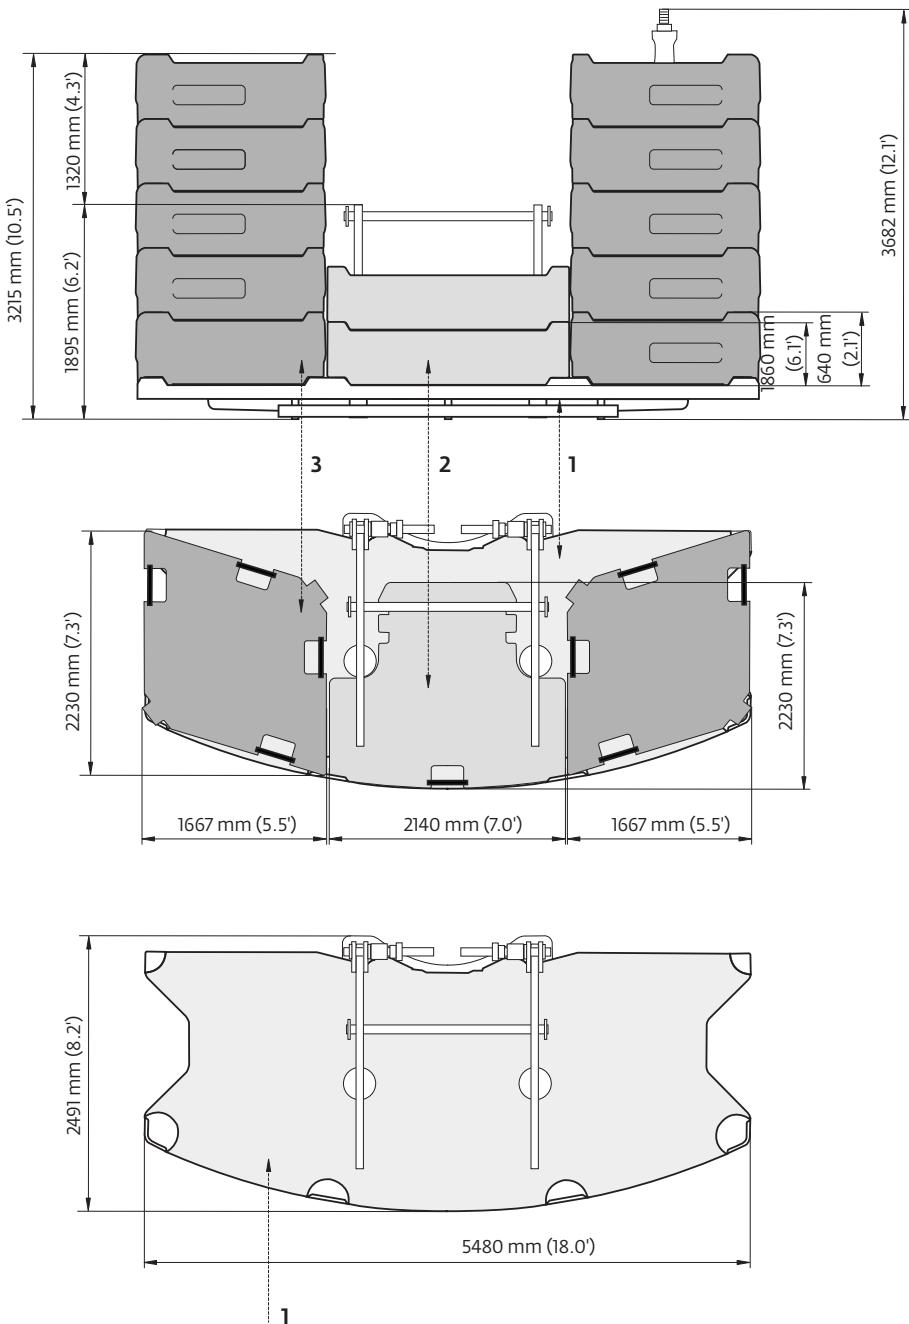



	(1)	(2)	(3)
15,0 t (33,000 lb)	X		
35,0 t (77,000 lb)	X		2X
55,0 t (121,000 lb)	X	2X	2X
75,0 t (165,500 lb)	X	2X	4X
95,0 t (209,500 lb)	X	2X	6X
115,0 t (253,500 lb)	X	2X	8X
135,0 t (297,600 lb)	X	2X	10X

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.


The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Dimensions

MegaWingLift™

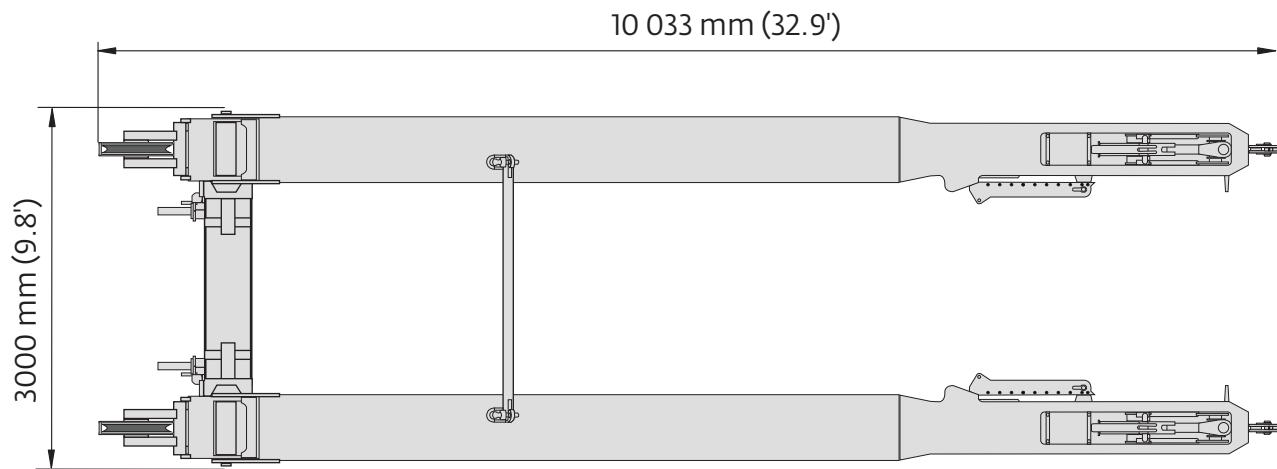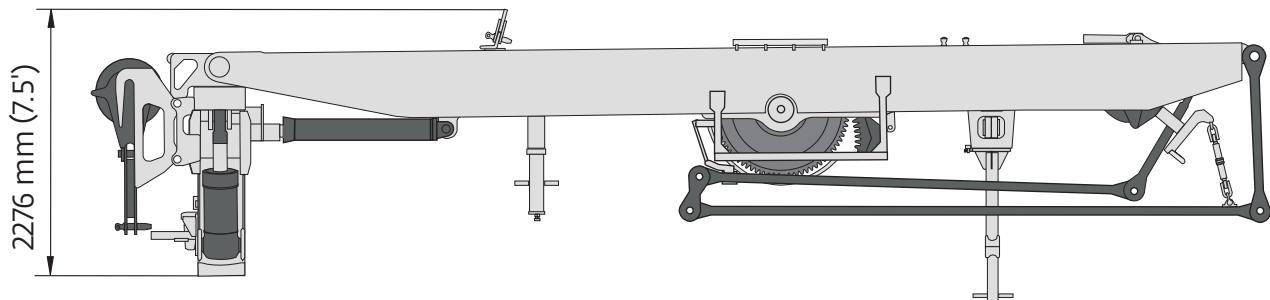

Auxiliary hoist

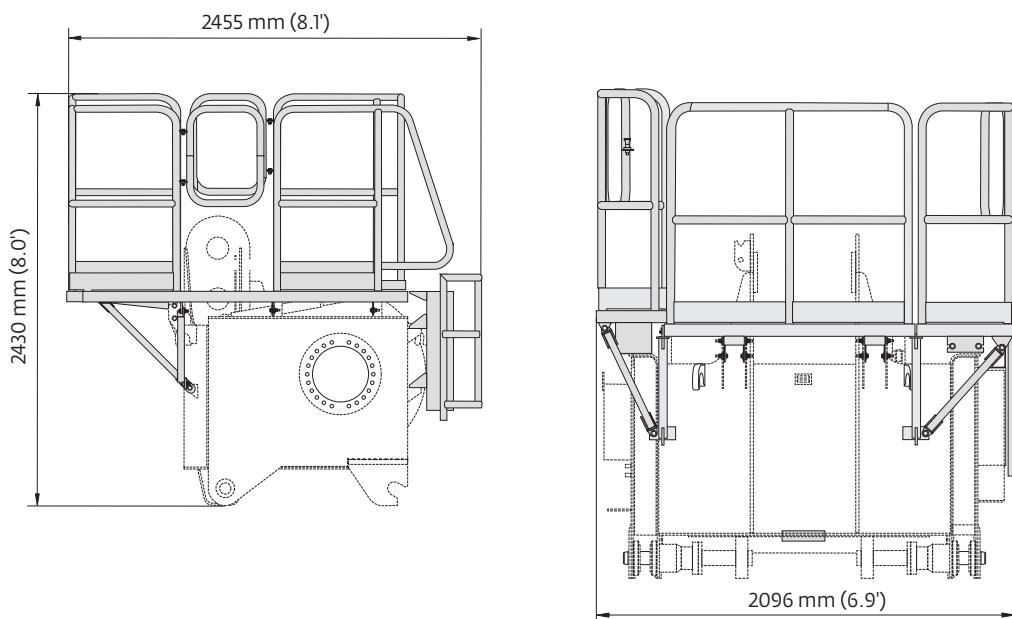

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.


Grove GMK6400 The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Dimensions

Lattice extension

Lattice extension dimensions

	L x W x H	Weight
A	2,8 x 2,5 x 2,3 m 9.18 x 8.2 x 7.5 ft	2000 kg 4409 lb
B	6,0 x 2,1 x 2,5 m 19.7 x 6.9 x 8.2 ft	1800 kg 3968 lb
C	6,2 x 1,7 x 1,5 m 20.3 x 5.6 x 4.9 ft	750 kg 1653 lb
D	6,2 x 1,9 x 1,9 m 20.3 x 6.2 x 6.2 ft	1000 kg 2205 lb
E	12,2 x 1,7 x 1,6 m 40.0 x 5.6 x 5.2 ft	1500 kg 3307 lb
F	12,2 x 1,9 x 1,9 m 40.0 x 6.2 x 6.2 ft	1750 kg 3858 lb
G	3,7 x 1,7 x 1,8 m 12.1 x 5.6 x 5.9 ft	1500 kg 3307 lb
H	1,2 x 1,9 x 1,9 m 3.9 x 6.2 x 6.2 ft	400 kg 882 lb
I	3,2 x 1,6 x 2,1 m 10.5 x 5.2 x 6.9 ft	1000 kg 2205 lb
L	14,3 x 2,0 x 1,6 m 47.0 x 6.6 x 5.2 ft	2900 kg 6393 lb

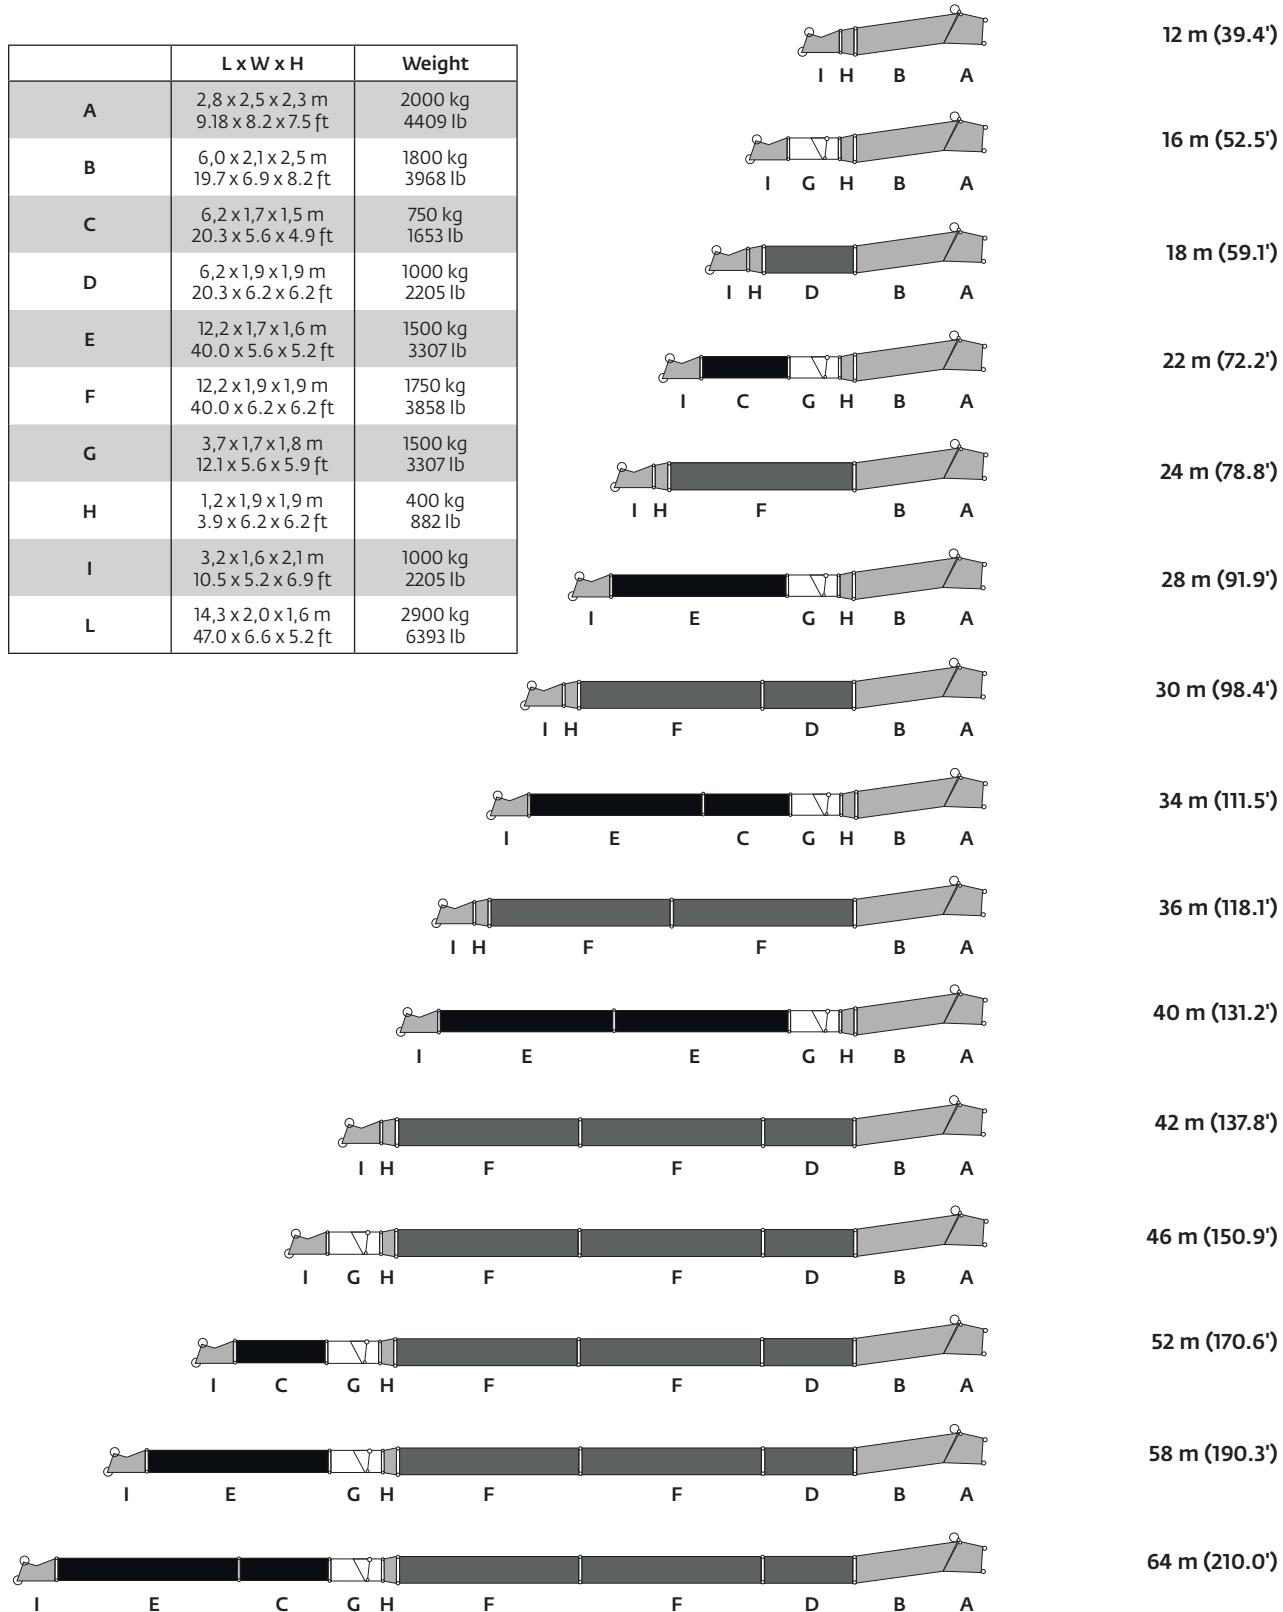


THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Dimensions

Luffing jib

Luffing jib dimensions

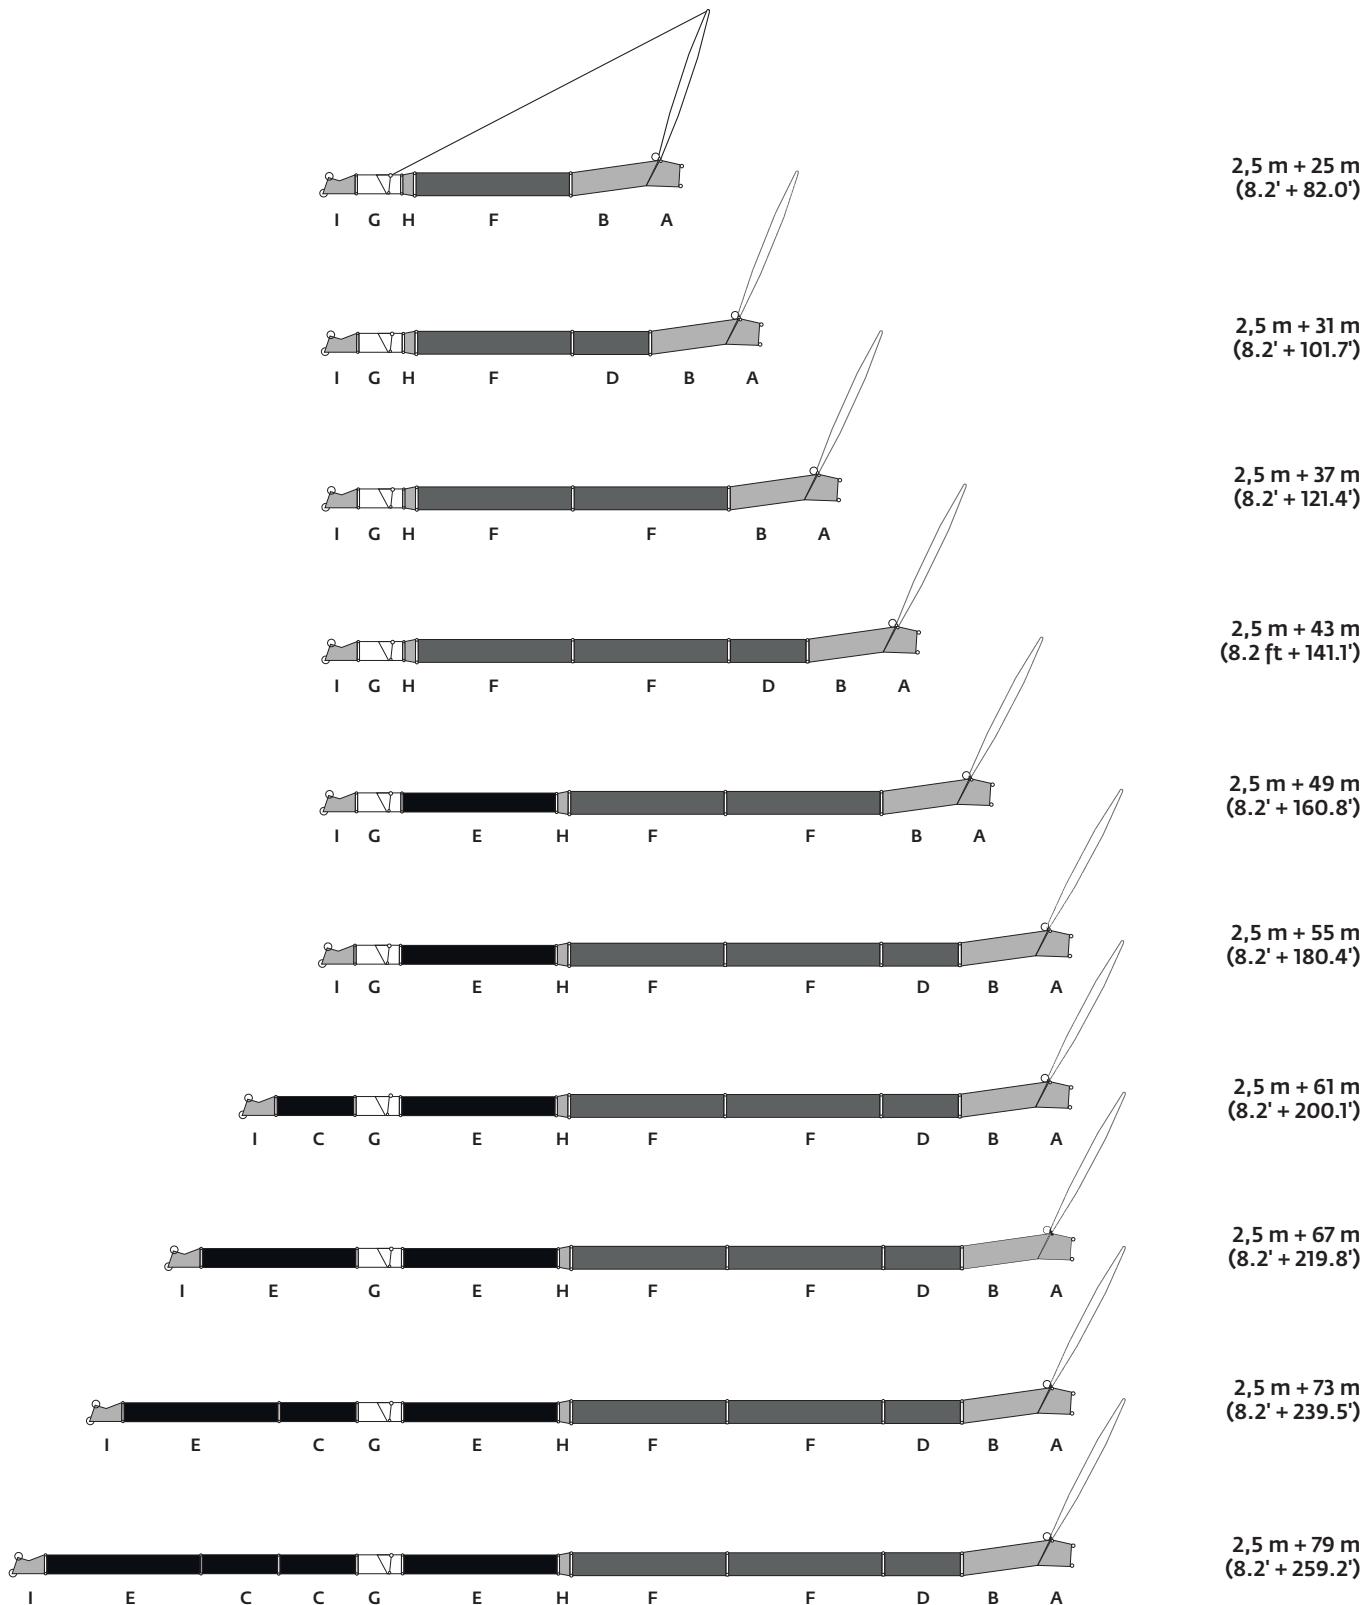


THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

Grove GMK6400 *The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.*

Transport proposals

PROVISIONAL- Boom over front

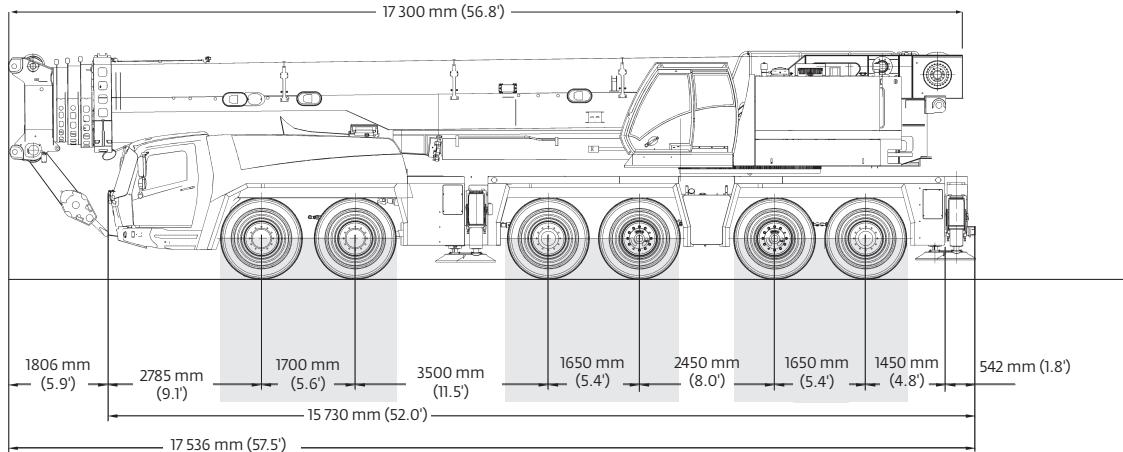


	Axes 1-2	Axes 3-6	Total GVW
Boom over front, rear outrigger box removed	27 246 kg (60,067 lb)	41 793 kg (92,129 lb)	69 039 kg (152,206 lb)
Boom over front, rear outrigger box installed	24 204 kg (53,361 lb)	49 960 kg (110,143 lb)	74 164 kg (163,504 lb)
Boom removed, rear outrigger box installed	9035 kg (19,919 lb)	38 809 kg (85,559 lb)	47 844 kg (105,479 lb)

Unit equipped with:

- 20.5 tires on aluminum rims
- Operator, 75 kg (165 lb)
- Welded on MegaWingLift™

Allow 3% variation in weight due to manufacturing tolerances

PROVISIONAL - Trailing boom with dolly

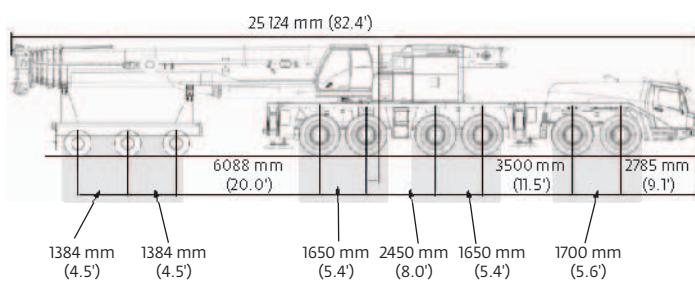


	Axes 1-2	Axes 3-6	Dolly	Total GVW
Boom in dolly over rear, rear outrigger box removed	16 242 kg (35,806 lb)	38 994 kg (85,966 lb)	17 492 kg (38,562 lb)	72 728 kg (160,335 lb)
Boom in dolly over rear, rear outrigger box installed	13 200 kg (29,100 lb)	47 161 kg (103,970 lb)	17 482 kg (38,563 lb)	77 853 kg (171,633 lb)

Unit equipped with:

- 20.5 tires on aluminum rims
- Operator, 75 kg (165 lb)
- Welded on MegaWingLift™ hardware
- 3-axle dolly (4309 kg [9500 lb])

Allow 3% variation in weight due to manufacturing tolerances

PROVISIONAL - Boom removed, superstructure over rear

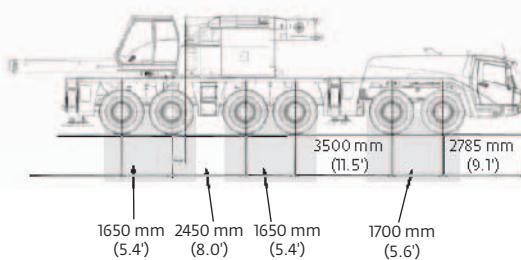

	Axes 1-2	Axes 3-6	Total GVW
Boom removed, superstructure over rear	12 336 kg (27,196 lb)	30 397 kg (67,015 lb)	42 733 kg (94,210 lb)

Unit equipped with:

- Rear outrigger box removed
- 20.5 tires on aluminum rims
- Operator, 75 kg (165 lb)

Allow 3% variation in weight due to manufacturing tolerances


THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.


Transport proposals

Transport proposal

A+B+C+D+H+L

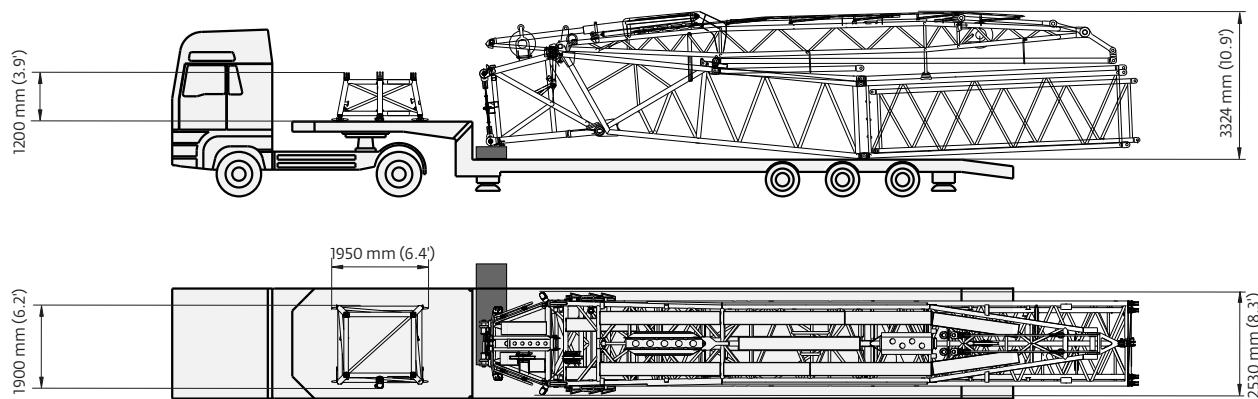

F+E+I

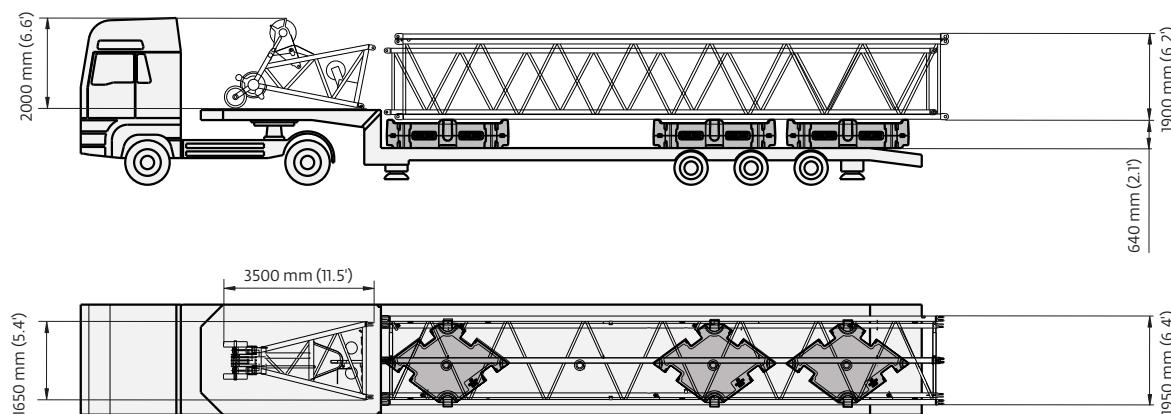


THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.



Transport proposals

Transport proposal



F+E+G

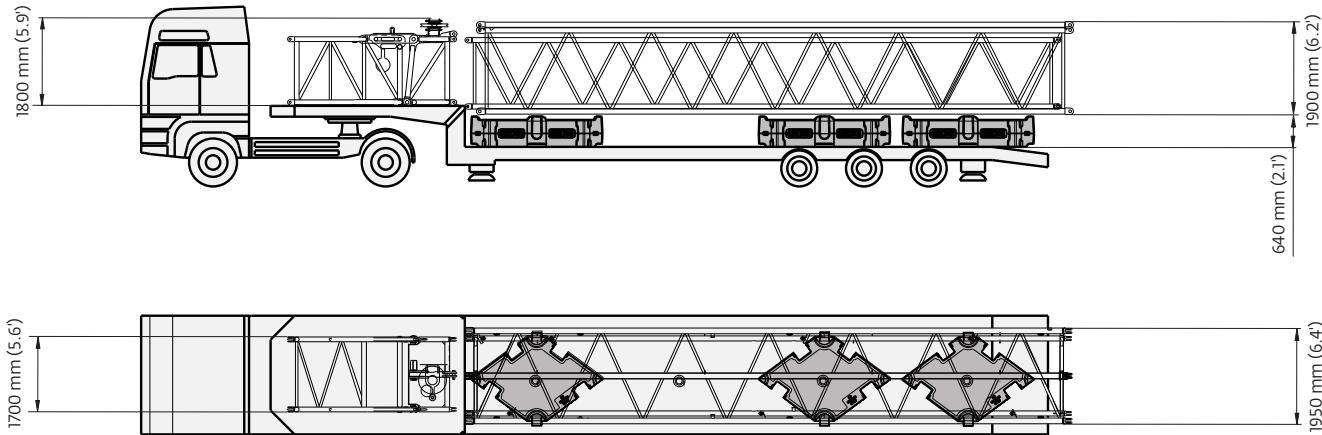

15 t (33,070 lb) baseplate + 2x10 t (22,046 lb) slab + auxiliary hoist

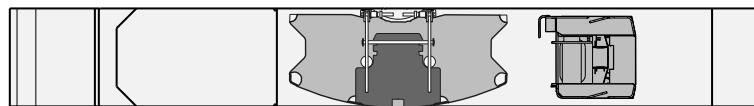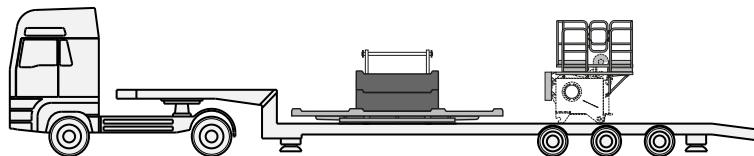

MegaWingLift™ + C

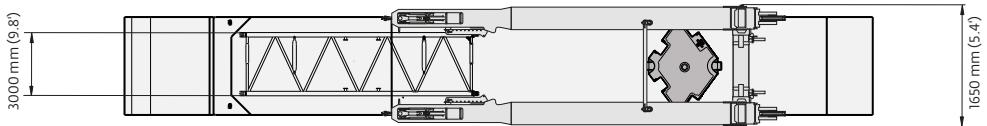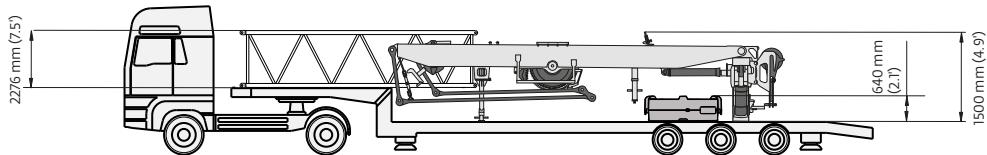

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Overview

Overview



50.5 ft - 196.9 ft



360°

ft lb x1000	28.5 x 27.8 ft										28.5 x 24.2 ft									
	297.6	253.5	209.4	165.3	121.2	99.2	77.1	55.1	33.0	0.0	297.6	253.5	209.4	165.3	121.2	99.2	77.1	55.1	33.0	0.0
50.5
60.6
82.6
87.3
98.7
114.8
123.9
130.9
139.9
147.0
160.3
163.0
179.1
192.4
196.8

ft lb x1000	28.5 ft x 20.6 ft								28.5 ft x 16.4 ft							
	209.4	165.3	121.2	99.2	77.1	55.1	33.0	0.0	121.2	99.2	77.1	55.1	33.0	0.0		
50.5
60.6
82.6
87.3
98.7
114.8
123.9
130.9
139.9
147.0
160.3
163.0
179.1
192.4
196.8



114.8 ft - 196.8 ft + MegaWingLift™



360°

ft lb x1000	28.5 x 27.8 ft							28.5 x 24.2 ft							28.5 ft x 20.6 ft	
	297.6	253.5	209.5	165.5	121.0	99.0	77.0	297.6	253.5	209.5	165.5	121.0	209.5	165.5		
114.8
130.9
139.9
147.0
163.0
179.1
196.8

Load chart

Overview

Overview



3° (25°)



360°

ft	28.5 x 27.8 ft														
	297.6 / 253.5 / 209.5 / 165.5 k lb														
ft lb x1000	39	52	59	72	79	92	98	112	118	131	138	151	171	190	210
50.5	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
66.6	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
82.7	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
98.8	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
114.8	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
130.9	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
147.0	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
163.0	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
179.1	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

ft	28.5 x 27.8 ft												
	121.0 k lb												
ft lb x1000	39	52	59	72	79	92	98	112	118	131	138	151	171
50.5	•	•	•	•	•	•	•	•	•	•	•	•	•
66.6	•	•	•	•	•	•	•	•	•	•	•	•	•
82.7	•	•	•	•	•	•	•	•	•	•	•	•	•
98.8	•	•	•	•	•	•	•	•	•	•	•	•	•
114.8	•	•	•	•	•	•	•	•	•	•	•	•	•
130.9	•	•	•	•	•	•	•	•	•	•	•	•	•
147.0	•	•	•	•	•	•	•	•	•	•	•	•	•
163.0	•	•	•	•	•	•	•	•	•	•	•	•	•
179.1	•	•	•	•	•	•	•	•	•	•	•	•	•

ft	28.5 x 27.8 ft						
	77.0 k lb						
ft lb x1000	39	52	59	72	79	92	98
50.5	•	•	•	•	•	•	•
66.6	•	•	•	•	•	•	•
82.7	•	•	•	•	•	•	•
98.8	•	•	•	•	•	•	•
114.8	•	•	•	•	•	•	•
130.9	•	•	•	•	•	•	•
147.0	•	•	•	•	•	•	•
163.0	•	•	•	•	•	•	•
179.1	•	•	•	•	•	•	•

ft	28.5 x 24.3 ft														
	297.6 / 253.5 / 209.5 / 165.5 k lb														
ft lb x1000	39	52	59	72	79	92	98	112	118	131	138	151	171	190	210
50.5	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
66.6	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
82.7	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
98.8	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
114.8	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
130.9	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
147.0	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
163.0	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
179.1	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Overview

Overview



3° (25°)



360°

ft	28.5 x 27.8 ft												77.0 k lb		
	121.0 k lb											77.0 k lb			
ft	lb x1000	39	52	59	72	79	92	98	112	118	131	138	39	52	59
50.5
66.6
82.7
98.8
114.8
130.9
147.0
163.0
179.1

ft	28.5 x 20.7 ft															
	209.5 k lb															
ft	lb x1000	39	52	59	72	79	92	98	112	118	131	138	151	171	190	210
50.5
66.6
82.7
98.8
114.8
130.9
147.0
163.0
179.1

ft	28.5 x 20.7 ft												
	165.5 k lb												
ft	lb x1000	39	52	59	72	79	92	98	112	118	131	138	151
50.5
66.6
82.7
98.8
114.8
130.9
147.0
163.0
179.1

ft	28.5 x 20.7 ft							
	121.0 k lb							
ft	lb x1000	39	52	59	72	79	92	98
50.5
66.6
82.7
98.8
114.8
130.9
147.0
163.0
179.1

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

Grove GMK6400 The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Overview

Overview



3° (25°) + MegaWingLift™



360°

ft	28.5 x 27.8 ft														
	297.6 / 253.5 / 209.5 / 165.5 k lb														
ft lb x1000	39	52	59	72	79	92	98	112	118	131	138	151	171	190	210
114.8	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
130.9	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
147.0	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
163.0	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
179.1	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

ft	28.5 x 27.8 ft														
	121.0 k lb														
ft lb x1000	39	52	59	72	79	92	98	112	118	131	138	151	171		
114.8	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
130.9	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
147.0	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
163.0	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
179.1	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

ft	28.5 x 27.8 ft														
	77.0 k lb														
ft lb x1000	39	52	59	72	79	92	98								
114.8	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
130.9	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
147.0	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
163.0	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
179.1	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

ft	28.5 x 24.3 ft															
	297.6 / 253.5 / 209.5 / 165.5 k lb															
ft lb x1000	39	52	59	72	79	92	98	112	118	131	138	151	171	190	210	
114.8	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
130.9	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
147.0	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
163.0	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
179.1	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

ft	28.5 x 24.3 ft															
	121.0 k lb															
ft lb x1000	39	52	59	72	79	92	98	112	118	131	138	39	52	59		
114.8	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
130.9	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
147.0	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
163.0	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
179.1	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Overview

Overview



3° (25°) + MegaWingLift™



360°

ft	28.5 x 20.7 ft														
	209.5 k lb														
ft lb x1000	39	52	59	72	79	92	98	112	118	131	138	151	171	190	210
114.8	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
130.9	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
147.0	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
163.0	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
179.1	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

ft	28.5 x 20.7 ft													
	165.4 k lb													
ft lb x1000	12	16	18	22	24	28	30	34	36	40	42	46		
114.8	•	•	•	•	•	•	•	•	•	•	•	•	•	•
130.9	•	•	•	•	•	•	•	•	•	•	•	•	•	•
147.0	•	•	•	•	•	•	•	•	•	•	•	•	•	•
163.0	•	•	•	•	•	•	•	•	•	•	•	•	•	•
179.1	•	•	•	•	•	•	•	•	•	•	•	•	•	•

ft	28.5 x 20.7 ft						
	121.0 k lb						
ft lb x1000	39	52	59	72	79	92	98
114.8	•	•	•	•	•	•	•
130.9	•	•	•	•	•	•	•
147.0	•	•	•	•	•	•	•
163.0	•	•	•	•	•	•	•
179.1	•	•	•	•	•	•	•


THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

Grove GMK6400 The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Working range

Main boom

15,4 m - 60 m (51 ft - 197 ft) main boom

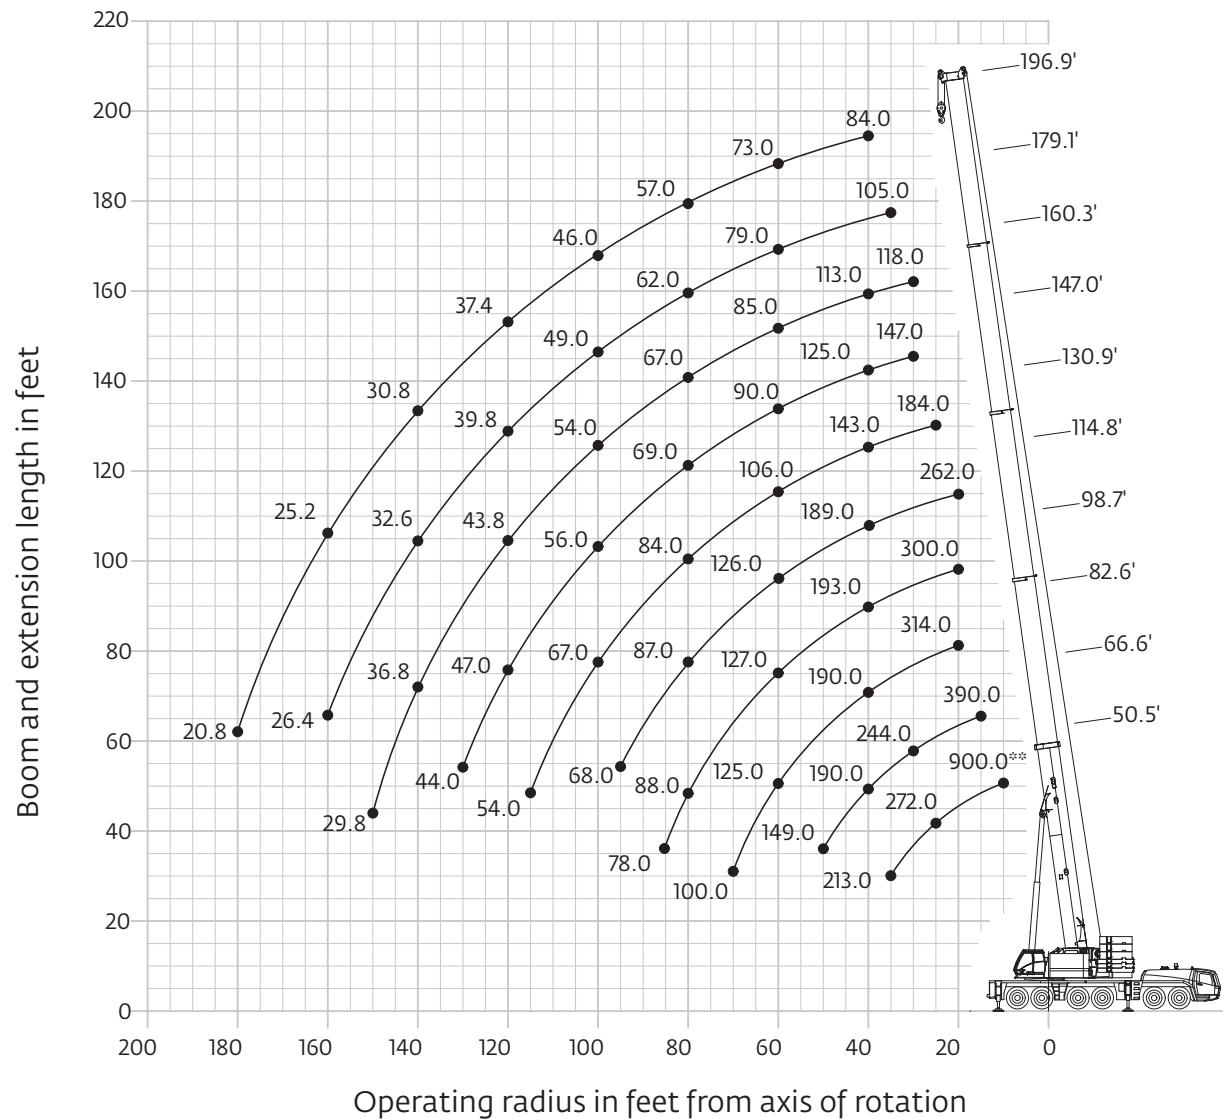

	Hook block (USt)	H
	320 D	4050 mm (13.3 ft)
	250 D	3950 mm (13.0 ft)
	200 D	3650 mm (12.0 ft)
	160 D	3650 mm (12.0 ft)
	100 D/E	3300 mm (10.8 ft)
	40 D/E	3200 mm (10.5 ft)
	16 H/B	2600 mm (8.5 ft)

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Main boom


15,4 m - 60 m
(51 ft - 197 ft)


135 000 kg
(297,600 lb)


8,7 m x 8,5 m
(28.5 ft x 27.8 ft)
(100%)


360°



Pounds x 1000

Feet	50.5°	50.5	66.6	82.6	87.3	98.7	114.8	123.9	130.9	139.9	147.0	163.0	179.1	192.4	196.9	Feet				
8	900.00**															8				
25		280.00														25				
30	242.00	244.00	244.00	200.00	234.00		170.00	168.00		147.00						30				
35	213.00	215.00	215.00	178.00	213.00	206.00	153.00	154.00		136.00	120.00	105.00				35				
40		190.00	190.00	160.00	193.00	189.00	139.00	143.00	103.00	125.00	113.00	102.00	88.00	84.00	40					
45		170.00	170.00	146.00	173.00	172.00	125.00	132.00	95.00	115.00	105.00	97.00	88.00	84.00	45					
50		149.00	153.00	133.00	156.00	154.00	114.00	122.00	87.00	106.00	98.00	91.00	84.00	82.00	50					
55			138.00	123.00	140.00	139.00	104.00	114.00	81.00	97.00	91.00	85.00	80.00	78.00	55					
60			125.00	114.00	127.00	126.00	95.00	106.00	75.00	90.00	85.00	79.00	75.00	73.00	60					
65			113.00	106.00	116.00	114.00	87.00	99.00	70.00	84.00	79.00	74.00	70.00	69.00	65					
70			100.00	97.00	105.00	104.00	81.00	94.00	65.00	78.00	75.00	70.00	66.00	65.00	70					
75				97.00	95.00	76.00	89.00	61.00	73.00	70.00	65.00	62.00	61.00	75						
80					88.00	87.00	70.00	84.00	58.00	69.00	67.00	62.00	59.00	57.00	80					
85						78.00	81.00	65.00	80.00	54.00	65.00	63.00	58.00	55.00	54.00	85				
90							75.00	60.00	76.00	52.00	62.00	60.00	55.00	52.00	51.00	90				
95								68.00	56.00	71.00	49.00	59.00	57.00	52.00	50.00	48.00	95			
100									53.00	67.00	47.00	56.00	54.00	50.00	47.00	46.00	100			
105										50.00	62.00	45.00	54.00	51.00	47.00	44.00	43.40	105		
110										48.00	57.00	42.40	51.00	48.00	45.00	42.20	41.20	110		
115											54.00	40.60	49.00	46.00	43.20	40.20	39.20	115		
120												39.00	47.00	43.80	41.40	38.40	37.40	120		
125													46.00	41.80	39.60	36.60	35.80	125		
130													44.00	39.80	37.80	34.80	34.00	130		
135														38.20	36.20	33.20	32.40	135		
140															36.80	34.20	31.60	30.80	140	
145																35.20	33.20	30.20	29.40	145
150																29.80	32.00	28.80	28.00	150
155																	30.80	27.40	26.60	155
160																	29.40	25.80	25.20	160
165																		24.60	24.00	165
170																		23.40	22.80	170
175																		22.40	21.80	175
180																		20.80	180	

*Over rear

**Over rear with special equipment

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

Grove GMK6400 The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Main boom

																		
15,4 m - 60 m (51 ft - 197 ft)	115 000 kg (253,500 lb)	8,7 m x 8,5 m (28.5 ft x 27.8 ft) (100%)	360°															
		Pounds x 1000																
Feet	50.5	66.6	82.6	87.3	98.7	114.8	123.9	130.9	139.9	147.0	163.0	179.1	192.4	196.9	Feet			
15		384.00													15			
20	328.00	326.00	314.00	256.00	300.00	262.00									20			
25	276.00	278.00	278.00	226.00	264.00	254.00		184.00							25			
30	238.00	240.00	240.00	200.00	238.00	226.00	170.00	168.00	124.00	147.00	126.00				30			
35	208.00	210.00	210.00	178.00	213.00	206.00	153.00	154.00	113.00	136.00	120.00	105.00			35			
40		184.00	185.00	160.00	187.00	186.00	139.00	143.00	103.00	125.00	113.00	102.00	88.00	84.00	40			
45		162.00	162.00	146.00	165.00	164.00	125.00	132.00	95.00	115.00	105.00	97.00	88.00	84.00	45			
50		145.00	143.00	133.00	146.00	144.00	114.00	122.00	87.00	106.00	98.00	91.00	84.00	82.00	50			
55			130.00	123.00	130.00	128.00	104.00	114.00	81.00	97.00	91.00	85.00	80.00	78.00	55			
60			117.00	112.00	116.00	115.00	95.00	106.00	75.00	90.00	85.00	79.00	75.00	73.00	60			
65			106.00	100.00	105.00	104.00	87.00	99.00	70.00	84.00	79.00	74.00	70.00	69.00	65			
70			96.00	91.00	96.00	94.00	81.00	94.00	65.00	78.00	75.00	70.00	66.00	65.00	70			
75				88.00	86.00	76.00	88.00	61.00	73.00	70.00	65.00	62.00	61.00		75			
80					81.00	79.00	70.00	81.00	58.00	69.00	67.00	62.00	59.00	57.00		80		
85						74.00	73.00	65.00	75.00	54.00	65.00	63.00	58.00	55.00	54.00		85	
90							68.00	60.00	69.00	52.00	62.00	60.00	55.00	52.00	51.00		90	
95							65.00	56.00	64.00	49.00	59.00	57.00	52.00	50.00	48.00		95	
100								53.00	60.00	47.00	56.00	54.00	50.00	47.00	46.00		100	
105								50.00	56.00	45.00	54.00	51.00	47.00	44.00	43.40		105	
110									48.00	52.00	42.40	51.00	48.00	45.00	42.20	41.20		110
115										49.00	40.60	49.00	46.00	43.20	40.20	39.20		115
120											39.00	47.00	43.80	41.40	38.40	37.40		120
125												44.00	41.80	39.60	36.60	35.80		125
130												41.60	39.80	37.80	34.80	34.00		130
135													38.20	36.20	33.20	32.40		135
140													36.80	34.60	31.60	30.80		140
145													34.80	33.20	30.20	29.40		145
150													29.80	32.00	28.80	28.00		150
155														30.80	27.40	26.60		155
160														29.40	25.80	25.20		160
165															24.60	24.00		165
170															23.40	22.80		170
175															22.40	21.80		175
180															20.80			180

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Main boom


15,4 m - 60 m
(51 ft - 197 ft)


95 000 kg
(209,400 lb)


8,7 m x 8,5 m
(28.5 ft x 27.8 ft)
(100%)


360°



Pounds x 1000

Feet	50.5	66.6	82.6	87.3	98.7	114.8	123.9	130.9	139.9	147.0	163.0	179.1	192.4	196.9	Feet							
10	494.00														10							
15	392.00	390.00													15							
20	320.00	322.00	314.00	256.00	300.00	262.00									20							
25	272.00	274.00	274.00	226.00	264.00	254.00									25							
30	232.00	234.00	236.00	200.00	238.00	226.00	170.00	168.00	124.00	147.00	126.00				30							
35	199.00	201.00	201.00	178.00	204.00	202.00	153.00	154.00	113.00	136.00	120.00	105.00			35							
40	172.00	171.00	160.00	174.00	173.00	139.00	143.00	103.00	125.00	113.00	102.00	88.00	84.00		40							
45	150.00	151.00	146.00	151.00	149.00	125.00	132.00	95.00	115.00	105.00	97.00	88.00	84.00		45							
50	131.00	133.00	127.00	132.00	131.00	114.00	122.00	87.00	106.00	98.00	91.00	84.00	82.00		50							
55		118.00	113.00	117.00	116.00	104.00	114.00	81.00	97.00	91.00	85.00	80.00	78.00		55							
60		106.00	100.00	105.00	104.00	95.00	106.00	75.00	90.00	85.00	79.00	75.00	73.00		60							
65		95.00	90.00	95.00	93.00	87.00	95.00	70.00	84.00	79.00	74.00	70.00	69.00		65							
70		87.00	81.00	86.00	85.00	80.00	87.00	65.00	78.00	75.00	70.00	66.00	65.00		70							
75			79.00	79.00	72.00	79.00	61.00	73.00	70.00	65.00	62.00	61.00			75							
80				72.00	74.00	67.00	73.00	58.00	69.00	67.00	62.00	59.00	57.00		80							
85					67.00	69.00	63.00	67.00	54.00	65.00	63.00	58.00	55.00	54.00		85						
90						60.00	62.00	52.00	62.00	60.00	55.00	52.00	51.00			90						
95							55.00	57.00	49.00	58.00	57.00	52.00	50.00	48.00		95						
100								50.00	52.00	47.00	53.00	53.00	50.00	47.00	46.00		100					
105									46.00	48.00	45.00	49.00	49.00	47.00	44.00	43.40		105				
110										42.40	46.00	42.40	45.00	45.00	42.20	41.20		110				
115											44.00	40.60	42.00	41.60	42.40	40.20		115				
120												39.00	40.00	38.60	39.20	37.80		120				
125													37.20	35.80	36.40	35.00	34.40		125			
130														34.80	33.20	33.80	32.40	32.00		130		
135															31.00	31.60	30.00	29.60		135		
140																28.80	29.40	27.80	27.40		140	
145																26.80	27.40	25.80	25.40		145	
150																	25.00	25.60	24.00	23.40		150
155																		23.80	22.20	21.80		155
160																		22.20	20.60	20.20		160
165																		19.00	18.60			165
170																		17.60	17.20			170
175																		16.40	16.00			175
180																		14.80				180

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

Grove GMK6400 The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Main boom

 15,4 m - 60 m
(51 ft - 197 ft)

 75 000 kg
(165,300 lb)

 8,7 m x 8,5 m
(28.5 ft x 27.8 ft)
(100%)

 360°



Pounds x 1000

Feet	50.5	66.6	82.6	87.3	98.7	114.8	123.9	130.9	139.9	147.0	163.0	179.1	192.4	196.9	Feet				
10	484.00														10				
15	384.00	386.00													15				
20	314.00	316.00	314.00	256.00	300.00	262.00									20				
25	264.00	266.00	268.00	226.00	264.00	254.00		184.00							25				
30	218.00	220.00	220.00	200.00	224.00	220.00	170.00	168.00	124.00	147.00	126.00				30				
35	179.00	184.00	186.00	178.00	185.00	182.00	153.00	154.00	113.00	136.00	120.00	105.00			35				
40	156.00	157.00	152.00	157.00	154.00	139.00	143.00	103.00	125.00	113.00	102.00	88.00	84.00		40				
45	134.00	136.00	131.00	135.00	133.00	123.00	131.00	95.00	115.00	105.00	97.00	88.00	84.00		45				
50	118.00	119.00	114.00	119.00	116.00	106.00	115.00	87.00	106.00	98.00	91.00	84.00	82.00		50				
55		105.00	99.00	105.00	103.00	96.00	102.00	81.00	94.00	91.00	85.00	80.00	78.00		55				
60		93.00	88.00	92.00	96.00	88.00	91.00	75.00	88.00	85.00	79.00	75.00	73.00		60				
65		82.00	80.00	81.00	85.00	80.00	82.00	70.00	81.00	78.00	74.00	70.00	69.00		65				
70		74.00	75.00	74.00	76.00	71.00	73.00	65.00	73.00	71.00	69.00	66.00	65.00		70				
75			69.00	68.00	63.00	66.00	61.00	66.00	65.00	64.00	61.00	60.00			75				
80				62.00	61.00	57.00	62.00	58.00	61.00	59.00	59.00	56.00	55.00		80				
85					56.00	55.00	51.00	56.00	54.00	55.00	54.00	54.00	51.00		85				
90						50.00	46.00	51.00	52.00	50.00	50.00	49.00	47.00		90				
95							47.00	43.60	47.00	47.00	46.00	46.00	45.00	43.40		95			
100								41.60	42.80	43.60	41.80	42.00	41.00	39.60		100			
105									39.40	39.40	40.00	38.20	38.60	37.60		105			
110										37.20	36.20	37.00	35.20	35.40		110			
115											33.40	34.00	32.20	32.60		115			
120												31.40	29.80	30.00		120			
125													27.40	27.60		125			
130													25.20	25.40		130			
135														23.60		135			
140														21.80	20.60		140		
145															19.00		145		
150																17.40		150	
155																16.00		155	
160																14.60		160	
165																	11.80		165
170																	10.60		170
175																	9.60		175
180																	8.00		180

Load chart

Main boom

 15,4 m - 60 m
(51 ft - 197 ft)

 55 000 kg
(121,200 lb)

 8,7 m x 8,5 m
(28.5 ft x 27.8 ft)
(100%)

 360°



Pounds x 1000

Feet	50.5	66.6	82.6	87.3	98.7	114.8	123.9	130.9	139.9	147.0	163.0	179.1	192.4	196.9	Feet		
10	476.00														10		
15	376.00	378.00													15		
20	308.00	308.00	310.00	256.00	300.00	262.00									20		
25	246.00	248.00	248.00	226.00	244.00	226.00		177.00	184.00						25		
30	194.00	199.00	201.00	191.00	191.00	179.00	166.00	161.00	168.00	147.00	126.00				30		
35	159.00	164.00	165.00	154.00	157.00	147.00	137.00	144.00	144.00	133.00	120.00	105.00			35		
40	134.00	137.00	128.00	131.00	130.00	122.00	122.00	118.00	113.00	102.00	88.00	84.00			40		
45	111.00	113.00	111.00	112.00	112.00	104.00	105.00	105.00	105.00	102.00	99.00	95.00	88.00	84.00	45		
50	93.00	95.00	98.00	99.00	97.00	91.00	95.00	94.00	91.00	87.00	85.00	81.00	80.00		50		
55		81.00	84.00	86.00	84.00	80.00	84.00	84.00	80.00	79.00	75.00	72.00	71.00		55		
60		72.00	73.00	74.00	73.00	69.00	74.00	74.00	72.00	70.00	67.00	64.00	63.00		60		
65		63.00	64.00	65.00	64.00	63.00	65.00	65.00	64.00	63.00	60.00	57.00	56.00		65		
70		56.00	57.00	58.00	57.00	59.00	57.00	58.00	57.00	57.00	54.00	52.00	51.00		70		
75			51.00	52.00	53.00	51.00	51.00	50.00	51.00	49.00	47.00	46.00			75		
80				46.00	46.00	47.00	45.00	46.00	45.00	45.00	44.00	42.20	41.40		80		
85					41.40	41.60	43.40	40.80	41.20	40.20	40.60	39.40	38.00	37.40		85	
90						37.60	38.40	36.80	37.20	36.20	36.40	35.40	33.80	33.40		90	
95						34.00	34.80	33.20	33.60	32.60	32.80	31.80	30.20	29.80		95	
100							31.60	30.00	30.40	29.40	29.60	28.60	27.00	26.60		100	
105							28.60	27.20	27.60	26.40	26.80	25.80	24.20	23.80		105	
110							26.00	24.60	25.00	24.00	24.20	23.20	21.60	21.20		110	
115								22.40	22.80	21.60	21.80	20.80	19.40	18.80		115	
120									19.60	19.80	18.80	17.20	16.80			120	
125										17.60	17.80	16.80	15.20	14.80			125
130										16.00	16.20	15.00	13.60	13.20			130
135											14.60	13.40	12.00	11.60			135
140											13.20	12.00	10.40	10.00			140
145											10.20	10.60	9.00	8.60			145
150											9.00	9.40	7.80	7.40			150
155												8.20	6.60	6.20			155
160												7.20	5.60	5.20			160
165													4.60	4.20			165
170													3.60				170

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

Grove GMK6400 The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Main boom

15,4 m - 60 m (51 ft - 197 ft)	45 000 kg (99,200 lb)	8,7 m x 8,5 m (28.5 ft x 27.8 ft) (100%)	360°																
		Pounds x 1000																	
Feet	50.5	66.6	82.6	87.3	98.7	114.8	123.9	130.9	139.9	147.0	163.0	179.1	192.4	196.9	Feet				
10	470.00														10				
15	372.00	374.00													15				
20	300.00	302.00	302.00	256.00	292.00	262.00									20				
25	232.00	234.00	234.00	219.00	218.00	201.00		184.00							25				
30	183.00	188.00	181.00	169.00	170.00	159.00	152.00	154.00	124.00	142.00	126.00				30				
35	138.00	146.00	147.00	137.00	139.00	136.00	128.00	128.00	113.00	123.00	118.00	105.00			35				
40	116.00	119.00	117.00	118.00	115.00	107.00	111.00	103.00	106.00	102.00	98.00	88.00	84.00		40				
45	95.00	99.00	100.00	102.00	98.00	92.00	96.00	95.00	91.00	89.00	85.00	81.00	79.00		45				
50	79.00	83.00	84.00	86.00	85.00	83.00	84.00	83.00	80.00	80.00	78.00	74.00	71.00	69.00	50				
55		71.00	72.00	73.00	74.00	75.00	73.00	73.00	70.00	69.00	66.00	62.00	61.00		55				
60		61.00	62.00	64.00	64.00	65.00	63.00	64.00	62.00	61.00	58.00	55.00	54.00		60				
65		53.00	54.00	55.00	56.00	57.00	55.00	56.00	54.00	55.00	52.00	49.00	48.00		65				
70		47.00	47.00	49.00	49.00	50.00	49.00	50.00	48.00	48.00	47.00	44.00	43.20		70				
75			43.20	43.40	44.00	43.00	43.80	42.00	42.40	41.20	39.40	38.60			75				
80				38.40	38.60	39.40	38.20	39.00	37.20	37.60	36.40	35.00	34.40		80				
85					34.20	34.40	35.20	34.00	34.80	33.00	33.40	32.20	30.80	30.20		85			
90						30.80	31.60	30.40	31.20	29.40	29.60	28.60	27.20	26.60		90			
95						27.60	28.40	27.20	28.00	26.20	26.40	25.40	23.80	23.40		95			
100							25.40	24.40	25.00	23.40	23.60	22.60	21.00	20.60		100			
105								23.00	21.80	22.60	20.80	21.00	20.00	18.40	18.00		105		
110									20.60	19.60	20.20	18.60	18.80	17.80	16.20	15.80		110	
115										17.60	18.20	16.40	16.80	15.60	14.20	13.80		115	
120											16.40	14.60	14.80	13.80	12.40	11.80		120	
125												13.00	13.20	12.20	10.60	10.20		125	
130												11.40	11.60	10.60	9.00	8.60		130	
135													10.20	9.20	7.60	7.20		135	
140													9.00	7.80	6.20	5.80		140	
145														6.20	6.60	5.00	4.60		145
150														5.00	5.60	4.00	4.60		150
155															4.60			155	
160															3.60			160	

Load chart

Main boom

 15,4 m - 60 m
(51 ft - 197 ft)

 35 000 kg
(77,100 lb)

 8,7 m x 8,5 m
(28.5 ft x 27.8 ft)
(100%)

 360°



Pounds x 1000

Feet	50.5	66.6	82.6	87.3	98.7	114.8	123.9	130.9	139.9	147.0	163.0	179.1	192.4	196.9	Feet		
10	466.00														10		
15	368.00	370.00													15		
20	288.00	292.00	276.00	256.00	256.00	232.00	157.00								20		
25	217.00	216.00	204.00	190.00	189.00	175.00	138.00	168.00							25		
30	153.00	161.00	157.00	152.00	148.00	137.00	134.00	135.00	124.00	130.00	122.00				30		
35	115.00	122.00	126.00	123.00	125.00	118.00	110.00	114.00	112.00	108.00	102.00	99.00			35		
40	96.00	101.00	102.00	104.00	100.00	99.00	96.00	95.00	91.00	86.00	84.00	79.00	78.00		40		
45	78.00	82.00	84.00	85.00	86.00	86.00	82.00	81.00	78.00	74.00	72.00	68.00	67.00		45		
50	65.00	69.00	70.00	71.00	72.00	73.00	71.00	71.00	68.00	64.00	63.00	59.00	58.00		50		
55		58.00	59.00	60.00	61.00	62.00	60.00	61.00	59.00	56.00	55.00	52.00	51.00		55		
60		49.00	50.00	52.00	52.00	53.00	52.00	53.00	51.00	49.00	48.00	45.00	44.00		60		
65		42.40	43.40	45.00	45.00	46.00	45.00	46.00	43.80	42.20	42.60	39.60	38.80		65		
70		36.80	37.80	39.00	39.40	40.20	39.00	39.80	38.00	36.40	37.20	35.00	34.20		70		
75			34.20	34.40	35.40	34.00	34.80	33.00	31.40	32.20	30.80	30.20			75		
80				30.00	30.20	31.20	29.80	30.60	28.80	27.40	28.20	26.60	26.20		80		
85					26.40	26.60	27.40	26.20	27.00	25.20	23.80	24.40	23.00		85		
90						23.40	24.20	23.00	23.80	22.00	20.60	21.40	19.80	19.40		90	
95						20.60	21.40	20.40	21.00	19.20	17.80	18.60	17.00	16.60		95	
100							19.00	17.80	18.60	16.80	15.40	16.00	14.60	14.20		100	
105								16.80	15.60	16.40	14.60	13.20	13.80	12.40	12.00		105
110								14.80	13.80	14.40	12.60	11.20	12.00	10.40	10.00		110
115									12.00	12.60	11.00	9.40	10.20	8.60	8.20		115
120										11.20	9.40	7.80	8.60	7.00	6.60		120
125											7.80	6.40	7.00	5.60	5.20		125
130												5.20	5.80	4.20	3.80		130
135												4.00	4.60			135	

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

Grove GMK6400 The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Main boom

15,4 m - 60 m
(51 ft - 197 ft)

25 000 kg
(55,100 lb)

8,7 m x 8,5 m
(28.5 ft x 27.8 ft)
(100%)

360°



Pounds x 1000

Feet	50.5	66.6	82.6	87.3	98.7	114.8	123.9	130.9	139.9	147.0	163.0	179.1	192.4	196.9	Feet				
10	462.00														10				
15	364.00	366.00													15				
20	270.00	258.00	242.00	224.00	220.00	201.00	157.00								20				
25	182.00	186.00	175.00	162.00	163.00	152.00	138.00	149.00							25				
30	125.00	133.00	136.00	136.00	131.00	125.00	124.00	118.00	116.00	111.00	107.00				30				
35	92.00	100.00	105.00	106.00	107.00	102.00	102.00	97.00	96.00	92.00	89.00	84.00			35				
40	78.00	82.00	84.00	85.00	85.00	85.00	85.00	81.00	80.00	77.00	74.00	70.00	65.00	64.00	40				
45	62.00	66.00	68.00	69.00	70.00	71.00	68.00	68.00	65.00	63.00	59.00	55.00	54.00	45					
50	51.00	55.00	56.00	57.00	58.00	59.00	57.00	58.00	55.00	54.00	51.00	47.00	46.00	50					
55		46.00	47.00	48.00	48.00	49.00	48.00	49.00	47.00	47.00	43.80	40.60	39.60	55					
60		38.40	39.40	40.80	41.00	42.20	40.60	41.60	39.60	40.00	38.00	35.00	34.20	60					
65		27.60	33.40	34.80	35.00	36.00	34.60	35.60	33.60	34.00	33.00	30.40	29.60	65					
70			28.60	29.80	30.20	31.00	29.80	30.60	28.80	29.00	28.00	26.40	25.60	70					
75				25.60	26.00	26.80	25.60	26.40	24.60	24.80	23.80	22.20	21.80	75					
80					22.20	22.40	23.20	22.00	22.80	21.00	21.40	20.20	18.60	18.20	80				
85						19.00	19.20	20.20	18.80	19.60	17.80	18.20	17.20	15.60	15.20	85			
90							16.60	17.40	16.20	17.00	15.20	15.60	14.40	13.00	12.40	90			
95								14.20	15.00	13.80	14.60	12.80	13.20	12.00	10.60	10.20	95		
100									13.00	11.80	12.60	10.80	11.00	10.00	8.40	8.00	100		
105										11.00	10.00	10.60	8.80	9.20	8.00	6.60	6.20	105	
110											9.40	8.20	9.00	7.20	7.40	6.40	5.00	4.40	110
115												6.80	7.40	5.60	6.00	5.00			115
120													6.20	4.40	4.60	3.60			120

15,4 m - 60 m
(51 ft - 197 ft)

15 000 kg
(33,000 lb)

8,7 m x 8,5 m
(28.5 ft x 27.8 ft)
(100%)

360°



Pounds x 1000

Feet	50.5	66.6	82.6	87.3	98.7	114.8	123.9	130.9	139.9	147.0	163.0	179.1	192.4	196.9	Feet	
10	456.00														10	
15	358.00	360.00													15	
20	234.00	220.00	203.00	195.00	185.00	167.00	157.00								20	
25	142.00	152.00	148.00	147.00	141.00	133.00	131.00	129.00							25	
30	95.00	104.00	109.00	111.00	109.00	104.00	103.00	102.00	95.00	91.00	87.00				30	
35	69.00	77.00	81.00	83.00	84.00	83.00	82.00	81.00	77.00	73.00	70.00	66.00			35	
40	58.00	63.00	64.00	66.00	66.00	67.00	67.00	63.00	60.00	58.00	54.00	50.00	49.00		40	
45	46.00	50.00	51.00	53.00	53.00	54.00	54.00	53.00	50.00	48.00	45.00	41.40	40.40		45	
50	36.20	40.20	41.40	42.80	43.20	44.00	44.00	43.80	41.80	40.80	37.80	34.40	33.40		50	
55		32.80	33.80	35.20	35.60	36.60	36.60	36.20	34.20	34.40	31.60	28.60	27.80		55	
60		26.80	27.80	29.20	29.60	30.60	30.60	30.00	28.20	28.60	26.60	23.80	23.00		60	
65		22.00	23.00	24.40	24.60	25.60	25.60	25.20	23.20	23.60	22.40	19.80	19.00		65	
70		18.00	19.00	20.20	20.60	21.60	21.60	21.00	19.20	19.60	18.40	16.20	15.60		70	
75			16.80	17.00	18.00	18.00	17.60	15.80	16.00	15.00	13.40	12.60			75	
80				14.00	14.20	15.00	15.00	114.60	12.80	13.20	12.00	10.60	10.00		80	
85					11.40	11.60	12.40	12.40	12.00	10.20	10.60	9.60	8.00	7.60		85
90						9.40	10.20	9.80	8.00	8.40	7.40	5.80	5.40			90
95							7.40	8.20	8.20	6.00	6.40	5.40	3.80			95
100								6.60	6.60	6.20	4.40	4.60	3.60			100
105									5.00	5.00	4.60					105
110										3.60	3.60					110

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Main boom


15,4 m - 60 m (51 ft - 197 ft)	0 kg (0 lb)	8,7 m x 8,5 m (28.5 ft x 27.8 ft) (100%)	360°											
	Pounds x 1000													
Feet	50.5	66.6	82.6	87.3	98.7	114.8	123.9	130.9	139.9	147.0	163.0	Feet		
10	448.00											10		
15	304.00	266.00										15		
20	140.00	153.00	145.00	143.00	135.00	124.00	122.00					20		
25	80.00	90.00	96.00	97.00	93.00	87.00	86.00	80.00				25		
30	50.00	59.00	64.00	65.00	67.00	63.00	63.00	58.00	57.00	53.00	51.00	30		
35	33.00	40.80	45.00	47.00	50.00	47.00	47.00	43.40	43.00	39.40	38.80	35		
40		28.60	33.20	34.40	37.00	35.80	36.20	33.20	33.00	29.80	29.60	40		
45		20.20	24.40	25.60	28.20	27.60	28.20	25.60	25.80	22.80	22.80	45		
50		14.00	18.00	19.20	21.40	21.00	22.00	19.80	20.20	17.40	17.60	50		
55			13.00	14.20	16.40	15.80	17.00	15.40	15.60	13.20	13.40	55		
60				9.00	10.20	12.40	11.80	12.80	11.40	12.00	9.60	10.00	60	
65					5.80	6.80	9.00	8.60	9.60	8.20	9.00	6.80	7.00	65
70						4.20	6.40	5.80	6.80	5.40	6.20	4.40	4.60	70
75							4.00	3.40	4.40		4.00			75

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

Working range

Main boom and MegaWingLift™

34,9 m - 60 m (51 ft - 197 ft) main boom and MegaWingLift™

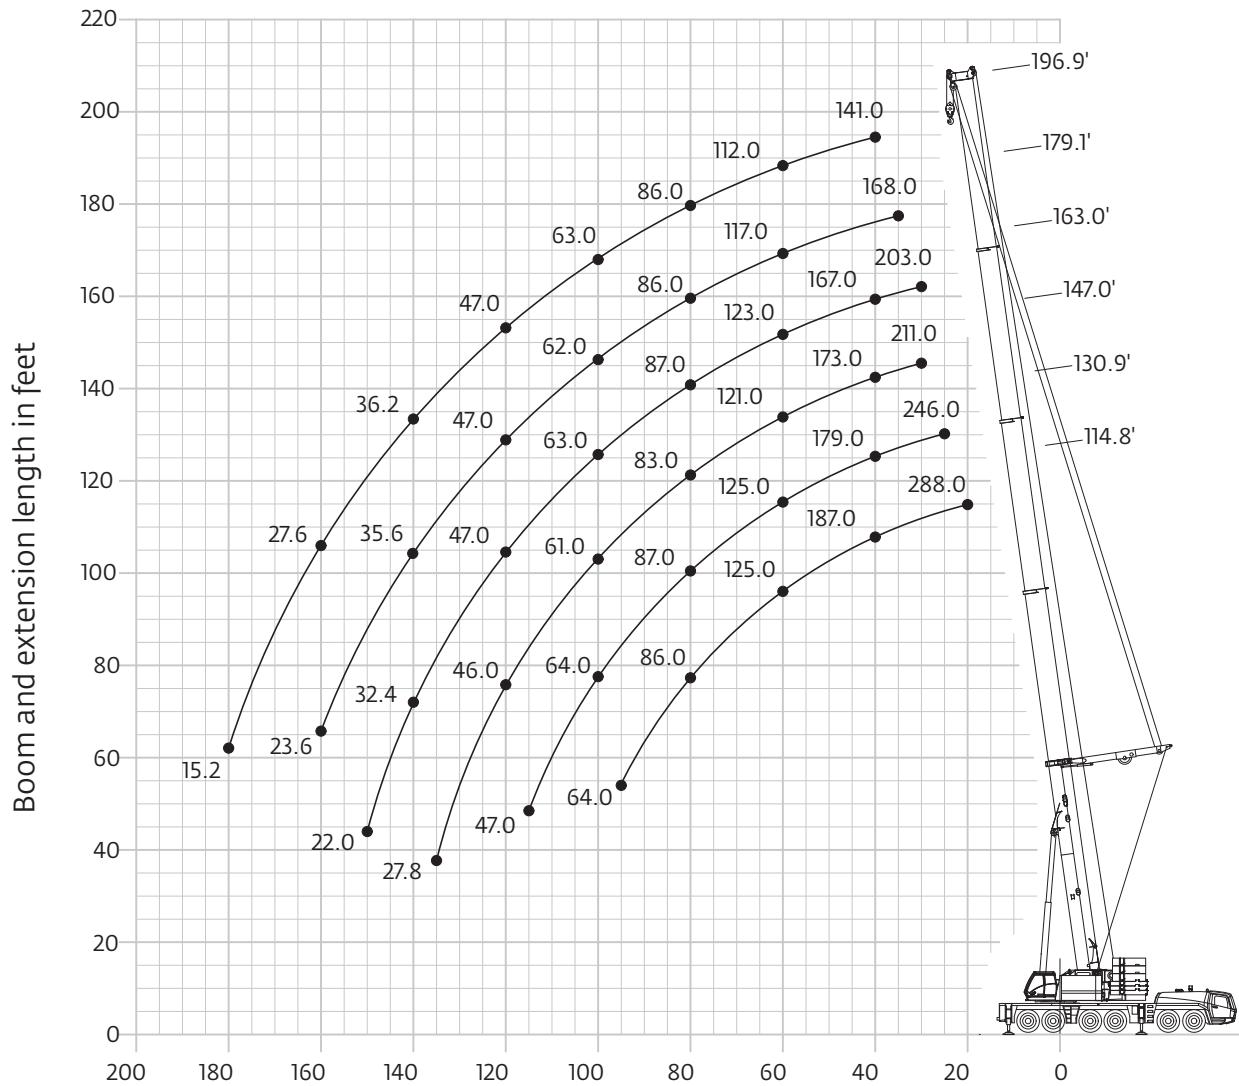

Operating radius in feet from axis of rotation

Hook heights shown in the working diagram do not consider loaded boom deflection.

Load chart

Main boom and MegaWingLift™

 15,4 m - 60 m
(51 ft - 197 ft)

 135 000 kg
(297,600 lb)

 8,7 m x 8,5 m
(28.5 ft x 27.8 ft)
(100%)

 360°



Pounds x 1000

Feet	114.8	130.9	147.0	163.0	179.1	196.9	Feet
25		240.00					25
30	226.00	212.00	206.00	203.00			30
35	204.00	196.00	190.00	184.00	168.00		35
40	187.00	179.00	172.00	167.00	161.00	141.00	40
45	168.00	165.00	158.00	153.00	147.00	132.00	45
50	151.00	152.00	147.00	141.00	135.00	125.00	50
55	137.00	138.00	137.00	131.00	126.00	118.00	55
60	125.00	125.00	125.00	123.00	117.00	112.00	60
65	113.00	114.00	114.00	113.00	110.00	106.00	65
70	103.00	104.00	104.00	104.00	103.00	100.00	70
75	94.00	95.00	95.00	95.00	94.00	94.00	75
80	86.00	87.00	87.00	87.00	86.00	86.00	80
85	79.00	80.00	80.00	80.00	79.00	79.00	85
90	73.00	74.00	74.00	73.00	73.00	73.00	90
95	64.00	68.00	68.00	68.00	67.00	68.00	95
100	64.00	63.00	63.00	63.00	62.00	63.00	100
105	59.00	59.00	58.00	58.00	58.00	58.00	105
110	51.00	55.00	54.00	54.00	54.00	54.00	110
115	47.00	51.00	51.00	50.00	50.00	50.00	115
120		47.00	47.00	47.00	47.00	47.00	120
125		41.40	44.00	43.40	44.00	44.00	125
130		38.00	41.60	40.60	41.20	41.20	130
135			37.60	38.00	38.60	38.60	135
140				32.40	35.60	36.20	140
145				30.60	33.20	33.80	145
150				22.00	29.20	31.80	150
155					25.80	29.80	155
160					23.60	27.60	160
165						24.40	165
170						20.80	170
175						20.40	175
180						15.20	180

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

Grove GMK6400 The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Main boom and MegaWingLift™

 15,4 m - 60 m
(51 ft - 197 ft)

 115 000 kg
(253,500 lb)

 8,7 m x 8,5 m
(28.5 ft x 27.8 ft)
(100%)

 360°



Pounds x 1000

Feet	114.8	130.9	147.0	163.0	179.1	196.9	Feet
20	288.00						20
25	254.00	246.00					25
30	226.00	218.00	211.00	203.00			30
35	204.00	196.00	190.00	184.00	168.00		35
40	185.00	179.00	172.00	167.00	161.00	141.00	40
45	164.00	165.00	158.00	153.00	147.00	132.00	45
50	145.00	146.00	146.00	141.00	135.00	125.00	50
55	129.00	130.00	130.00	130.00	126.00	118.00	55
60	116.00	116.00	116.00	116.00	115.00	112.00	60
65	104.00	105.00	105.00	104.00	103.00	104.00	65
70	94.00	95.00	95.00	94.00	93.00	94.00	70
75	85.00	86.00	86.00	86.00	85.00	85.00	75
80	78.00	79.00	79.00	78.00	77.00	78.00	80
85	72.00	72.00	72.00	72.00	71.00	72.00	85
90	66.00	67.00	66.00	66.00	65.00	66.00	90
95	61.00	61.00	61.00	61.00	60.00	61.00	95
100	57.00	57.00	56.00	55.00	55.00	56.00	100
105	53.00	53.00	52.00	51.00	51.00	52.00	105
110	49.00	49.00	49.00	48.00	48.00	48.00	110
115	46.00	45.00	45.00	45.00	44.00	45.00	115
120		42.40	42.00	41.00	41.60	42.00	120
125		39.60	39.00	38.20	38.80	38.80	125
130		37.00	36.40	35.60	36.20	36.20	130
135			34.00	33.20	33.60	33.60	135
140			31.80	30.80	31.40	31.40	140
145			29.80	28.60	29.40	29.40	145
150			22.00	26.40	27.00	27.00	150
155				24.20	25.00	25.00	155
160				22.20	23.00	23.00	160
165					21.00		165
170						19.40	170
175						17.80	175
180						15.20	180

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Main boom and MegaWingLift™

 15,4 m - 60 m
(51 ft - 197 ft)

 95 000 kg
(209,400 lb)

 8,7 m x 8,5 m
(28.5 ft x 27.8 ft)
(100%)

 360°



Pounds x 1000

Feet	114.8	130.9	147.0	163.0	179.1	196.9	Feet
20	292.00						20
25	254.00	246.00					25
30	226.00	218.00	211.00	203.00			30
35	204.00	196.00	190.00	184.00	168.00		35
40	176.00	176.00	172.00	167.00	161.00	141.00	40
45	152.00	153.00	153.00	151.00	145.00	132.00	45
50	133.00	133.00	133.00	132.00	127.00	124.00	50
55	117.00	118.00	118.00	117.00	113.00	111.00	55
60	104.00	105.00	105.00	104.00	101.00	99.00	60
65	93.00	94.00	94.00	94.00	91.00	89.00	65
70	84.00	85.00	85.00	85.00	82.00	81.00	70
75	76.00	77.00	77.00	77.00	75.00	74.00	75
80	70.00	70.00	70.00	70.00	68.00	67.00	80
85	64.00	64.00	64.00	64.00	62.00	61.00	85
90	58.00	59.00	59.00	59.00	57.00	56.00	90
95	54.00	54.00	54.00	54.00	52.00	52.00	95
100	50.00	50.00	49.00	48.00	48.00	48.00	100
105	46.00	46.00	45.00	43.80	43.80	43.80	105
110	41.80	41.60	41.60	41.00	39.80	40.40	110
115	38.20	38.00	37.40	36.20	37.00	37.00	115
120	34.60	34.20	33.00	33.00	33.80	32.00	120
125	31.60	31.20	31.20	30.00	30.80	30.80	125
130	29.00	28.40	27.20	27.20	28.00	28.00	130
135		25.80	24.60	24.60	25.40	25.40	135
140		23.60	22.40	22.40	23.20	23.20	140
145		21.40	20.20	20.20	21.00	21.00	145
150		19.66	18.20	18.20	19.00	19.00	150
155			16.40	16.40	17.00	17.00	155
160				14.80	15.40	15.40	160
165					13.80	13.80	165
170					12.20	12.20	170
175					10.80	10.80	175
180					9.60	9.60	180

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

Grove GMK6400 The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Main boom and MegaWingLift™

 15,4 m - 60 m
(51 ft - 197 ft)

 75 000 kg
(165,300 lb)

 8,7 m x 8,5 m
(28.5 ft x 27.8 ft)
(100%)

 360°



Pounds x 1000

Feet	114.8	130.9	147.0	163.0	179.1	196.9	Feet
20	292.00						20
25	254.00	246.00					25
30	226.00	218.00	211.00	199.00			30
35	189.00	186.00	178.00	170.00	162.00		35
40	159.00	157.00	151.00	145.00	139.00	135.00	40
45	136.00	135.00	130.00	125.00	120.00	117.00	45
50	119.00	118.00	114.00	110.00	105.00	103.00	50
55	105.00	104.00	100.00	97.00	93.00	91.00	55
60	93.00	92.00	89.00	86.00	83.00	81.00	60
65	83.00	82.00	80.00	77.00	74.00	72.00	65
70	73.00	74.00	72.00	69.00	66.00	65.00	70
75	64.00	65.00	65.00	62.00	60.00	59.00	75
80	57.00	58.00	58.00	56.00	54.00	53.00	80
85	51.00	52.00	52.00	51.00	49.00	48.00	85
90	46.00	47.00	46.00	46.00	44.00	43.80	90
95	40.80	41.80	41.60	41.00	40.00	39.80	95
100	37.60	37.40	36.80	35.80	36.20	36.20	100
105	33.80	33.60	33.00	31.80	32.80	32.80	105
110	30.40	30.20	29.60	28.40	29.40	29.40	110
115	27.40	27.20	26.60	25.40	26.20	26.20	115
120		24.40	23.80	22.60	23.40	23.40	120
125		21.80	21.20	20.00	20.80	20.80	125
130		19.60	19.00	17.80	18.60	18.60	130
135			16.80	15.60	16.40	16.40	135
140			14.80	13.60	14.40	14.40	140
145			13.00	11.80	12.60	12.60	145
150			11.40	10.20	10.80	10.80	150
155				8.60	9.20	9.20	155
160					7.20	7.80	160
165						6.40	165
170						5.20	170
175						4.00	175

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Main boom and MegaWingLift™

 15,4 m - 60 m
(51 ft - 197 ft)

 55 000 kg
(121,200 lb)

 8,7 m x 8,5 m
(28.5 ft x 27.8 ft)
(100%)

 360°



Pounds x 1000

Feet	114.8	130.9	147.0	163.0	179.1	196.9	Feet
20	292.00						20
25	244.00	230.00					25
30	192.00	184.00	175.00	166.00			30
35	157.00	152.00	145.00	138.00	132.00		35
40	131.00	127.00	122.00	117.00	112.00	108.00	40
45	112.00	109.00	105.00	101.00	96.00	93.00	45
50	97.00	94.00	91.00	87.00	83.00	81.00	50
55	84.00	82.00	79.00	76.00	73.00	71.00	55
60	72.00	72.00	70.00	67.00	64.00	63.00	60
65	62.00	63.00	62.00	60.00	57.00	56.00	65
70	54.00	55.00	55.00	53.00	50.00	50.00	70
75	47.00	48.00	48.00	47.00	45.00	44.00	75
80	41.00	42.20	42.00	41.60	39.80	39.40	80
85	36.00	37.00	36.80	36.40	35.20	35.20	85
90	31.40	32.60	32.40	31.80	30.80	31.60	90
95	27.60	29.60	28.40	27.80	26.80	27.60	95
100		25.00	25.00	24.40	23.20	24.20	100
105		22.00	21.80	21.20	20.00	21.00	105
110			19.20	19.00	18.40	17.20	110
115			16.60	16.40	15.80	14.80	115
120				14.20	13.60	12.40	120
125				12.00	11.60	10.40	125
130				10.20	9.60	8.40	130
135					7.80	6.60	135
140					6.20	5.00	140
145					4.80	3.60	145

 15,4 m - 60 m
(51 ft - 197 ft)

 45 000 kg
(99,200 lb)

 8,7 m x 8,5 m
(28.5 ft x 27.8 ft)
(100%)

 360°



Pounds x 1000

Feet	114.8	130.9	147.0	163.0	179.1	196.9	Feet
20	292.00						20
25	219.00	208.00					25
30	172.00	165.00	157.00	149.00			30
35	140.00	135.00	129.00	123.00	117.00		35
40	117.00	113.00	108.00	104.00	98.00	96.00	40
45	99.00	96.00	93.00	89.00	84.00	82.00	45
50	85.00	83.00	80.00	76.00	73.00	71.00	50
55	72.00	72.00	69.00	66.00	63.00	62.00	55
60	61.00	62.00	61.00	58.00	55.00	54.00	60
65	52.00	53.00	53.00	51.00	48.00	48.00	65
70	45.00	46.00	46.00	45.00	42.60	42.00	70
75	38.60	39.80	39.60	39.20	37.60	37.20	75
80	33.40	34.40	34.20	33.80	32.60	32.80	80
85	28.80	29.80	29.60	29.20	28.00	28.80	85
90	24.80	25.80	25.60	25.00	24.00	24.80	90
95	21.20	22.20	22.00	21.60	20.40	21.20	95
100		19.00	19.00	18.40	17.20	18.00	100
105		16.20	16.00	15.60	14.40	15.20	105
110		13.80	13.60	13.00	11.80	12.80	110
115		11.60	11.20	10.80	9.60	10.80	115
120			9.20	8.60	7.60	8.40	120
125			7.40	6.80	5.60	6.40	125
130				5.60	5.00	4.00	130
135					3.60		135

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

Grove GMK6400 The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Main boom and MegaWingLift™

 15,4 m - 60 m
(51 ft - 197 ft)

 35 000 kg
(77,100 lb)

 8,7 m x 8,5 m
(28.5 ft x 27.8 ft)
(100%)

 360°



Pounds x 1000

Feet	114.8	130.9	147.0	163.0	179.1	196.9	Feet
20	258.00						20
25	192.00	182.00					25
30	150.00	144.00	137.00	129.00			30
35	122.00	117.00	112.00	107.00	101.00		35
40	101.00	98.00	93.00	89.00	84.00	82.00	40
45	85.00	83.00	79.00	76.00	72.00	70.00	45
50	71.00	71.00	68.00	65.00	61.00	60.00	50
55	59.00	60.00	59.00	56.00	53.00	52.00	55
60	49.00	51.00	51.00	48.00	46.00	45.00	60
65	41.60	42.80	42.60	42.20	39.60	39.00	65
70	35.20	36.20	36.20	35.60	34.20	33.80	70
75	29.60	30.80	30.60	30.20	29.00	29.40	75
80	25.00	26.00	26.00	25.40	24.20	25.20	80
85	21.00	22.00	21.80	21.40	20.20	21.20	85
90	17.40	18.40	18.40	17.80	16.60	17.60	90
95	14.20	15.40	15.20	14.60	13.60	14.40	95
100	12.60	12.40	12.00	10.80	11.60		100
105	10.20	10.00	9.40	8.20	9.20		105
110	8.00	7.80	7.20	6.00	6.80		110
115	6.00	5.80	5.20	4.00	4.80		115
120		4.00					120


THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Working range

Lattice extension

Main boom and lattice extension

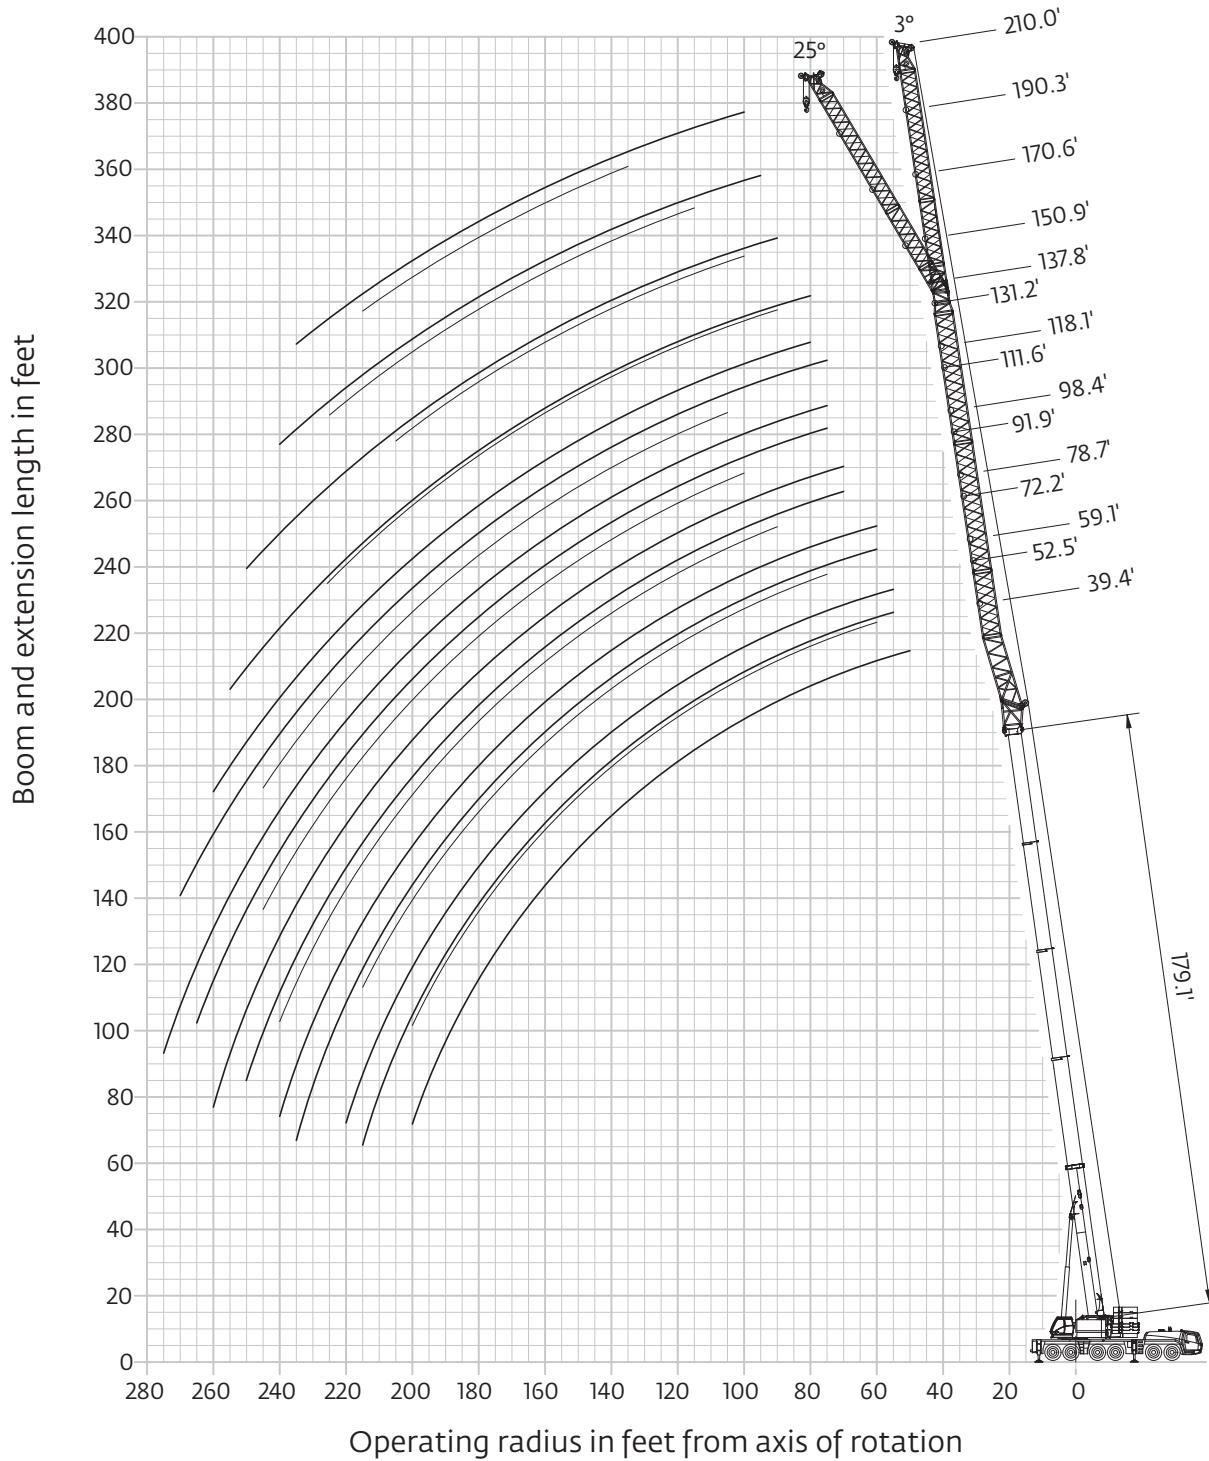

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

Grove GMK6400 The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Lattice extension

						Pounds x 1000						
49,69 m (163 ft) 80°	12 m - 64 m (39.4 ft - 210.0 ft) 3°	135 000 kg (297,600 lb)	8,7 m x 8,5 m (28.5 ft x 27.9 ft) (100%)		360°							
Feet	39.4	52.5	72.2	91.9	111.6	131.2	150.9	170.6	190.3	210.0	Feet	
45	76.00										45	
50	74.00	66.00									50	
55	71.00	64.00	53.00								55	
60	67.00	62.00	53.00	40.60							60	
65	63.00	59.00	52.00	39.40							65	
70	59.00	55.00	50.00	38.20	32.20						70	
75	56.00	52.00	48.00	37.20	31.20	26.00	22.80				75	
80	52.00	49.00	45.00	36.00	30.20	25.20	22.00	18.60			80	
85	49.00	46.00	43.60	35.00	29.40	24.40	21.40	18.00			85	
90	46.00	43.00	41.40	34.00	28.40	23.60	20.60	17.40	15.00		90	
95	43.20	40.60	39.40	33.00	27.40	23.00	20.00	16.80	14.40	12.60	95	
100	40.80	38.20	37.20	32.20	26.40	22.20	19.40	16.20	14.00	12.20	100	
105	38.60	36.00	35.20	31.20	25.60	21.60	18.80	15.80	13.40	11.80	105	
110	36.40	33.80	33.00	30.40	24.80	21.00	18.20	15.20	13.00	11.40	110	
115	34.40	31.80	31.20	29.20	24.20	20.40	17.60	14.60	12.60	11.00	115	
120	32.60	30.00	29.40	28.00	23.60	19.80	17.00	14.20	12.00	10.60	120	
125	30.80	28.20	27.60	26.60	23.00	19.20	16.40	13.60	11.60	10.00	125	
130	29.00	26.20	25.80	25.40	22.20	18.60	15.80	13.20	11.20	9.80	130	
135	27.40	24.80	24.40	24.20	21.80	18.20	15.40	12.80	10.80	9.40	135	
140	25.80	23.40	23.20	23.00	21.20	17.80	15.00	12.40	10.40	9.00	140	
145	24.20	22.00	21.80	21.80	20.60	17.20	14.40	11.80	10.00	8.60	145	
150	22.80	20.60	20.60	20.40	20.00	16.80	14.00	11.40	9.60	8.20	150	
155	21.40	19.60	19.40	19.40	19.20	16.40	13.60	11.20	9.40	8.00	155	
160	20.20	18.40	18.40	18.40	18.20	16.00	13.20	10.80	9.00	7.60	160	
165	19.00	17.20	17.20	17.40	17.20	15.60	12.80	10.40	8.60	7.40	165	
170	18.00	16.20	16.20	16.40	16.20	15.20	12.40	10.00	8.20	7.00	170	
175	17.00	15.40	15.40	15.60	15.40	14.60	12.00	9.60	8.00	6.80	175	
180	16.00	14.40	14.60	14.60	14.60	14.00	11.60	9.40	7.80	6.40	180	
185	15.00	13.40	13.80	13.80	13.80	13.40	11.40	9.00	7.40	6.20	185	
190	11.00	12.60	12.80	13.00	13.00	12.80	11.00	8.80	7.20	6.00	190	
195		11.60	12.00	12.20	12.20	12.20	10.60	8.40	6.80	5.80	195	
200			11.20	11.40	11.40	11.60	10.20	8.20	6.60	5.40	200	
205				10.40	10.80	10.80	11.00	9.60	8.00	6.40	5.20	205
210				9.80	10.20	10.20	10.20	9.00	7.60	6.20	5.00	210
215				9.00	9.40	9.40	9.60	8.40	7.40	6.00	4.80	215
220				5.40	8.80	8.80	9.00	7.80	7.00	5.60	4.60	220
225					8.20	8.20	8.40	7.20	6.60	5.40	4.40	225
230					7.60	7.80	7.80	6.60	6.00	5.20	4.20	230
235					6.60	7.20	7.40	6.20	5.60	5.00	4.00	235
240					6.60	6.80	5.80	5.00	4.80	3.80	240	
245					6.00	6.40	5.20	4.60	4.40	3.60	245	
250					5.60	5.80	4.80	4.00	4.00		250	
255					3.80	5.40	4.20	3.60	3.60		255	
260						4.80	3.80				260	
265						4.40					265	
270						4.00					270	

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Lattice extension

	49,69 m (163 ft) 80°		16 m - 64 m (52.5 ft - 210.0 ft) 25°		135 000 kg (297,600 lb)		8,7 m x 8,5 m (28.5 ft x 27.9 ft) (100%)		360°	
Pounds x 1000										
Feet	52.5	72.2	91.9	111.6	131.2	150.9	170.6	190.3	210.0	Feet
55	57.00									55
60	54.00									60
65	51.00									65
70	49.00	41.80								70
75	46.00	39.80								75
80	43.60	38.00	30.20			20.40				80
85	41.00	36.20	29.60			20.40				85
90	38.40	34.60	29.20			20.20				90
95	35.80	33.00	28.40	21.20		19.60	15.60			95
100	33.20	31.20	27.40	20.60	16.80	19.00	15.60			100
105	31.20	29.80	26.20	20.20	16.20	18.40	15.20	12.00		105
110	29.20	28.20	25.20	20.00	15.80	17.80	14.80	12.00		110
115	27.20	26.60	24.20	19.60	15.60	17.20	14.20	12.00		115
120	25.20	25.00	23.20	19.20	15.20	16.80	13.80	11.60	9.20	120
125	23.40	23.60	22.40	18.80	14.80	16.20	13.40	11.20	9.20	125
130	22.20	22.20	21.40	18.40	14.40	15.60	13.00	10.80	9.20	130
135	20.80	20.80	20.40	17.80	14.20	15.00	12.60	10.40	9.00	135
140	19.40	19.40	19.40	17.40	14.00	14.40	12.20	5.00	8.60	140
145	18.00	18.20	18.40	16.80	13.60	13.60	11.60	9.80	8.40	145
150	16.80	17.20	17.40	16.40	13.40	13.00	11.20	9.60	8.00	150
155	15.80	16.20	16.40	15.80	13.00	12.40	10.80	9.20	7.80	155
160	14.80	15.00	15.40	15.00	12.80	11.80	10.40	8.80	7.60	160
165	13.80	14.00	14.40	14.20	12.60	11.20	10.00	8.60	7.40	165
170	12.80	13.00	13.60	13.60	12.40	10.60	9.60	8.20	7.00	170
175	11.80	12.20	12.80	12.80	12.20	10.00	9.20	8.00	6.80	175
180	11.00	11.40	12.00	12.00	12.00	9.40	8.80	7.80	6.60	180
185	10.20	10.60	11.00	11.40	11.80	9.00	8.20	7.40	6.20	185
190	9.40	9.80	10.20	10.60	11.20	8.40	7.80	7.20	6.00	190
195	9.00	9.60	10.00	10.60	7.80	7.40	6.80	5.80		195
200		8.40	9.00	9.20	10.20	7.20	7.00	6.40	5.40	200
205			8.20	8.40	9.60	6.60	6.60	6.00	5.20	205
210			7.60	7.80	9.00	6.00	6.00	5.80	5.00	210
215			6.80	7.20	8.60	5.60	5.60	5.40	4.60	215
220			6.20	6.60	8.00	5.00	5.20	5.00	4.40	220
225				6.00	7.40	4.40	4.60	4.60	4.00	225
230				5.40	6.80	3.80	4.20	4.40	3.80	230
235				4.80	6.20		3.60	3.80		235
240				4.40	5.60					240
245					5.20					245

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

Grove GMK6400 The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Lattice extension

											
54,59 m (179.1 ft) 80°	12 m - 64 m (39.4 ft - 210.0 ft) 3°	135 000 kg (297,600 lb)	8,7 m x 8,5 m (28.5 ft x 27.9 ft) (100%)	360°							
		Pounds x 1000									
Feet	39.4	52.5	72.2	91.9	111.6	131.2	150.9	170.6	190.3	210.0	Feet
50	62.00										50
55	61.00	53.00									55
60	59.00	53.00	42.80								60
65	57.00	51.00	42.80								65
70	54.00	49.00	42.80	35.80							70
75	52.00	47.00	41.40	35.00	29.80	24.40					75
80	49.00	45.00	39.80	34.20	29.20	23.80	19.80				80
85	46.00	42.80	38.20	33.60	28.40	23.20	19.80				85
90	43.80	40.80	36.60	32.80	27.40	22.60	19.20	15.80			90
95	41.40	38.60	35.20	31.60	26.60	22.00	18.80	15.60	13.20		95
100	39.00	36.40	33.60	30.40	26.00	21.40	18.40	15.20	12.80	11.00	100
105	37.00	34.40	32.20	29.20	25.40	21.00	17.80	14.80	12.40	10.80	105
110	34.80	32.40	30.80	28.00	24.80	20.40	17.40	14.40	12.20	10.40	110
115	33.00	30.60	29.20	26.80	24.00	20.00	16.80	14.00	11.80	10.20	115
120	31.00	28.80	27.80	25.60	23.00	19.40	16.40	13.60	11.40	9.80	120
125	29.20	27.00	26.20	24.20	22.20	19.00	16.00	13.20	11.00	9.40	125
130	27.40	25.20	24.60	23.00	21.20	18.40	15.40	12.80	10.80	9.20	130
135	26.00	23.80	23.40	22.00	20.40	18.00	15.00	12.40	10.40	8.80	135
140	24.60	22.40	22.20	21.00	19.60	17.60	14.60	12.00	10.00	8.60	140
145	23.20	21.20	21.00	20.20	18.80	17.00	14.20	11.60	9.60	8.20	145
150	22.00	20.00	19.60	19.20	17.80	16.60	13.80	11.20	9.40	8.00	150
155	20.80	18.80	18.60	18.40	17.20	16.00	13.20	11.00	9.00	7.60	155
160	19.60	17.80	17.60	17.40	16.40	15.20	12.80	10.60	8.80	7.40	160
165	18.60	16.60	16.60	16.60	15.80	14.60	12.20	10.20	8.40	7.20	165
170	17.60	15.60	15.60	15.60	15.00	14.00	11.60	10.00	8.20	6.80	170
175	16.60	14.80	14.80	14.80	14.40	13.40	11.20	9.40	8.00	6.60	175
180	15.80	14.00	14.00	14.00	13.60	12.80	10.60	9.00	7.60	6.40	180
185	14.80	13.00	13.20	13.20	13.00	12.40	10.00	8.60	7.40	6.20	185
190	14.00	12.20	12.20	12.40	12.20	11.80	9.60	8.20	7.20	6.00	190
195	13.20	11.40	11.40	11.60	11.60	11.20	9.00	7.80	6.80	5.60	195
200	12.20	10.60	10.80	11.00	11.00	10.80	8.60	7.20	6.40	5.40	200
205	9.80	10.00	10.20	10.20	10.20	10.20	8.20	6.80	6.00	5.20	205
210	9.20	9.40	9.60	9.60	9.60	9.60	7.80	6.40	5.80	5.00	210
215	6.60	8.80	9.00	9.00	9.00	9.00	7.40	6.00	5.40	4.80	215
220		8.00	8.40	8.40	8.40	8.40	7.00	5.60	5.00	4.60	220
225		7.40	7.80	7.80	7.80	7.80	6.60	5.20	4.60	4.20	225
230		6.80	7.20	7.20	7.40	7.40	6.20	5.00	4.40	4.00	230
235		3.60	6.60	6.80	6.80	6.80	5.80	4.60	4.00	3.60	235
240			6.00	6.20	6.40	5.20	4.20	3.60			240
245			5.60	5.80	5.80	4.80	4.00				245
250			4.60	5.20	5.40	4.40	3.40				250
255				4.80	4.80	3.80					255
260				4.20	4.40						260
265				3.80	4.00						265
270					3.60						270

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Lattice extension

Feet	52.5	72.2	91.9	111.6	131.2	150.9	170.6	190.3	210.0	Feet
60	46.00									60
65	44.00									65
70	42.00									70
75	40.00	35.40								75
80	38.00	33.80								80
85	36.20	32.40								85
90	34.20	30.80	27.60			18.20				90
95	32.40	29.20	26.00			18.20				95
100	30.40	27.60	24.80	20.20		17.80	13.80			100
105	28.60	26.20	23.80	20.00	15.20	17.20	13.80			105
110	26.60	25.00	22.80	19.60	15.20	16.60	13.80			110
115	25.20	24.00	21.80	19.40	15.20	16.00	13.60	10.60		115
120	23.60	22.80	20.80	18.80	15.00	15.20	13.20	10.60		120
125	22.00	21.80	19.80	18.00	14.60	14.60	12.80	10.60		125
130	20.60	20.80	19.00	17.40	14.40	13.80	12.40	10.40		130
135	19.00	19.60	18.20	16.60	14.20	13.20	12.00	10.00	8.20	135
140	17.80	18.60	17.40	16.00	13.80	12.40	11.40	9.80	8.20	140
145	16.80	17.40	16.60	15.20	13.60	11.80	10.80	9.60	8.00	145
150	15.60	16.40	15.80	14.60	13.20	11.40	10.40	9.20	7.80	150
155	14.60	15.40	15.20	14.00	12.80	10.80	9.80	8.80	7.60	155
160	13.40	14.40	14.40	13.40	12.40	10.20	9.20	8.40	7.40	160
165	12.40	13.60	13.60	12.80	11.80	9.60	8.80	8.00	7.20	165
170	11.60	12.60	12.80	12.20	11.40	9.00	8.40	7.80	6.80	170
175	10.80	11.80	12.20	11.60	10.80	8.60	8.00	7.40	6.40	175
180	10.00	10.80	11.40	11.20	10.40	8.20	7.40	6.80	6.00	180
185	9.00	10.00	10.60	10.60	10.00	7.60	7.00	6.40	5.60	185
190	8.20	9.40	9.80	10.00	9.40	7.20	6.60	6.00	5.20	190
195	7.60	8.60	9.20	9.40	9.00	6.80	6.20	5.60	5.00	195
200	7.00	7.80	8.40	8.80	8.60	6.40	5.80	5.20	4.60	200
205		7.20	7.80	8.00	8.20	6.00	5.40	4.80	4.20	205
210		6.60	7.20	7.40	7.80	5.40	5.00	4.40	3.80	210
215		6.00	6.60	6.80	7.20	5.00	4.60	4.20	3.60	215
220			6.00	6.20	6.60	4.40	4.20	3.80		220
225			5.40	5.60	6.00	4.00	3.80	3.40		225
230			4.80	5.00	5.60					230
235			4.20	4.60	5.00					235
240			3.60	4.00	4.40					240
245					3.40	4.00				


THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

Grove GMK6400 The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Working range

Lattice extension

Main boom and lattice extension

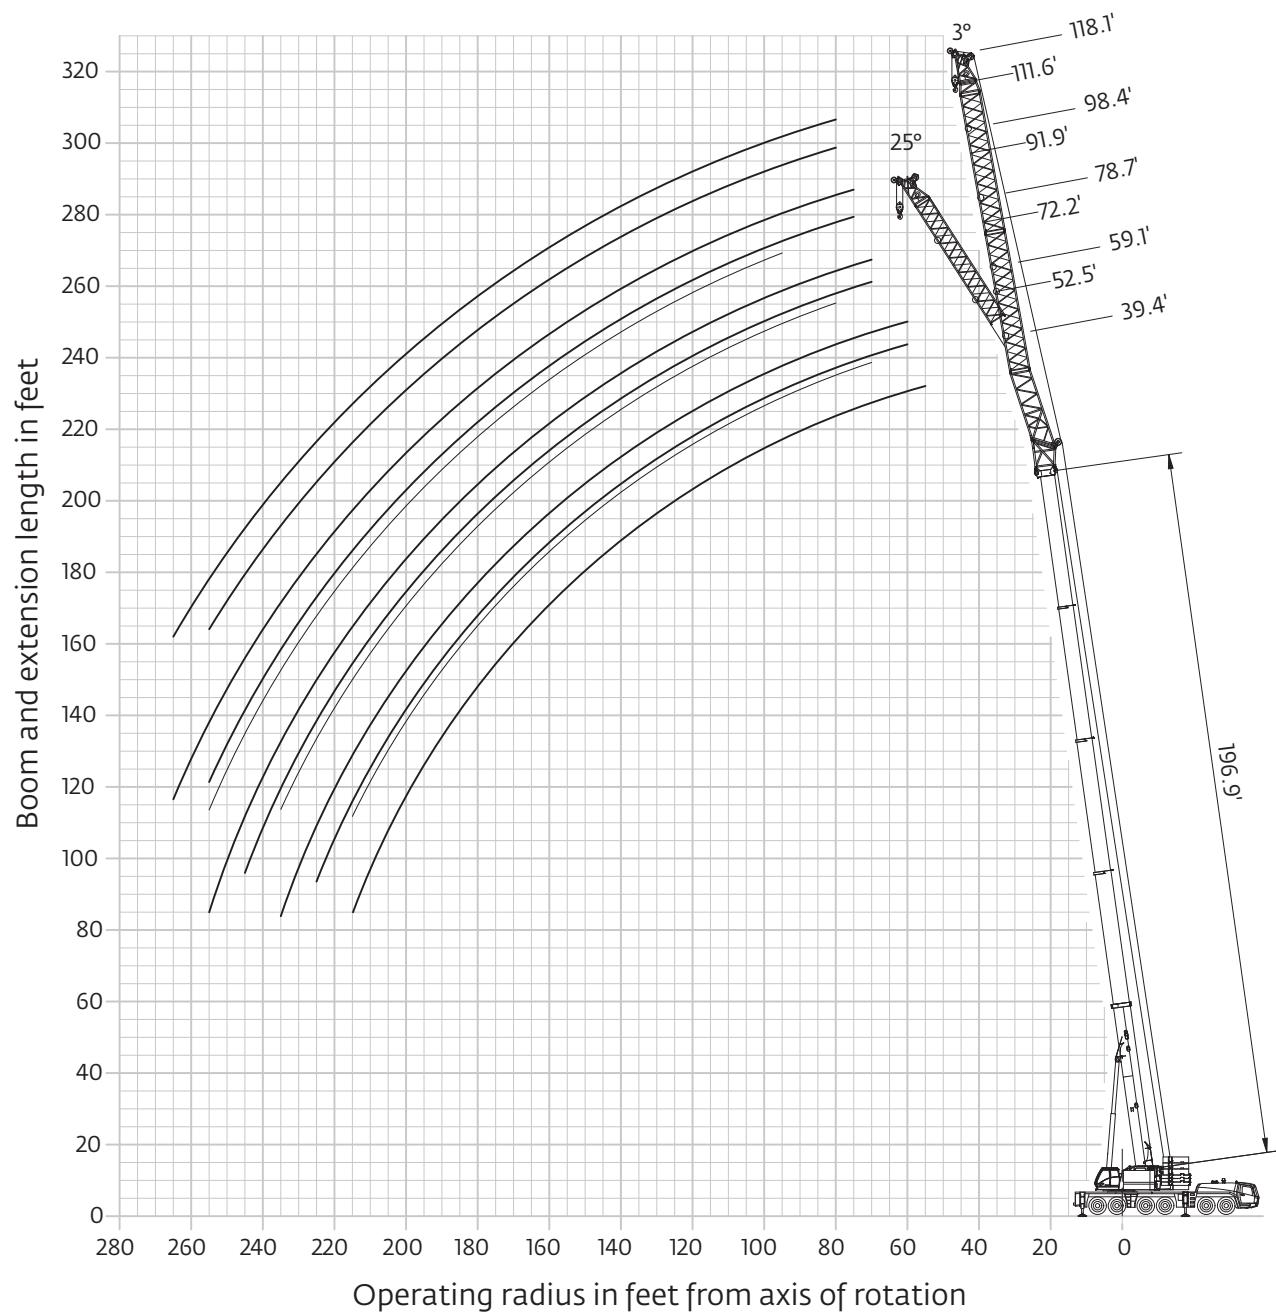

Hook heights shown in the working diagram do not consider loaded boom deflection.

Load chart

Lattice extension

 60,00 m
(196.9 ft)
80°

 12 m - 36 m
(39.4 ft - 118.1 ft)
3°

 135 000 kg
(297,600 lb)

 8,7 m x 8,5 m
(28.5 ft x 27.9 ft)
(100%)

 360°

 Pounds x 1000

Feet	39.4	52.5	52.5/ 25°	72.2	72.2/ 25°	91.9	91.9/ 25°	111.6	118.1	Feet
55	49.00									55
60	49.00	41.80								60
65	49.00	41.80								65
70	49.00	41.80	41.80	34.20						70
75	47.00	41.80	40.40	34.20		28.60				75
80	45.00	40.80	39.00	34.20	34.20	28.60		23.40	22.40	80
85	42.80	39.20	37.60	34.20	33.40	28.60		23.40	22.40	85
90	40.60	37.40	36.00	33.60	32.20	28.60		23.40	22.40	90
95	38.40	35.60	34.60	32.40	31.00	28.60	26.40	23.40	22.40	95
100	36.40	33.60	33.00	31.00	29.80	27.80	26.00	23.40	22.40	100
105	34.40	31.80	31.20	30.00	28.40	26.60	25.40	23.40	22.40	105
110	32.40	30.00	29.20	28.80	27.20	25.40	24.40	23.00	22.40	110
115	30.60	28.20	27.40	27.40	26.00	24.40	23.60	22.20	22.20	115
120	28.80	26.60	25.80	25.80	25.00	23.60	22.80	21.40	21.40	120
125	27.20	24.80	24.40	24.20	24.00	22.60	21.80	20.60	20.60	125
130	25.40	23.20	23.20	22.80	23.00	21.60	21.00	19.80	19.80	130
135	24.00	21.80	21.80	21.40	22.20	20.80	20.20	19.00	19.20	135
140	22.80	20.60	20.40	20.40	21.20	19.80	19.40	18.40	18.40	140
145	21.40	19.40	19.20	19.20	20.00	18.80	18.60	17.60	17.80	145
150	20.20	18.20	18.00	18.00	19.00	18.00	17.80	16.80	17.00	150
155	19.20	17.20	17.00	17.00	17.80	17.00	17.00	16.00	16.40	155
160	18.00	16.00	16.00	16.00	16.80	16.00	16.40	15.40	15.60	160
165	17.00	15.00	15.00	15.00	15.80	15.00	15.60	14.80	15.00	165
170	16.00	14.20	14.00	14.00	14.80	14.20	14.80	14.00	14.40	170
175	15.20	13.20	13.00	13.20	14.00	13.40	14.00	13.20	13.80	175
180	14.40	12.40	12.20	12.40	13.20	12.60	13.40	12.60	13.20	180
185	13.40	11.60	11.40	11.60	12.40	11.80	12.60	11.80	12.40	185
190	12.60	10.80	10.60	10.80	11.40	11.00	11.80	11.00	11.80	190
195	11.80	10.00	9.80	10.00	10.60	10.40	11.20	10.40	11.20	195
200	11.00	9.20	9.00	9.40	10.00	9.60	10.40	9.60	10.60	200
205	10.40	8.60	8.20	8.80	9.20	9.00	9.80	9.00	10.00	205
210	9.60	7.80	7.60	8.00	8.60	8.40	9.00	8.40	9.40	210
215	9.00	7.20	7.00	7.40	8.00	7.60	8.40	7.80	8.80	215
220	6.60		6.80	7.20	7.00	7.80	7.20	8.20	220	
225	6.00		6.20	6.60	6.40	7.20	6.60	7.60	225	
230			5.60	6.00	6.00	6.60	6.00	7.00	230	
235			5.20	5.40	5.40	6.00	5.60	6.60	235	
240			4.60		5.00	5.40	5.00	6.00	240	
245			4.20		4.40	4.80	4.60	5.60	245	
250					4.00	4.40	4.00	5.00	250	
255					3.60	3.80	3.60	4.60	255	
260								4.20	260	
265								3.80	265	


THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

Grove GMK6400 The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Working range

Lattice extension and MegaWingLift™

Main boom, lattice extension and MegaWingLift™

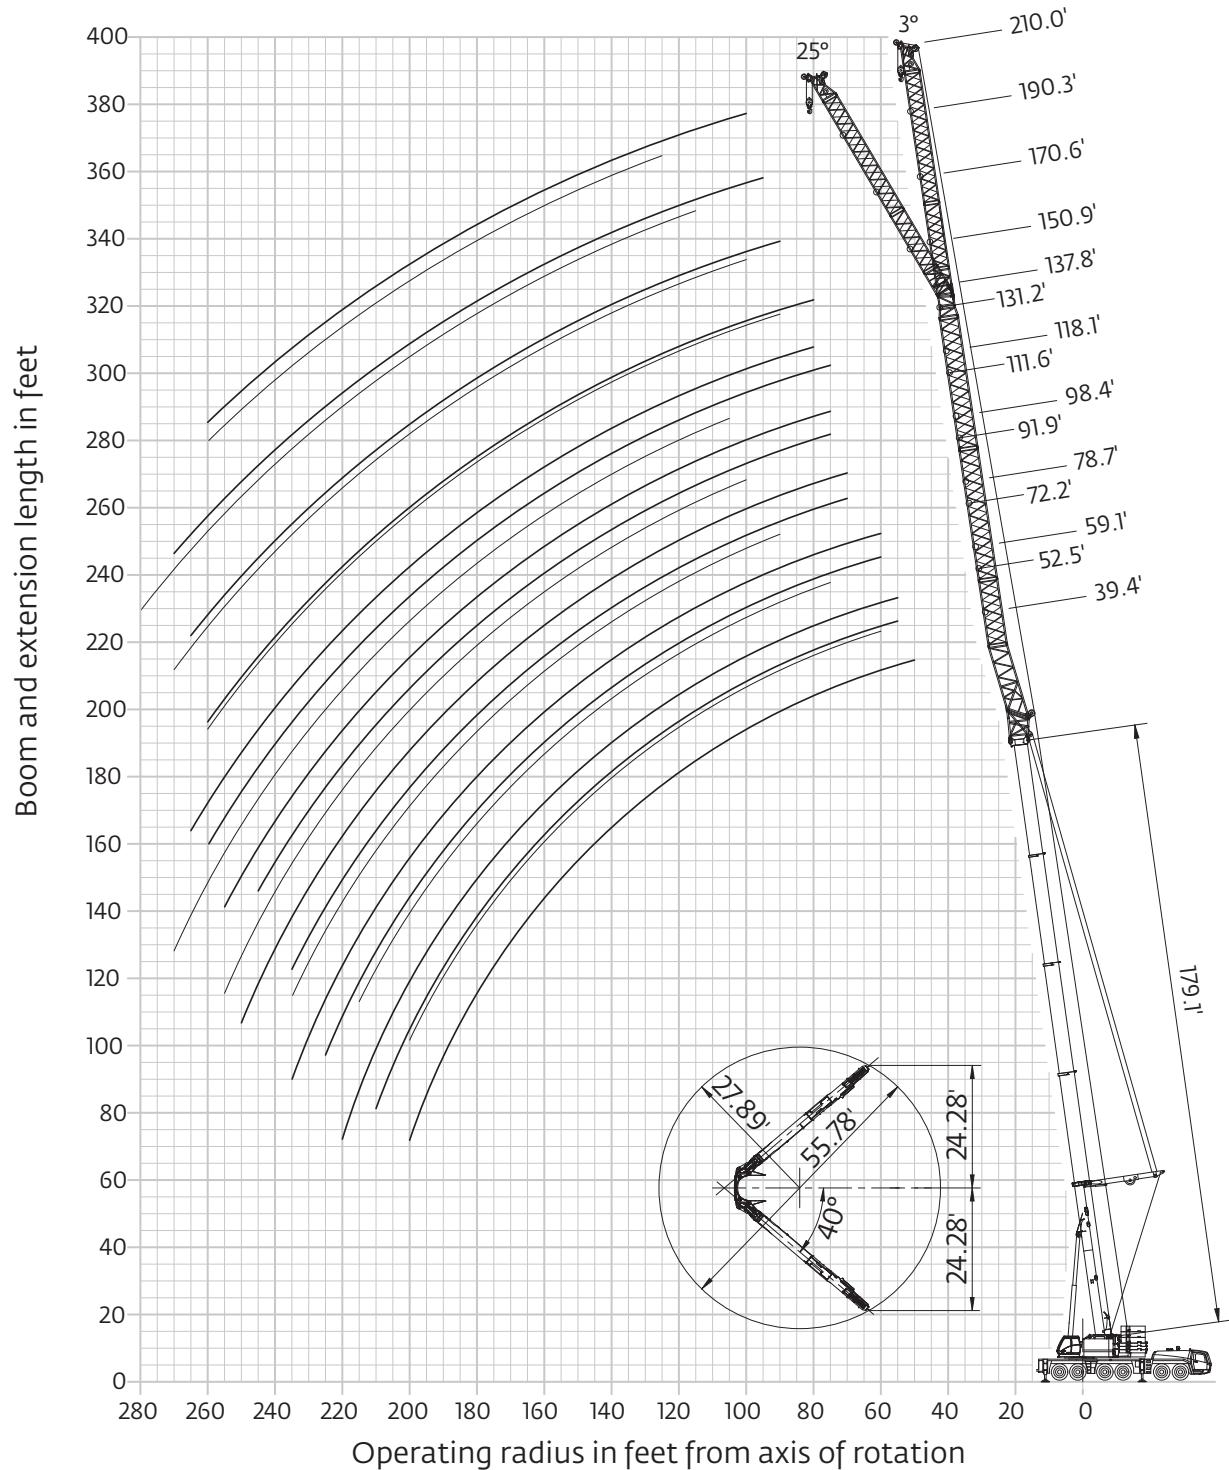

Hook heights shown in the working diagram do not consider loaded boom deflection.

Load chart

Lattice extension and MegaWingLift™

						Pounds x 1000					
Feet	39.4	52.5	72.2	91.9	111.6	131.2	150.9	170.6	190.3	210.0	Feet
45	127.00										45
50	119.00	104.00									50
55	112.00	100.00	73.00								55
60	106.00	96.00	70.00	53.00							60
65	99.00	91.00	68.00	51.00							65
70	93.00	86.00	65.00	49.00	39.80						70
75	87.00	82.00	63.00	47.00	38.20	32.00	28.00				75
80	82.00	78.00	61.00	45.00	36.80	30.80	26.20	22.80			80
85	77.00	73.00	59.00	43.80	35.60	29.60	25.00	21.60			85
90	70.00	69.00	57.00	42.40	34.20	28.20	24.00	20.60	18.20		90
95	65.00	64.00	55.00	41.20	33.00	26.80	23.00	19.80	17.40	15.00	95
100	60.00	59.00	53.00	39.80	31.80	25.60	22.00	18.80	16.60	14.40	100
105	55.00	55.00	51.00	38.60	30.60	24.60	21.00	18.20	16.00	13.80	105
110	51.00	50.00	50.00	37.40	29.40	23.80	20.20	17.40	15.20	13.20	110
115	47.00	47.00	48.00	36.40	28.20	23.00	19.40	16.80	14.60	12.60	115
120	43.60	43.20	45.00	35.40	27.00	22.40	18.80	16.00	14.00	12.20	120
125	40.40	40.00	42.00	34.60	26.20	21.60	18.20	15.60	13.40	11.60	125
130	37.60	37.20	39.20	33.60	25.60	20.80	17.60	15.00	12.80	11.20	130
135	35.00	34.40	36.40	32.60	24.80	20.20	16.80	14.40	12.40	10.60	135
140	32.40	32.00	33.80	31.80	24.20	19.80	16.20	14.00	11.80	10.20	140
145	30.20	29.60	31.60	30.80	23.40	19.20	15.60	13.40	11.40	9.80	145
150	28.00	27.60	29.40	30.00	22.80	18.60	15.20	13.00	11.00	9.40	150
155	26.00	25.40	27.40	29.00	22.20	18.00	14.80	12.40	10.40	9.00	155
160	24.00	23.60	25.40	27.20	21.60	17.60	14.40	12.00	10.00	8.80	160
165	21.20	21.60	23.60	25.40	21.20	17.00	13.80	11.60	9.60	8.40	165
170	18.20	19.60	22.00	23.60	20.60	16.60	13.40	11.20	9.20	8.00	170
175	15.00	17.00	20.20	22.00	20.20	16.20	13.00	11.00	9.00	7.60	175
180	14.40	14.20	18.40	20.60	19.80	15.80	12.40	10.60	8.60	7.40	180
185	10.40	11.40	16.80	18.80	19.20	15.40	12.00	10.20	8.20	7.00	185
190	4.60	8.20	14.80	17.40	18.60	15.00	11.60	9.80	8.00	6.80	190
195		7.60	12.60	16.00	17.20	14.60	11.20	9.40	7.60	6.60	195
200			10.20	14.60	15.80	14.20	11.00	9.00	7.40	6.20	200
205			7.80	13.00	14.40	14.00	10.60	8.80	7.00	6.00	205
210			7.80	11.20	13.20	13.60	10.20	8.40	6.80	5.60	210
215			4.40	9.20	12.00	13.20	9.80	8.20	6.60	5.40	215
220				7.20	10.80	12.00	9.40	7.80	6.20	5.20	220
225				4.80	9.20	11.00	9.00	7.40	6.00	5.00	225
230				4.80	7.60	9.80	8.80	7.20	5.80	4.60	230
235					5.80	8.80	8.40	6.80	5.60	4.40	235
240					4.00	7.60	7.40	6.60	5.40	4.20	240
245					3.80	6.20	6.40	6.40	5.20	4.00	245
250						4.80	5.60	6.20	4.80	3.80	250
255							4.60	5.60	4.60	3.60	255
260								4.80	4.40		260
265								4.00	4.20		265
270									4.00		270

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

Grove GMK6400 The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Lattice extension and MegaWingLift™

	49,69 m (163 ft)		16 m - 64 m (52.5 ft - 210.0 ft)		135 000 kg (297,600 lb)		8,7 m x 8,5 m (28.5 ft x 27.9 ft) (100%)		360°
Pounds x 1000									
Feet	52.5	72.2	91.9	111.6	131.2	150.9	170.6	190.3	210.0
55	86.00								55
60	84.00								60
65	82.00								65
70	80.00	47.00							70
75	77.00	46.00							75
80	74.00	45.00	31.80			24.80			80
85	71.00	43.80	31.20			24.00			85
90	68.00	43.00	30.60			23.00			90
95	65.00	42.20	30.00	22.00		22.00	18.20		95
100	61.00	41.40	29.40	21.60	17.40	21.20	17.40		100
105	56.00	40.80	28.60	21.20	17.00	20.40	16.80	14.00	105
110	52.00	40.00	28.00	20.80	16.60	19.60	16.20	13.80	110
115	48.00	39.40	27.20	20.20	16.20	18.80	15.60	13.20	115
120	44.00	38.80	26.60	20.00	15.80	18.20	15.20	12.80	120
125	41.20	38.20	25.80	19.60	15.40	17.60	14.60	12.40	125
130	38.20	37.80	25.40	19.20	15.20	17.00	14.00	11.80	130
135	35.40	37.20	25.00	18.80	14.80	16.40	13.60	11.40	135
140	32.80	36.20	24.60	18.60	14.60	15.80	13.20	11.00	140
145	30.40	33.80	24.40	18.20	14.20	15.40	12.80	10.60	145
150	28.20	31.40	24.00	18.00	14.00	14.80	12.40	10.20	8.60
155	26.20	29.20	23.60	17.60	13.60	14.40	11.80	10.00	8.20
160	24.20	27.20	23.40	17.40	13.40	14.00	11.40	9.60	8.00
165	22.20	25.40	23.00	17.00	13.20	13.60	11.00	9.40	7.60
170	20.40	23.60	22.80	16.80	13.00	13.20	10.80	9.00	7.40
175	17.80	21.80	22.60	16.60	12.80	12.80	10.40	8.60	7.20
180	15.20	20.00	22.40	16.40	12.60	12.40	10.20	8.40	6.80
185	12.20	18.40	21.00	16.20	12.40	12.00	9.80	8.00	6.60
190	9.00	16.60	19.40	16.00	12.20	11.60	9.40	7.80	6.40
195	14.60	17.80	15.80	12.00	11.20	9.20	7.60	6.00	195
200		12.20	16.20	15.60	11.80	10.80	8.80	7.40	5.80
205			14.80	15.40	11.60	10.40	8.60	7.00	5.60
210			13.40	15.20	11.40	10.00	8.20	6.80	5.40
215			11.60	14.60	11.40	9.60	8.00	6.60	5.20
220			9.40	13.20	11.20	9.40	7.60	6.40	5.00
225				12.00	11.00	9.00	7.40	6.00	4.80
230				10.60	11.00	8.80	7.20	5.80	4.60
235				9.00	10.80	8.40	6.80	5.60	4.40
240				7.00	10.40	8.20	6.60	5.40	4.20
245				9.20	7.20	6.20	5.20	4.00	245
250				8.20	6.20	6.00	5.00	3.80	250
255				6.60	5.40	5.80	4.80	3.60	255
260				5.00	4.20	5.60	4.40		260
265						4.80	4.20		265
270						4.00	4.00		270
275							3.60		275

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Lattice extension and MegaWingLift™



54,59 m
(179.1 ft)
80°



12 m - 64 m
(39.4 ft - 210.0 ft)
3°



135 000 kg
(297,600 lb)



8,7 m x 8,5 m
(28.5 ft x 27.9 ft)
(100%)



360°



Pounds x 1000

Feet	39.4	52.5	72.2	91.9	111.6	131.2	150.9	170.6	190.3	210.0	Feet
50	108.00										50
55	102.00	93.00									55
60	96.00	88.00	69.00								60
65	91.00	83.00	67.00								65
70	85.00	79.00	64.00	48.00							70
75	81.00	74.00	62.00	46.00	37.80	31.40					75
80	77.00	70.00	61.00	45.00	36.40	30.40	25.40				80
85	73.00	67.00	59.00	43.60	35.20	29.20	24.60				85
90	69.00	64.00	57.00	42.20	34.00	28.20	23.60	20.40			90
95	66.00	61.00	55.00	40.80	33.00	27.20	22.60	19.60	17.20		95
100	61.00	57.00	52.00	39.60	31.80	26.00	21.80	18.80	16.40	13.80	100
105	56.00	55.00	50.00	38.60	30.80	25.00	21.00	18.20	15.80	13.80	105
110	52.00	51.00	48.00	37.60	29.80	23.80	20.40	17.40	15.20	13.20	110
115	48.00	47.00	46.00	36.40	28.80	23.20	19.60	16.80	14.60	12.60	115
120	45.00	44.00	44.00	35.40	27.80	22.40	18.80	16.20	14.00	12.20	120
125	41.60	40.80	42.40	34.60	26.80	21.80	18.20	15.60	13.60	11.60	125
130	38.80	37.80	39.60	33.80	25.80	21.20	17.60	15.00	13.00	11.20	130
135	36.00	35.20	36.80	33.00	25.00	20.60	17.20	14.60	12.40	10.80	135
140	33.60	32.60	34.40	32.20	24.40	20.00	16.60	14.20	12.00	10.40	140
145	31.20	30.40	32.00	31.40	23.80	19.40	16.00	13.60	11.40	10.00	145
150	29.00	28.20	29.80	30.60	23.40	19.00	15.40	13.20	11.00	9.40	150
155	27.00	26.20	27.80	29.40	22.80	18.60	15.00	12.80	10.60	9.20	155
160	25.20	24.20	26.00	27.40	22.20	18.00	14.60	12.20	10.20	8.80	160
165	23.40	22.40	24.20	25.60	21.60	17.60	14.20	11.80	9.80	8.40	165
170	21.60	20.60	22.40	24.00	21.20	17.00	13.80	11.40	9.40	8.20	170
175	19.60	18.80	20.80	22.40	20.80	16.60	13.20	11.20	9.00	7.80	175
180	17.20	17.00	19.00	20.80	20.20	16.20	12.80	10.80	8.80	7.60	180
185	14.60	15.20	17.40	19.20	19.80	15.80	12.40	10.40	8.40	7.20	185
190	11.80	13.00	15.80	17.80	18.80	15.40	12.00	10.00	8.20	7.00	190
195	10.00	10.60	14.40	16.20	17.40	15.20	11.60	9.80	7.80	6.60	195
200	8.00	8.20	13.00	15.00	16.00	14.80	11.20	9.40	7.60	6.40	200
205	6.80	11.20	13.60	14.60	14.40	11.00	9.00	7.40	6.20	5.20	205
210	5.00	9.20	12.40	13.40	14.20	10.60	8.80	7.00	6.00	5.00	210
215	7.20	11.20	12.20	13.20	10.20	8.40	6.80	5.60	4.60	3.60	215
220	5.00	9.80	11.00	12.00	10.00	8.20	6.40	5.40	4.40	3.40	220
225	4.00	8.00	10.00	11.00	9.60	7.80	6.20	5.20	4.20	3.20	225
230	6.40	9.00	10.00	9.20	7.60	6.00	5.00	4.00	3.00	2.00	230
235	4.40	7.80	9.00	8.80	7.40	5.80	4.60	3.40	2.40	1.40	235
240	6.40	8.00	7.80	6.80	6.80	5.60	4.40	3.20	2.20	1.20	240
245	5.00	7.00	6.80	6.80	5.40	4.20	3.20	2.20	1.20	1.20	245
250			6.20	6.00	6.40	5.20	4.00	3.00	2.00	1.20	250
255			5.00	5.00	5.60	5.00	3.80	2.80	1.80	1.20	255
260			3.80	4.20	4.80	4.80	3.60	2.60	1.60	1.20	260
265					4.00	4.60	2.60	1.60	1.20	1.20	265
270					3.80	3.80					270

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

Grove GMK6400 The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Lattice extension and MegaWingLift™

	54,59 m (179.1 ft) 80°		16 m - 64 m (52.5 ft - 210.0 ft) 25°		135 000 kg (297,600 lb)		8,7 m x 8,5 m (28.5 ft x 27.9 ft) (100%)		360°	
Pounds x 1000										
Feet	52.5	72.2	91.9	111.6	131.2	150.9	170.6	190.3	210.0	Feet
60	81.00									60
65	78.00									65
70	75.00									70
75	72.00	46.00								75
80	69.00	45.00								80
85	66.00	43.80								85
90	63.00	43.00	30.40			22.60				90
95	60.00	42.20	29.80			21.80				95
100	57.00	41.60	29.20	21.60		21.00	17.40			100
105	54.00	40.80	28.60	21.20	16.80	20.20	16.80			105
110	52.00	40.20	28.00	20.80	16.60	19.60	16.20			110
115	49.00	39.60	27.4	20.40	16.20	19.00	15.60	13.20		115
120	45.00	39.00	26.80	20.00	15.80	18.20	15.20	12.80		120
125	42.20	38.20	26.00	19.60	15.40	17.60	14.60	12.40	10.00	125
130	39.20	37.40	25.40	19.40	15.20	17.20	14.20	11.80	10.00	130
135	36.40	36.60	24.80	19.00	14.80	16.60	13.60	11.40	9.60	135
140	33.80	35.60	24.40	18.60	14.60	16.20	13.20	11.20	9.20	140
145	31.40	34.20	24.20	18.40	14.40	15.60	12.80	10.80	9.00	145
150	29.20	32.00	23.80	18.00	14.00	15.20	12.40	10.40	8.60	150
155	27.20	29.80	23.40	17.80	13.80	14.60	12.00	10.00	8.40	155
160	25.20	27.80	23.20	17.60	13.60	14.20	11.60	9.80	8.00	160
165	23.40	26.00	22.80	17.20	13.20	13.80	11.40	9.40	7.80	165
170	21.60	24.20	22.60	17.00	13.00	13.40	11.00	9.20	7.40	170
175	19.60	22.40	22.40	16.80	12.80	13.00	10.60	8.80	7.20	175
180	18.00	20.80	22.20	16.40	12.60	12.60	10.20	8.60	7.00	180
185	16.20	19.20	21.40	16.20	12.40	12.20	10.00	8.20	6.80	185
190	14.00	17.60	20.00	16.00	12.20	11.80	9.80	8.00	6.40	190
195	11.60	16.00	18.40	16.00	12.00	11.40	9.40	7.80	6.20	195
200	9.20	14.40	16.80	15.80	11.80	11.20	9.20	7.40	6.00	200
205	13.00	15.40	15.60	11.80	10.80	8.80	7.20	5.80	5.80	205
210	11.00	14.00	15.40	11.60	10.40	8.60	7.00	5.60	5.60	210
215	9.00	12.80	15.00	11.40	10.20	8.20	6.80	5.40	5.40	215
220		11.40	13.60	11.40	9.80	8.00	6.60	5.20	5.20	220
225		10.20	12.40	11.20	9.60	7.80	6.40	5.00	5.00	225
230		8.40	11.20	11.00	9.20	7.40	6.00	4.80	4.80	230
235		6.60	10.00	11.00	8.80	7.20	5.80	4.60	4.60	235
240		4.40	9.00	10.80	8.20	7.00	5.60	4.40	4.40	240
245			7.80	9.80	7.20	6.60	5.40	4.20	4.20	245
250			6.20	8.60	6.40	6.40	5.20	4.00	4.00	250
255			4.40	7.60	5.40	6.20	5.00	3.80	3.80	255
260				6.60	4.60	5.80	4.80	3.60	3.60	260
265				5.60	3.80	4.80	4.60			265
270				4.20		4.00	4.40		4.20	270
275								4.20		275
280							3.60		3.60	280


THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Working range

Lattice extension and MegaWingLift™

Main boom, lattice extension and MegaWingLift™

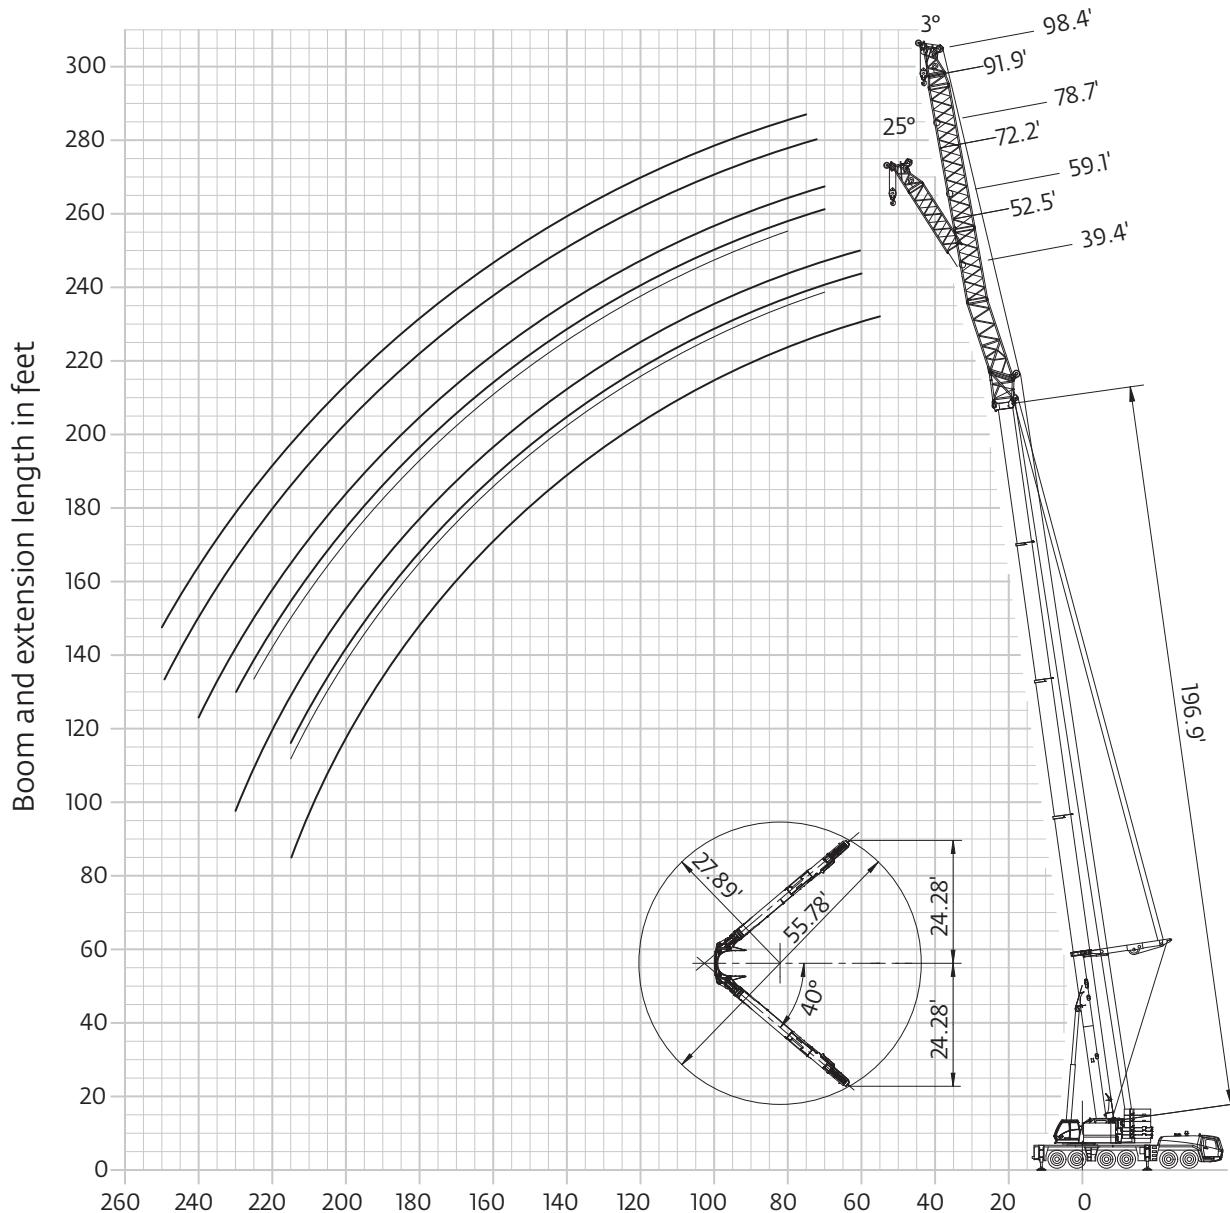

Operating radius in feet from axis of rotation

Hook heights shown in the working diagram do not consider loaded boom deflection.

Load chart

Lattice extension and MegaWingLift™

						
	60 m (196.9 ft) 80°	12 m - 30 m (39.4 ft - 98.4 ft) 3°	135 000 kg (297,600 lb)	8,7 m x 8,5 m (28.5 ft x 27.9 ft) (100%)	360°	
	 Pounds x 1000					
Feet	39.4	52.5	52.5 / 25°	59.1	72.2	72.2 / 25°
55	94.00					
60	89.00	78.00		74.00		
65	85.00	74.00		70.00		
70	81.00	71.00	65.00	67.00	60.00	
75	77.00	68.00	63.00	65.00	57.00	
80	74.00	65.00	60.00	62.00	55.00	45.00
85	71.00	62.00	58.00	60.00	53.00	43.80
90	67.00	60.00	56.00	57.00	50.00	42.80
95	64.00	58.00	54.00	55.00	48.00	42.00
100	61.00	55.00	52.00	54.00	47.00	41.00
105	56.00	53.00	51.00	52.00	45.00	40.00
110	52.00	51.00	49.00	50.00	43.60	39.00
115	48.00	47.00	47.00	48.00	42.00	37.80
120	45.00	44.00	45.00	46.00	40.60	36.80
125	41.40	40.80	42.00	43.00	39.40	35.80
130	38.60	38.00	39.00	40.20	38.20	34.80
135	35.80	35.20	36.20	37.40	36.40	34.00
140	33.40	32.80	33.60	35.00	34.00	33.20
145	31.00	30.40	31.40	32.60	31.60	32.40
150	29.00	28.20	29.00	30.40	29.40	31.60
155	27.00	26.20	27.00	28.40	27.40	29.60
160	25.00	24.40	24.00	26.40	25.60	27.60
165	23.20	22.40	23.20	24.80	23.80	25.60
170	21.40	20.60	21.40	23.00	22.00	24.00
175	19.80	18.80	19.60	21.40	20.20	22.20
180	18.00	17.00	17.80	19.80	18.60	20.60
185	16.40	15.40	16.20	18.20	17.00	18.80
190	14.80	14.00	14.60	16.60	15.40	17.20
195	12.80	12.60	13.00	15.20	14.00	15.80
200	10.40	11.00	11.60	13.80	12.60	14.20
205	8.20	9.00	9.80	12.60	11.40	12.80
210	5.60	7.00	7.80	11.00	10.20	11.60
215	5.40	5.00	5.60	9.00	9.00	10.20
220				7.00	7.40	9.00
225				5.00	5.60	7.40
230				5.00	3.80	7.80
235						6.00
240						6.40
245						6.00
250						4.60


THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Working range

Luffing jib

Main boom and luffing jib - 80°

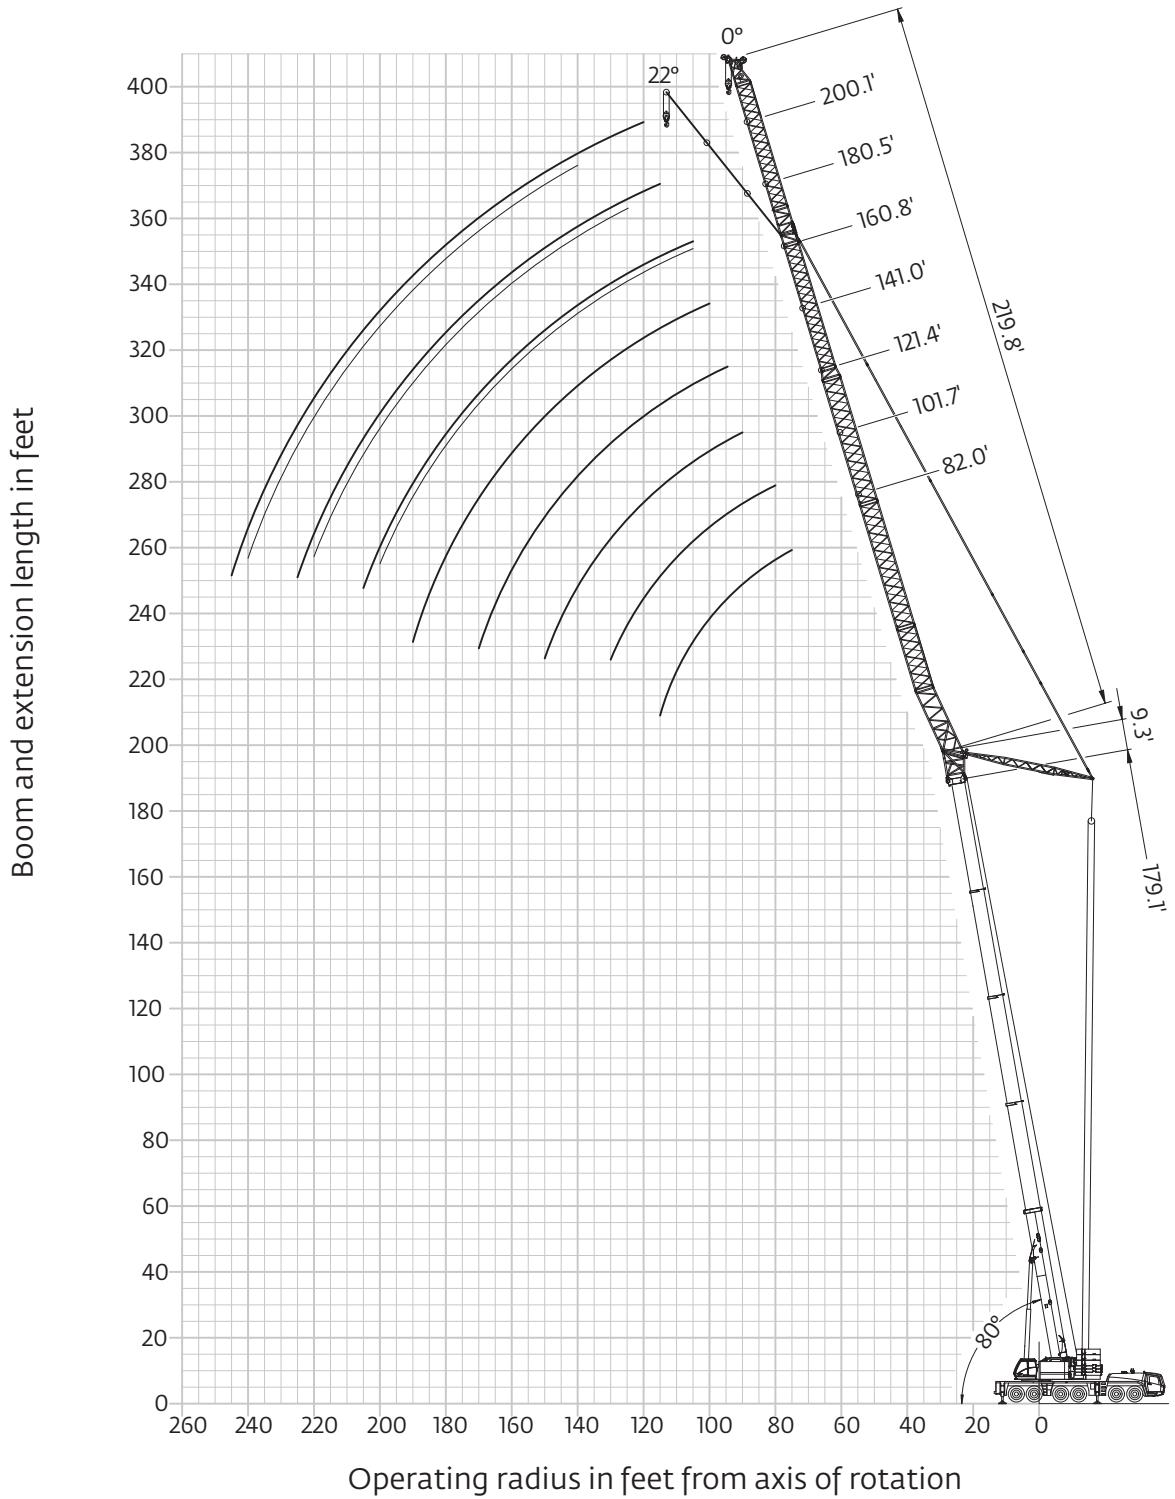

Hook heights shown in the working diagram do not consider loaded boom deflection.

Load chart

Luffing jib

									
Feet	101.7 0°	121.4 0°	141.1 0°	160.8 0°	180.5 0° 22°	200.1 0° 22°	219.8 0° 22°	239.5 0° 22°	Feet
60									60
65			68.00						65
70		81.00	67.00	56.00					70
75		80.00	67.00	56.00	46.00				75
80	89.00	79.00	67.00	56.00	46.00	47.00	38.60		80
85	86.00	78.00	66.00	55.00	46.00	46.00	38.60		85
90	84.00	76.00	66.00	55.00	46.00	46.00	38.60	32.60	90
95	78.00	74.00	65.00	55.00	46.00	46.00	38.60	32.60	95
100	68.00	72.00	65.00	54.00	45.00	46.00	38.60	32.60	100
105		70.00	63.00	54.00	45.00	46.00	38.60	32.60	105
110		68.00	62.00	54.00	45.00	45.00	38.60	32.60	110
115		60.00	61.00	53.00	45.00	45.00	38.60	32.60	115
120		53.00	59.00	53.00	45.00	45.00	38.40	32.60	120
125			58.00	52.00	44.00	45.00	38.20	32.60	125
130			53.00	51.00	44.00	45.00	38.20	32.60	130
135			48.00	50.00	43.60	44.00	38.00	32.20	135
140			49.00	43.40	43.80	37.80	37.40	31.80	140
145			47.00	42.80	43.20	37.60	37.20	31.20	145
150			43.20	42.40	42.80	37.40	37.00	30.80	150
155			38.80	41.80	42.20	37.40	37.00	30.20	155
160				41.40	41.80	37.00	37.00	29.40	160
165				38.20	38.60	36.60	36.80	28.80	165
170				35.00	35.20	36.20	36.40	28.00	170
175				31.60		36.00	36.20	27.40	175
180						34.00	35.20	26.80	180
185						31.40	32.40	26.40	185
190						28.60	29.60	25.80	190
195						25.80		25.40	195
200							25.00	23.20	18.80
205							24.40	23.20	18.40
210							23.60		18.00
215							21.20		17.60
220									17.40
225									17.00
230									16.80
235									16.40

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Luffing jib


25,19 m
(82.6 ft)
80°


25 m - 73 m
(82.0 ft - 239.5 ft)


135 000 kg
(297,600 lb)


8,7 m x 8,5 m
(28.5 ft x 27.9 ft)
(100%)


360°



Pounds x 1000

Feet	82.0 0°	101.7 0°	121.4 0°	141.1 0°	160.8 0°	0°	180.5 22°	0°	200.1 22°	0°	219.8 22°	0°	239.5 22°	Feet
50	111.00													50
55	111.00	88.00												55
60	109.00	88.00	71.00											60
65	105.00	88.00	71.00											65
70	100.00	88.00	71.00	58.00										70
75	96.00	88.00	71.00	58.00	48.00									75
80	92.00	88.00	71.00	58.00	48.00	39.60								80
85	90.00	88.00	71.00	58.00	48.00	39.60								85
90	84.00	88.00	71.00	58.00	48.00	39.60	40.20	33.20						90
95	84.00	71.00	58.00	48.00	39.60	40.20	33.20			28.20				95
100	79.00	71.00	58.00	48.00	39.60	40.20	33.20	33.80	28.20		23.40			100
105	75.00	71.00	58.00	48.00	39.60	40.20	33.20	33.80	28.20		23.40			105
110	64.00	70.00	58.00	48.00	39.60	40.20	33.20	33.80	28.20		23.40			110
115		67.00	58.00	48.00	39.60	40.20	33.20	33.80	28.20	27.60	23.40			115
120		63.00	58.00	48.00	39.60	40.20	33.20	33.80	28.20	27.00	23.40			120
125		60.00	58.00	48.00	39.60	40.20	33.20	33.80	28.20	26.60	23.40	20.60		125
130		51.00	57.00	48.00	39.60	40.20	33.20	33.80	28.20	26.20	23.40	20.20		130
135			54.00	48.00	39.60	40.20	33.20	33.80	28.20	26.00	23.40	19.80		135
140			48.00	48.00	39.60	40.20	33.20	33.80	28.20	25.60	23.40	19.60		140
145				48.00	39.60	40.20	33.20	33.80	28.20	25.40	23.40	19.20		145
150				48.00	39.60	40.20	33.20	33.80	28.20	25.00	23.20	19.00		150
155				46.00	39.60	40.20	33.20	33.80	28.20	24.80	22.80	18.60		155
160				43.80	39.60	40.20	33.20	33.80	28.20	24.60	22.40	18.40		160
165					39.60	40.20	33.20	33.80	28.20	24.20	22.00	18.00		165
170					39.60	39.80	33.20	33.80	28.00	24.00	21.60	17.80		170
175					38.20	38.20	33.20	33.80	27.40	23.80	21.20	17.60		175
180					36.00	33.20	33.80	26.80	23.60	20.80	17.40			180
185						33.20	33.80	26.40	23.60	20.40	17.20			185
190						33.20	33.80	26.00	23.40	20.00	17.00			190
195						32.60	32.80	25.60	23.20	19.60	16.80			195
200						29.60		25.20	23.20	19.20	16.60			200
205							24.80	23.00		18.80	16.40			205
210							24.40	23.00		18.40	16.40			210
215							24.00	23.00		18.00	16.20			215
220								23.60		17.60	16.20			220
225									17.40	16.00				225
230										17.00	16.00			230
235										16.80	16.00			235
240										16.40				240

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

Grove GMK6400 The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Luffing jib

Pounds x 1000

Feet	82.0 0°	101.7 0°	121.4 0°	141.1 0°	160.8 0°	0°	180.5 22°	0°	200.1 22°	0°	219.8 22°	0°	239.5 22°	Feet		
60	70.00	59.00												70		
65	70.00	58.00												75		
70	70.00	58.00	48.00											70		
75	70.00	58.00	48.00	39.40										75		
80	70.00	58.00	48.00	39.40	33.00									80		
85	70.00	58.00	48.00	39.40	33.00									85		
90	70.00	58.00	48.00	39.40	33.00	26.20								90		
95	70.00	58.00	48.00	39.40	33.00	26.20	26.80	21.80						95		
100		58.00	48.00	39.40	33.00	26.20	26.80	21.80	18.20					100		
105		58.00	48.00	39.40	33.00	26.20	26.80	21.80	22.40	18.20		15.00		105		
110		58.00	48.00	39.40	33.00	26.20	26.80	21.80	22.40	18.20		15.00		110		
115		58.00	48.00	39.40	33.00	26.20	26.80	21.80	22.40	18.20		15.00		115		
120			48.00	39.40	33.00	26.20	26.80	21.80	22.40	18.20	18.80	15.00		120		
125			48.00	39.40	33.00	26.20	26.80	21.80	22.40	18.20	18.80	15.00		125		
130			48.00	39.40	33.00	26.20	26.80	21.80	22.40	18.20	18.80	15.00		130		
135			48.00	39.40	33.00	26.20	26.80	21.80	22.40	18.20	18.80	15.00	15.40	135		
140				39.40	33.00	26.20	26.80	21.80	22.40	18.20	18.80	15.00	15.40	140		
145				39.40	33.00	26.20	26.80	21.80	22.40	18.20	18.80	15.00	15.40	145		
150				39.40	33.00	26.20	26.80	21.80	22.40	18.20	18.80	15.00	15.40	150		
155					33.00	26.20	26.80	21.80	22.40	18.20	18.80	15.00	15.40	155		
160					33.00	26.20	26.80	21.80	22.40	18.20	18.80	15.00	15.40	160		
165					33.00	26.20	26.80	21.80	22.40	18.20	18.80	15.00	15.40	165		
170					33.00	26.20	26.80	21.80	22.40	18.20	18.80	15.00	15.40	170		
175						26.20	26.80	21.80	22.40	18.20	18.80	15.00	15.40	175		
180						26.20	26.80	21.80	22.40	18.20	18.80	15.00	15.40	180		
185						26.20		21.80	22.40	18.20	18.80	15.00	15.40	185		
190						26.20		21.80	22.40	18.20	18.80	15.00	15.40	190		
195							21.80	22.40	18.20	18.80	15.00	15.40		195		
200								21.80	22.40	18.20	18.80	15.00	15.40		200	
205									21.80	18.20	18.80	15.00	15.40		205	
210										18.20	18.80	15.00	15.40		210	
215											18.20	18.80	15.00	15.40		215
220											18.20	18.80	15.00	15.40		220
225												15.00	15.40		225	
230												15.00	15.40		230	
235												15.00	15.40		235	
240												15.00	15.40		240	
245												15.00			245	

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Luffing jib


44,79 m
(147.0 ft)
80°


25 m - 73 m
(82.0 ft - 239.5 ft)


135 000 kg
(297,600 lb)


8,7 m x 8,5 m
(28.5 ft x 27.9 ft)
(100%)


360°



Pounds x 1000

Feet	82.0 0°	101.7 0°	121.4 0°	141.1 0°	160.8 0°	0°	180.5 22°	0°	200.1 22°	0°	219.8 22°	0°	239.5 22°	Feet	
60	52.00													60	
65	52.00													65	
70	52.00	42.60												70	
75	51.00	42.60	34.80											75	
80	50.00	42.60	34.80	28.40										80	
85	49.00	42.60	34.80	28.40										85	
90	48.00	42.60	34.80	28.40	23.00									90	
95	47.00	42.40	34.80	28.40	23.00	18.40								95	
100	45.00	41.40	34.80	28.40	23.00	18.40	18.80							100	
105		40.20	34.80	28.40	23.00	18.40	18.80	15.20		12.40				105	
110		39.20	34.80	28.40	23.00	18.40	18.80	15.20		12.40				110	
115		38.00	34.80	28.40	23.00	18.40	18.80	15.20	15.60	12.40		9.60		115	
120		37.00	34.00	28.40	23.00	18.40	18.80	15.20	15.60	12.40		9.60		120	
125			33.20	28.40	23.00	18.40	18.80	15.20	15.60	12.40	12.80	9.60		125	
130			32.40	28.40	23.00	18.40	18.80	15.20	15.60	12.40	12.80	9.60		130	
135			31.40	28.00	23.00	18.40	18.80	15.20	15.60	12.40	12.80	9.60		135	
140			30.80	27.40	23.00	18.40	18.80	15.20	15.60	12.40	12.80	9.60	10.20	140	
145				26.60	23.00	18.40	18.80	15.20	15.60	12.40	12.80	9.60	10.20	145	
150				26.00	23.00	18.40	18.80	15.20	15.60	12.40	12.80	9.60	10.20	150	
155				25.40	23.00	18.40	18.80	15.20	15.60	12.40	12.80	9.60	10.20	155	
160				24.80	22.80	18.40	18.80	15.20	15.60	12.40	12.80	9.60	10.20	160	
165					22.40	18.40	18.80	15.20	15.60	12.40	12.80	9.60	10.20	165	
170						21.80	18.40	18.80	15.20	15.60	12.40	12.80	9.60	10.20	170
175						21.40	18.40	18.80	15.20	15.60	12.40	12.80	9.60	10.20	175
180							18.40	18.80	15.20	15.60	12.40	12.80	9.60	10.20	180
185							18.20	18.40	15.20	15.60	12.40	12.80	9.60	10.20	185
190							17.80	18.00	15.20	15.60	12.40	12.80	9.60	10.20	190
195							17.40		15.20	15.60	12.40	12.80	9.60	10.20	195
200								15.20	15.60	12.40	12.80	9.60	10.20	200	
205								15.20	15.60	12.40	12.80	9.60	10.20	205	
210									15.00	12.40	12.80	9.60	10.20		210
215									14.60	12.40	12.80	9.60	10.20		215
220										12.40	12.80	9.60	10.20		220
225										12.40	12.80	9.60	10.20		225
230										12.40		9.60	10.20		230
235										12.40		9.60	10.20		235
240											9.60	10.20		240	
245											9.60	10.20		245	
250											9.60		250		
255											9.60		255		

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

Grove GMK6400 The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Luffing jib



Pounds x 1000

Feet	82.0 0°	101.7 0°	121.4 0°	141.1 0°	160.8 0°	0°	180.5 22°	0°	200.1 22°	0°	219.8 22°	Feet
75	33.00											75
80	33.00	26.40										80
85	33.00	26.40										85
90	33.00	26.40	21.20									90
95	33.00	26.40	21.20	16.60								95
100	33.00	26.40	21.20	16.60	13.20							100
105	32.80	26.40	21.20	16.60	13.20	9.80	10.20	7.40				105
110	31.60	26.40	21.20	16.60	13.20	9.80	10.20	7.40				110
115	30.20	26.20	21.20	16.60	13.20	9.80	10.20	7.40				115
120	25.60	21.20	16.60	13.20	9.80	10.20	7.40			5.40		120
125		25.00	21.20	16.60	13.20	9.80	10.20	7.40	7.80	5.40		125
130		24.40	21.20	16.60	13.20	9.80	10.20	7.40	7.80	5.40		130
135			21.20	16.60	13.20	9.80	10.20	7.40	7.80	5.40		135
140			20.80	16.60	13.20	9.80	10.20	7.40	7.80	5.40	6.00	140
145			20.40	16.60	13.20	9.80	10.20	7.40	7.80	5.40	6.00	145
150			20.00	16.60	13.20	9.80	10.20	7.40	7.80	5.40	6.00	150
155				16.60	13.20	9.80	10.20	7.40	7.80	5.40	6.00	155
160				16.60	13.20	9.80	10.20	7.40	7.80	5.40	6.00	160
165				16.40	13.20	9.80	10.20	7.40	7.80	5.40	6.00	165
170				16.00	13.20	9.80	10.20	7.40	7.80	5.40	6.00	170
175					13.20	9.80	10.20	7.40	7.80	5.40	6.00	175
180					13.20	9.80	10.20	7.40	7.80	5.40	6.00	180
185					13.20	9.80	10.20	7.40	7.80	5.40	6.00	185
190					13.00	9.80	10.20	7.40	7.80	5.40	6.00	190
195						9.80	10.20	7.40	7.80	5.40	6.00	195
200						9.80	10.20	7.40	7.80	5.40	6.00	200
205						9.80		7.40	7.80	5.40	6.00	205
210								7.40	7.80	5.40	6.00	210
215								7.40	7.80	5.40	6.00	215
220								7.40	7.80	5.40	6.00	220
225								7.40		5.40	6.00	225
230										5.40	6.00	230
235										5.40	6.00	235
240										5.40	6.00	240
245										5.40		245


THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Working range

Luffing jib

Main boom and luffing jib - 70°

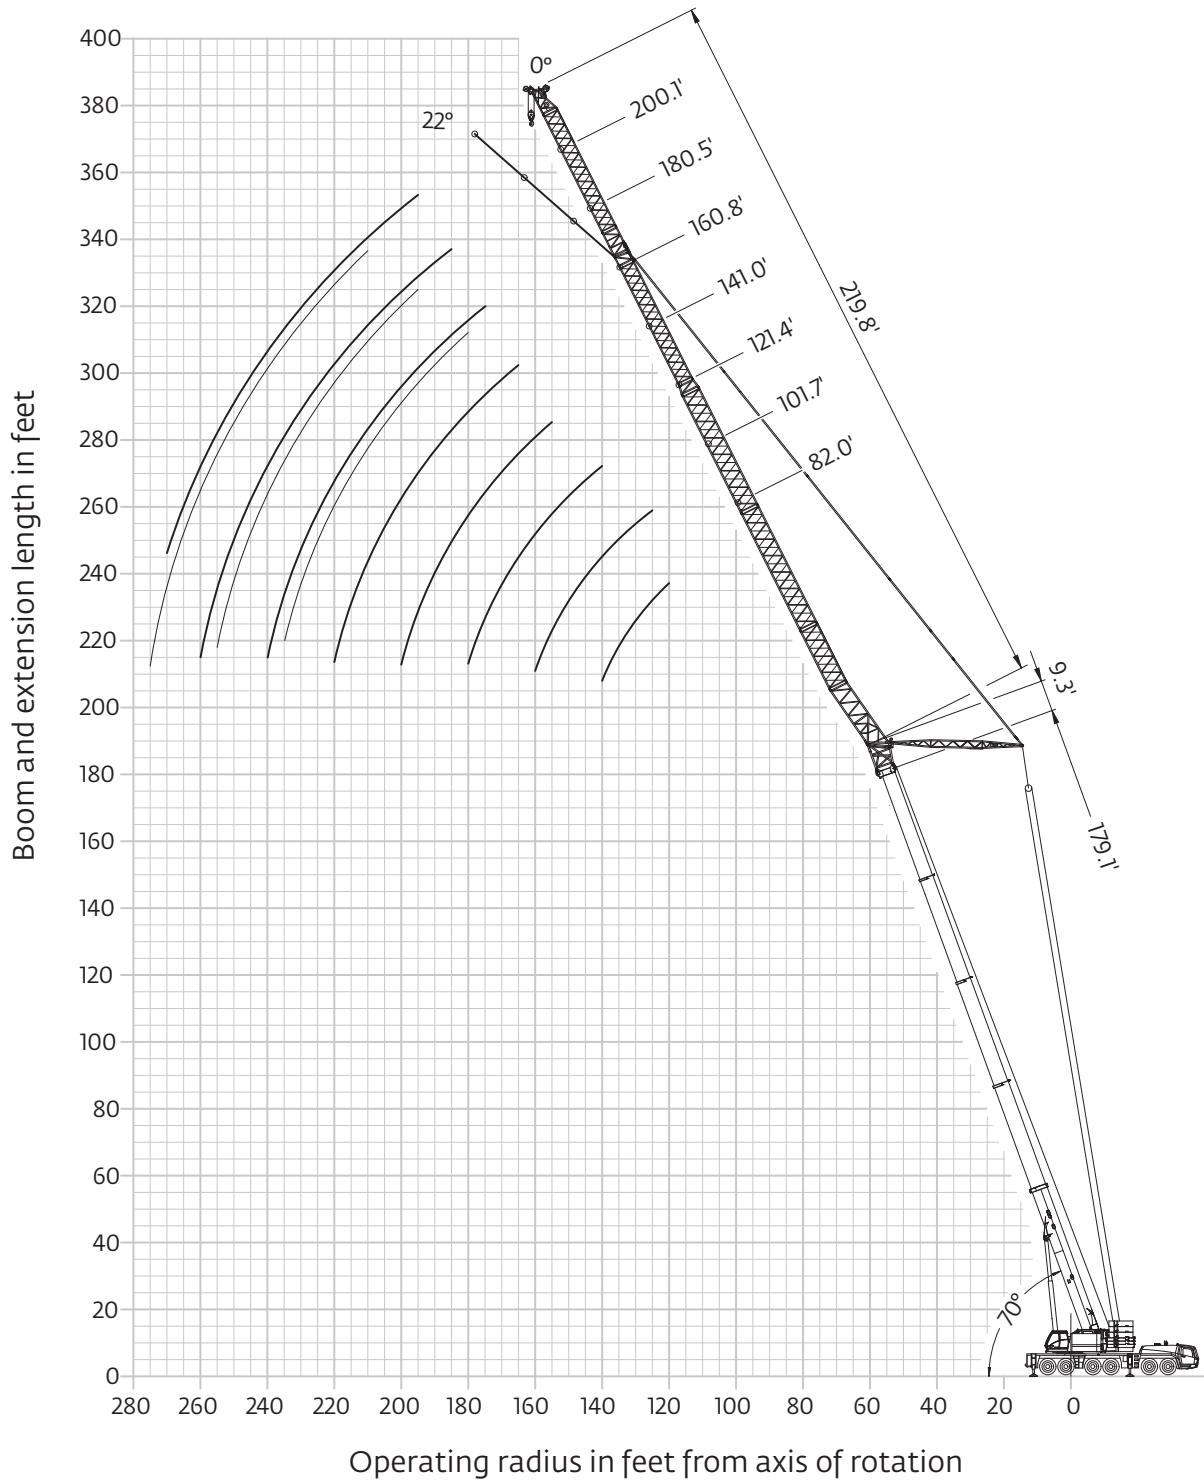

Hook heights shown in the working diagram do not consider loaded boom deflection.

Load chart

Luffing jib

															
15,39 m (50.5 ft) 70°	25 m - 73 m (82.0 ft - 239.5 ft)	135 000 kg (297,600 lb)	8,7 m x 8,5 m (28.5 ft x 27.9 ft) (100%)	360°											
	 Pounds x 1000														
Feet	82.0 0°	101.7 0°	121.4 0°	141.1 0°	160.8 0°	0°	180.5 22°	0°	200.1 22°	0°	219.8 22°	0°	239.5 22°	Feet	
60	113.00													60	
65	109.00													65	
70	104.00													70	
75	100.00	91.00												75	
80	95.00	88.00												80	
85	95.00	86.00												85	
90	89.00	83.00	75.00											90	
95		81.00	73.00	64.00										95	
100		78.00	72.00	63.00	53.00									100	
105		74.00	70.00	62.00	53.00									105	
110		70.00	68.00	61.00	52.00									110	
115			66.00	60.00	52.00	43.60	44.00							115	
120			63.00	59.00	51.00	43.40	43.80	37.20						120	
125				60.00	58.00	51.00	43.20	43.60	37.20					125	
130				57.00	56.00	50.00	43.00	43.40	37.00					130	
135					54.00	50.00	42.80	43.20	37.00	37.00	32.00			135	
140					51.00	49.00	42.60	43.00	36.80	37.00	31.80	25.20		140	
145					49.00	48.00	42.20	42.60	36.60	37.00	31.80	24.80		145	
150					47.00	47.00	41.60	42.20	36.60	36.80	31.40	25.60	24.20	150	
155						45.00	41.20	41.60	36.40	36.80	31.00	25.40	23.80	155	
160						43.20	40.60	41.00	36.20	36.60	30.40	25.00	23.20	160	
165						41.60	40.20	40.40	35.80	36.40	30.00	24.80	22.80	18.40	165
170						39.60	39.00	39.00	35.60	36.00	29.40	24.40	22.40	18.20	170
175							37.60	37.60	35.40	35.60	28.80	24.20	21.80	17.80	175
180							36.20	36.20	35.00	35.20	28.00	24.00	21.40	17.60	180
185								34.80	34.60	34.60	27.40	23.80	21.00	17.40	185
190								32.40	33.40	33.40	26.80	23.60	20.40	17.20	190
195									32.20	32.20	26.20	23.40	20.00	17.00	195
200									31.00	31.00	25.80	23.20	19.60	16.80	200
205										29.80	25.20	23.20	19.20	16.60	205
210											24.80	23.20	18.80	16.40	210
215											24.40	23.20	18.40	16.20	215
220											24.00	23.20	18.00	16.20	220
225												23.80	17.60	16.20	225
230													17.40	16.00	230
235													17.00	16.00	235
240													16.80	16.00	240
245													16.40		245

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Luffing jib


25,19 m
(82.6 ft)
70°


25 m - 73 m
(82.0 ft - 239.5 ft)


135 000 kg
(297,600 lb)


8,7 m x 8,5 m
(28.5 ft x 27.9 ft)
(100%)


360°



Pounds x 1000

Feet	82.0 0°	101.7 0°	121.4 0°	141.1 0°	160.8 0°	0°	180.5 22°	0°	200.1 22°	0°	219.8 22°	0°	239.5 22°	Feet
75	101.00													75
80	95.00													80
85	89.00													85
90	83.00	82.00												90
95	78.00	77.00	71.00											95
100	73.00	73.00	71.00											100
105	69.00	68.00	58.00											105
110	65.00	65.00	58.00											110
115	62.00	61.00	58.00	48.00										115
120	59.00	58.00	57.00	48.00										120
125		55.00	54.00	48.00	39.60									125
130		53.00	52.00	48.00	39.60									130
135		50.00	50.00	48.00	39.60	40.20	33.60							135
140		48.00	47.00	47.00	39.60	40.20	33.60							140
145			45.00	45.00	39.60	40.20	33.60	34.00	28.40					145
150			43.40	43.20	39.60	40.20	33.60	34.00	28.40					150
155			41.80	41.40	39.60	40.20	33.60	34.00	28.40	23.40				155
160			40.00	39.80	38.80	38.80	33.60	34.00	28.40	25.20	23.20			160
165				38.20	37.20	37.20	33.60	34.00	28.40	25.00	23.00			165
170				36.80	35.80	35.80	33.60	34.00	28.40	24.60	22.60			170
175				35.40	34.40	34.40	33.60	34.00	28.40	24.40	22.20			175
180				34.00	33.20	33.00	32.60	32.60	28.40	24.20	21.80	18.00		180
185					32.00	31.80	31.40	31.40	28.00	24.00	21.40	17.80		185
190					30.80	30.60	30.40	30.40	27.40	23.80	21.00	17.60		190
195					29.60	29.60	29.20	29.20	27.00	23.60	20.60	17.40		195
200					28.60		28.20	28.20	26.40	23.40	20.20	17.20		200
205							27.20	27.20	26.00	23.20	19.80	17.00		205
210							26.20	26.20	25.60	23.20	19.40	16.80		210
215							25.40	25.40	25.00	23.00	19.00	16.60		215
220							24.40		24.20	23.00	18.80	16.40		220
225								23.40	23.00	18.40	16.20			225
230								22.60	23.00	18.00	16.20			230
235									21.80	22.20	17.60	16.00		235
240											17.40	16.00		240
245											17.00	16.00		245
250											16.80			250
255											16.60			255

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

Grove GMK6400 The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Luffing jib



Pounds x 1000

Feet	82.0 0°	101.7 0°	121.4 0°	141.1 0°	160.8 0°	0°	180.5 22°	0°	200.1 22°	0°	219.8 22°	0°	239.5 22°	Feet							
90	72.00													90							
95	71.00													95							
100	70.00	59.00												100							
105	66.00	59.00												105							
110	63.00	59.00												110							
115	59.00	59.00	47.00											115							
120	56.00	47.00	40.00											120							
125	53.00	47.00	39.80											125							
130	51.00	47.00	39.80											130							
135	48.00	47.00	39.80	33.20										135							
140		46.00	39.80	32.80	27.40									140							
145		44.00	39.80	32.80	27.20	27.20								145							
150		42.00	39.80	32.80	26.60	27.00								150							
155		40.40	39.60	32.80	26.60	27.00	23.00							155							
160			38.00	32.80	26.60	27.00	22.60	23.40	19.20					160							
165			36.40	32.80	26.60	27.00	22.40	23.20	19.20		15.60			165							
170			35.00	32.80	26.40	27.00	22.40	23.00	19.20		15.60			170							
175			33.60	32.80	26.40	27.00	22.40	23.00	19.20		15.60			175							
180				32.00	26.40	27.00	22.40	23.00	19.20	19.80	15.60			180							
185					30.80	26.40	27.00	22.40	22.80	19.20	19.80	15.60		185							
190						29.60	26.40	27.00	22.40	22.60	19.20	19.80	15.60	190							
195							28.40	26.40	27.00	22.40	22.60	19.20	19.60	15.60	195						
200								26.40	26.80	22.40	22.60	19.20	19.60	15.60	200						
205									26.00	22.40	22.60	19.20	19.60	15.60	205						
210										25.00	22.40	22.60	19.20	19.60	15.60	210					
215											24.00	22.40	22.60	19.20	19.60	15.60	215				
220												22.40	22.60	19.20	19.60	15.60	220				
225													22.20	19.20	19.60	15.60	16.20	225			
230														21.40	19.20	19.60	15.60	16.20	230		
235															20.60	19.20	19.60	15.60	16.00	235	
240																19.20	19.60	15.60	15.80	240	
245																	19.00	15.60	15.80	245	
250																		15.60	15.80	250	
255																			15.60	15.80	255
260																			15.60	15.80	260
265																				15.60	

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Luffing jib

	44,79 m (147.0 ft) 70°		25 m - 73 m (82.0 ft - 239.5 ft)		135 000 kg (297,600 lb)		8,7 m x 8,5 m (28.5 ft x 27.9 ft) (100%)		360°											
 Pounds x 1000																				
Feet	82.0 0°	101.7 0°	121.4 0°	141.1 0°	160.8 0°	0° 180.5 22°	0° 200.1 22°	0° 219.8 22°	0° 239.5 22°	Feet										
100	239.50									100										
105	40.40									105										
110	38.80									110										
115	37.20	35.20								115										
120	35.40	34.00								120										
125	33.80	32.80	30.80							125										
130	32.20	31.40	30.00							130										
135	30.20	28.80	26.00							135										
140	28.80	27.00	25.00							140										
145	26.60	25.40	24.00	22.60						145										
150	24.80	24.20	23.20	22.00						150										
155		23.40	22.40	21.40						155										
160		22.40	21.40	20.80	18.80	19.00				160										
165		21.40	20.60	20.00	18.20	18.40	15.80			165										
170		20.40	19.80	19.20	17.80	18.00	15.80	13.00		170										
175			19.00	18.40	17.20	17.40	15.80	13.00		175										
180				18.20	17.80	16.60	16.80	15.40	15.80	180										
185					17.40	17.20	16.00	16.20	15.00	15.40	185									
190						16.60	15.40	15.60	14.60	15.00	190									
195							15.80	14.80	15.00	14.20	14.60	12.80	13.60	10.20	195					
200								15.20	14.20	14.40	13.60	14.00	12.40	13.20	10.20	200				
205									14.40	13.60	13.80	13.20	13.40	12.00	13.00	10.20	10.80	205		
210										13.20	13.20	12.60	13.00	11.60	12.60	10.20	10.80	210		
215										12.60	12.80	12.20	12.40	11.20	12.00	10.20	10.80	215		
220										12.00		11.60	12.00	10.80	11.60	10.20	10.80	220		
225											11.40	11.20	11.40	10.40	11.20	10.00	10.60	225		
230												10.60	11.00	10.00	10.80	9.80	10.20	230		
235													10.20	10.60	9.60	10.40	9.40	9.80	235	
240														9.80	10.00	9.20	9.80	9.00	9.40	240
245															9.20	8.80	9.40	8.60	9.00	245
250																8.40	9.00	8.20	8.60	250
255																8.00	8.60	7.80	8.40	255
260																		7.40	8.00	260
265																		7.20	7.60	265
270																		6.80	7.20	270
275																		6.40	6.80	275
280																		6.00		280

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

Grove GMK6400 The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Luffing jib

Pounds x 1000

Feet	82.0 0°	101.7 0°	121.4 0°	141.1 0°	160.8 0°	0°	180.5 22°	0°	200.1 22°	0°	219.8 22°	Feet
120	25.80											120
125	25.00	21.80										125
130	24.00	21.80										130
135	23.20	21.20										135
140	22.60	20.60	18.80									140
145		20.00	18.20									145
150		19.20	17.60									150
155		18.60	17.20	15.20								155
160		18.00	16.60	14.80								160
165			16.00	14.20	12.80							165
170			15.60	13.80	12.40							170
175			15.20	13.40	12.00	10.20						175
180			14.60	13.00	11.80	9.80	10.00					180
185				12.60	11.40	9.60	9.80	8.20				185
190				12.20	11.00	9.40	9.40	8.00				190
195				11.80	10.60	9.00	9.20	7.80	8.00	6.00		195
200				11.40	10.40	8.80	8.80	7.60	7.80	6.00		200
205					10.00	8.40	8.60	7.20	7.60	6.00		205
210					9.60	8.20	8.20	7.00	7.40	6.00	6.40	210
215					9.40	7.80	8.00	6.80	7.00	5.80	6.20	215
220					9.00	7.60	7.60	6.60	6.80	5.60	6.00	220
225						7.20	7.40	6.20	6.60	5.40	5.80	225
230						7.00	7.20	6.00	6.20	5.20	5.60	230
235						6.80	6.80	5.80	6.00	5.00	5.40	235
240						6.40		5.60	5.80	4.80	5.20	240
245								5.40	5.60	4.60	5.00	245
250								5.20	5.40	4.40	4.80	250
255								4.80	5.20	4.20	4.40	255
260								4.60		4.00	4.20	260
265										3.80	4.00	265
270										3.60	3.80	270
275										3.60		275


THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Working range

Luffing jib

Main boom and luffing jib - 60°

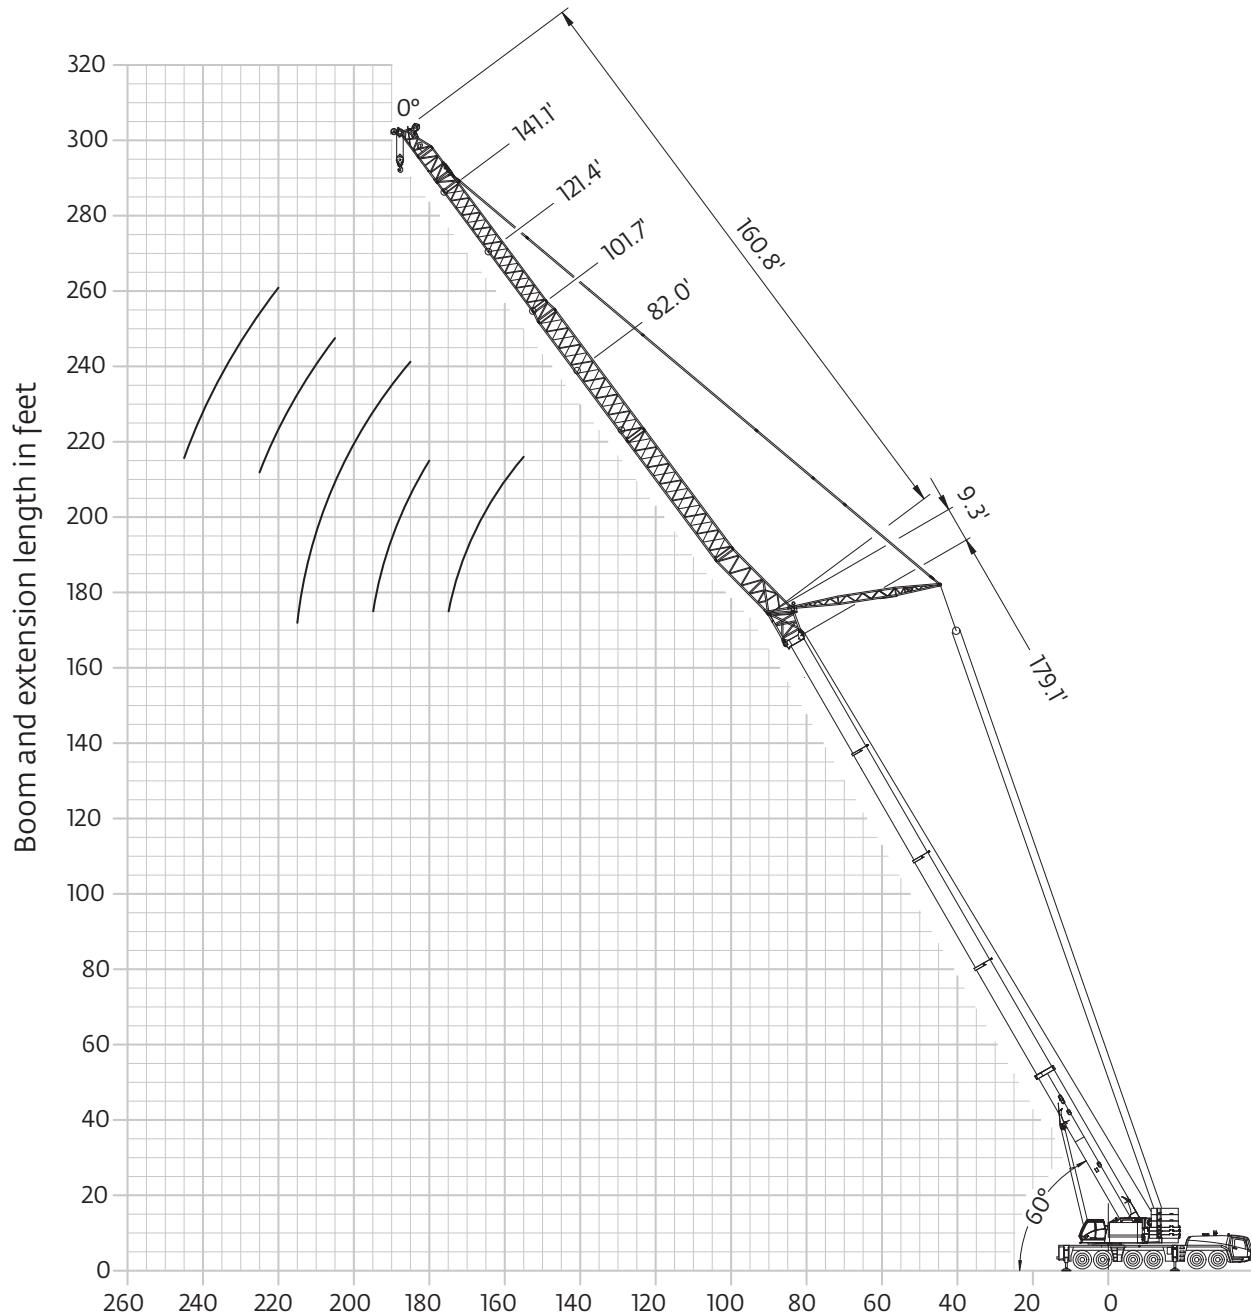

Operating radius in feet from axis of rotation


Hook heights shown in the working diagram do not consider loaded boom deflection.

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

Grove GMK6400 *The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.*

Load chart

Luffing jib

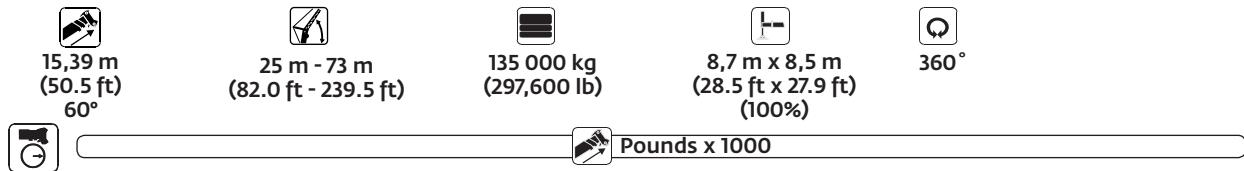

Pounds x 1000

Feet	82.0 0°	101.7 0°	121.4 0°	141.1 0°	160.8 0°	0°	180.5 22°	0°	200.1 22°	0°	219.8 22°	0°	239.5 22°	Feet
90	85.00													90
95	80.00	79.00												95
100	75.00	75.00												100
105		71.00												105
110		67.00												110
115		64.00	63.00											115
120		60.00	60.00	58.00										120
125			57.00	56.00										125
130			54.00	53.00										130
135			52.00	51.00	49.00									135
140			50.00	49.00	48.00									140
145				47.00	46.00	41.20								145
150				45.00	44.00	41.00								150
155				43.00	42.60	40.60	40.80							155
160				41.20	41.00	40.00	39.80	35.20						160
165					39.40	38.40	38.40	35.20	35.40					165
170					37.80	36.80	36.80	35.00	35.20					170
175					36.40	35.40	35.40	34.80	35.00	29.60				175
180						34.20	34.20	33.80	33.80	29.20				180
185						32.80	32.80	32.40	32.40	28.80	24.00	21.60		185
190						31.80	31.60	31.40	31.40	28.00	23.80	21.20		190
195						30.60		30.20	30.20	27.40	23.60	20.80		195
200								29.20	29.20	26.60	23.40	20.20		200
205								28.20	28.20	26.00	23.20	19.80	16.80	205
210									27.20	25.60	23.20	19.40	16.80	210
215									26.20	25.20	23.00	19.00	16.60	215
220										24.80	23.00	18.60	16.40	220
225										24.20	23.00	18.20	16.20	225
230											23.40	18.00	16.20	230
235											22.80	17.60	16.00	235
240												17.20	16.00	240
245												17.00	16.00	245
250												16.60	16.00	250
255												16.40		255

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Luffing jib

 25,19 m
(82.6 ft)
60°

 25 m - 73 m
(82.0 ft - 239.5 ft)

 135 000 kg
(297,600 lb)

 8,7 m x 8,5 m
(28.5 ft x 27.9 ft)
(100%)

 360°



Pounds x 1000

Feet	82.0 0°	101.7 0°	121.4 0°	141.1 0°	160.8 0°	0°	180.5 22°	0°	200.1 22°	0°	219.8 22°	0°	239.5 22°	Feet
100	68.00													100
105	64.00													105
110	61.00													110
115	58.00	57.00												115
120		54.00												120
125		52.00	51.00											125
130		49.00	48.00											130
135		47.00	46.00											135
140			44.00	43.20										140
145			42.20	41.20										145
150			40.40	39.60										150
155			38.80	37.80	37.40									155
160				36.40	36.00									160
165				35.00	34.60	33.40								165
170				33.60	33.20	32.20								170
175				32.20	32.00	30.80	30.80							175
180				30.80	29.60	29.60	29.20							180
185				29.60	28.60	28.60	28.00	28.00						185
190				28.40	27.40	27.40	27.00	27.00						190
195				27.40	26.40	26.40	26.00	26.00	25.60					195
200					25.40	25.40	25.00	25.00	24.60					200
205					24.60	24.60	24.20	24.20	23.80	23.60	20.80			205
210					23.60		23.20	23.20	22.80	23.20	20.40			210
215						22.80	22.40	22.40	22.00	22.40	20.20			215
220							21.60	21.60	21.20	21.60	19.80			220
225							20.80	20.80	20.60	20.80	19.40	16.60		225
230							20.20		19.80	20.20	19.00	16.00		230
235								19.40	19.20	19.40	18.60	16.40		235
240									18.60	18.80	18.20	16.20		240
245									17.80	18.20	17.60	16.00		245
250									17.20		17.00	16.00		250
255										16.60	16.40	16.00		255
260											16.00	16.00		260
265											15.40	15.40		265
270											14.80			270
275											14.40			275

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

Grove GMK6400 The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Luffing jib

														
34,99 m (114.8 ft) 60°	25 m - 73 m (82.0 ft - 239.5 ft)	135 000 kg (297,600 lb)	8,7 m x 8,5 m (28.5 ft x 27.9 ft) (100%)	360°										
	Pounds x 1000													
Feet	82.0 0°	101.7 0°	121.4 0°	141.1 0°	160.8 0°	0°	180.5 22°	0°	200.1 22°	0°	219.8 22°	0°	239.5 22°	Feet
120	51.00													120
125	48.00													125
130	46.00													130
135	43.80	43.20												135
140		41.40												140
145		39.60	38.80											145
150		37.80	37.00											150
155		36.20	35.60											155
160			34.00	33.00										160
165			32.80	31.80										165
170			31.40	30.60										170
175			30.20	29.40	28.60									175
180				28.20	27.60									180
185				27.20	26.40	25.80								185
190				26.00	25.40	24.80								190
195				25.00	24.60	23.80	23.80							195
200				23.60	22.80	22.80	22.20							200
205				22.80	22.00	22.00	21.60	21.40						205
210				22.00	21.20	21.20	20.80	20.60	19.00					210
215				21.20	20.40	20.40	20.00	20.00	19.00					215
220				19.60	19.60	19.20	19.20	18.80						220
225				19.00	18.60	18.60	18.20	18.20	16.40					225
230				18.20	18.00	17.80	17.60	17.40	16.40					230
235					17.60	17.20	17.20	16.80	16.80	16.20				235
240						16.60	16.60	16.20	16.20	15.60				240
245						16.00		15.80	15.60	15.00	15.20			245
250								15.20	15.20	14.40	14.60			250
255								14.60	14.60	13.80	14.00			255
260								14.00	14.00	13.40	13.40			260
265								13.40		12.80	12.80			265
270										12.20	12.20			270
275										11.80	11.80			275
280										11.20	11.20			280
285										10.80				285

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Luffing jib

 44,79 m
(147.0 ft)
60°

 25 m - 73 m
(82.0 ft - 239.5 ft)

 135 000 kg
(297,600 lb)

 8,7 m x 8,5 m
(28.5 ft x 27.9 ft)
(100%)

 360°



Pounds x 1000

Feet	82.0 0°	101.7 0°	121.4 0°	141.1 0°	160.8 0°	0°	180.5 22°	0°	200.1 22°	0°	219.9 22°	0°	239.5 22°	Feet								
140	26.00													140								
145	25.00													145								
150	24.20													150								
155	23.40	22.00												155								
160		21.20												160								
165		20.40	19.40											165								
170		19.80	18.60											170								
175		19.00	18.00											175								
180			17.40	16.00										180								
185				16.80	15.40									185								
190					16.40	15.00								190								
195						15.80	14.40	13.40						195								
200							14.00	13.00						200								
205								13.40	12.60	11.20				205								
210									12.20	10.80	10.80			210								
215										11.80	10.40	10.40		215								
220										11.40	10.00	10.00	9.00	220								
225											11.00	9.60	9.80	8.80	9.00	225						
230											9.20	9.40	8.40	8.60	7.80	230						
235											9.00	9.00	8.00	8.40	7.40	235						
240											8.60	8.60	7.80	8.00	7.20	240						
245												8.20	7.40	7.60	6.80	7.20	6.00	245				
250													7.20	7.40	6.60	7.00	5.60	250				
255														6.80	7.00	6.20	6.60	5.40	255			
260															6.60	6.80	6.00	6.40	5.20	260		
265																6.40		5.80	6.00	5.00	5.40	265
270																	5.60	5.80	4.60	5.20	270	
275																		5.20	5.40	4.40	4.80	275
280																		5.00	5.20	4.20	4.60	280
285																			4.80	4.00	4.40	285
290																				3.80	4.00	290
295																				3.60	3.80	295
300																				3.60	3.60	300

 54,59 m
(179.1 ft)
60°

 25 m - 49 m
(82.0 ft - 160.8 ft)

 135 000 kg
(297,600 lb)

 8,7 m x 8,5 m
(28.5 ft x 27.9 ft)
(100%)

 360°



Pounds x 1000

Feet	82.0 0°	101.7 0°	121.4 0°	141.1 0°	160.8 0°	Feet	
155	15.60					155	
160	15.40					160	
165	14.80					165	
170	14.20					170	
175	13.80					175	
180		11.80				180	
185		11.40	10.20			185	
190		11.00	9.80			190	
195		10.60	9.40			195	
200			9.20			200	
205				8.80	7.40	205	
210				8.40	7.00	210	
215				8.00	6.80	215	
220					6.40	5.60	220
225					6.20	5.20	225
230						5.00	230
235						4.80	235
240						4.40	240
245						4.20	245


THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

Grove GMK6400 The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Working range

Luffing jib with MegaWingLift™

Main boom, luffing jib and MegaWingLift™ - 80°

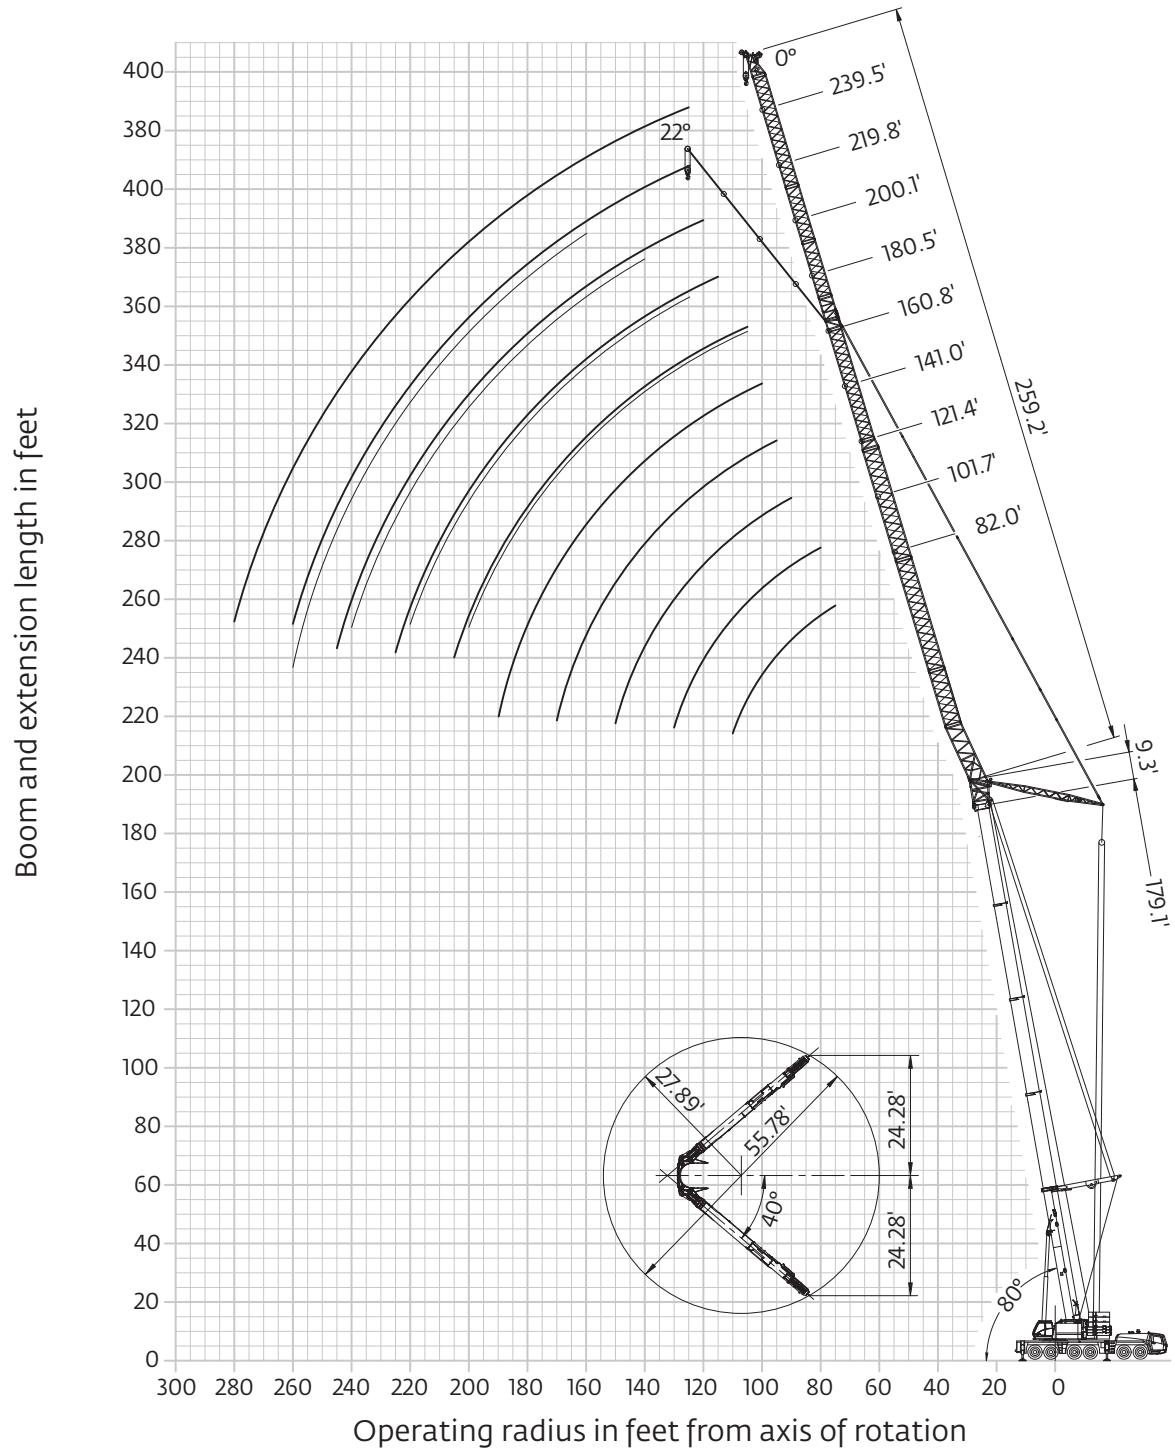

Hook heights shown in the working diagram do not consider loaded boom deflection.

Load chart

Luffing jib with MegaWingLift™


34,99 m
(114.8 ft)
80°


25 m - 79 m
(82.0 ft - 259.2 ft)


135 000 kg
(297,600 lb)


8,7 m x 8,5 m
(28.5 ft x 27.9 ft)
(100%)


360°



Pounds x 1000

Feet	82.0 0°	101.7 0°	121.4 0°	141.1 0°	160.8 0°	0°	180.5 22°	0°	200.1 22°	0°	219.8 22°	0°	239.5 22°	259.2 0°	Feet
55	126.00														55
60	117.00	106.00													60
65	109.00	106.00													65
70	103.00	101.00	84.00												70
75	97.00	95.00	84.00	68.00											75
80	91.00	89.00	84.00	68.00	56.00										80
85	87.00	85.00	83.00	68.00	56.00										85
90	83.00	80.00	78.00	68.00	56.00	44.00									90
95	81.00	76.00	74.00	68.00	56.00	44.00	46.00	36.80							95
100	73.00	71.00	68.00	56.00	44.00	44.00	46.00	36.80		30.60					100
105	70.00	68.00	66.00	56.00	44.00	44.00	46.00	36.80	38.40	30.60		25.20			105
110	68.00	65.00	63.00	56.00	44.00	44.00	46.00	36.80	38.40	30.60		25.20			110
115	66.00	62.00	61.00	56.00	44.00	44.00	46.00	36.80	38.40	30.60		25.20			115
120		60.00	58.00	56.00	44.00	44.00	46.00	36.80	38.40	30.60	29.00	25.20	19.80	120	
125		58.00	56.00	54.00	44.00	44.00	46.00	36.80	38.40	30.60	28.40	25.20	19.80	125	
130		56.00	54.00	52.00	44.00	44.00	46.00	36.80	38.40	30.60	27.80	25.20	19.80	130	
135		54.00	52.00	50.00	44.00	44.00	46.00	36.80	38.40	30.60	27.20	25.20	20.80	19.80	135
140			50.00	48.00	44.00	44.00	46.00	36.80	38.20	30.60	26.80	25.20	20.40	19.80	140
145			48.00	46.00	44.00	44.00	45.00	36.80	37.80	30.60	26.40	25.20	20.00	19.80	145
150			47.00	45.00	43.40	43.40	36.80	37.60	37.60	30.60	26.00	25.00	19.60	19.80	150
155				43.40	41.80	41.80	36.80	37.40	37.40	30.60	25.60	24.40	19.40	19.80	155
160				42.20	40.40	40.20	36.80	37.20	37.20	30.60	25.40	23.80	19.00	19.40	160
165				41.00	39.00	39.00	36.80	37.20	37.20	30.60	25.00	23.40	18.60	18.80	165
170				40.00	37.80	37.80	36.80	36.60	36.60	30.20	24.80	22.80	18.40	18.40	170
175					36.80	36.60	35.60	35.40	29.40	24.40	22.40	18.00	18.00		175
180					35.60	35.60	34.40	34.20	28.60	24.20	21.80	17.80	17.60		180
185					34.80	33.40	33.40	33.20	28.00	24.00	21.40	17.60	17.20		185
190					33.80	32.40	32.20	27.20	23.80	20.80	17.40	16.60			190
195						31.40	31.20	26.80	23.60	20.40	17.20	16.20			195
200						30.60	30.40	26.20	23.40	20.00	17.00	15.80			200
205						30.00		25.80	23.40	19.40	16.80	15.60			205
210								25.20	23.20	19.00	16.60	15.20			210
215								24.80	23.20	18.60	16.40	14.80			215
220								24.40	23.20	18.20	16.40	14.40			220
225								24.00		18.00	16.20	14.20			225
230										17.60	16.20	13.80			230
235										17.20	16.20	13.60			235
240										17.00	16.20	13.20			240
245										16.60		13.00			245
250												12.60			250
255												12.40			255
260												12.20			260
265												12.00			265

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

Grove GMK6400 The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Luffing jib with MegaWingLift™


39,89 m
(130.9 ft)
80°


25 m - 79 m
(82.0 ft - 259.2 ft)


135 000 kg
(297,600 lb)


8,7 m x 8,5 m
(28.5 ft x 27.9 ft)
(100%)


360°



Pounds x 1000

Feet	82.0 0°	101.7 0°	121.4 0°	141.1 0°	160.8 0°	180.5 0°	180.5 22°	200.1 0°	200.1 22°	219.8 0°	219.8 22°	239.5 0°	239.5 22°	259.2 0°	Feet
60	112.00														60
65	104.00														65
70	98.00	96.00													70
75	92.00	90.00	82.00												75
80	87.00	85.00	82.00	67.00											80
85	83.00	81.00	80.00	67.00											85
90	79.00	77.00	75.00	67.00	55.00										90
95	76.00	73.00	72.00	67.00	55.00	44.00									95
100		70.00	68.00	66.00	55.00	44.00	46.00	36.60							100
105		67.00	65.00	63.00	55.00	44.00	46.00	36.60		30.60		25.20			105
110		64.00	62.00	60.00	55.00	44.00	46.00	36.60		30.60		25.20			110
115		62.00	59.00	58.00	55.00	44.00	46.00	36.60	38.20	30.60		25.20		20.20	115
120			57.00	55.00	54.00	44.00	46.00	36.60	38.20	30.60		25.20		20.20	120
125			55.00	53.00	52.00	44.00	46.00	36.60	38.20	30.60	28.60	25.20		20.20	125
130			53.00	51.00	50.00	44.00	46.00	36.60	38.20	30.60	28.00	25.20		20.20	130
135			52.00	49.00	48.00	44.00	46.00	36.60	38.20	30.60	27.40	25.20		20.20	135
140				47.00	46.00	44.00	44.00	36.60	37.80	30.60	27.00	25.20	20.60	20.20	140
145				46.00	44.00	42.80	42.60	36.60	37.60	30.60	26.60	25.20	20.20	20.20	145
150				44.00	42.40	41.20	41.00	36.60	37.40	30.60	26.20	25.00	19.80	20.20	150
155				43.40	41.00	39.60	39.60	36.60	37.20	30.60	25.80	24.40	19.40	20.00	155
160					39.80	38.20	38.20	36.60	37.00	30.60	25.60	23.80	18.80	19.60	160
165					38.60	36.80	36.80	36.00	35.80	30.60	25.20	23.40	18.60	19.20	165
170					37.60	35.60	35.60	34.60	34.60	30.40	25.00	22.80	18.20	18.60	170
175					36.80	34.60	34.40	33.40	33.40	29.80	24.60	22.40	18.00	18.20	175
180						33.60	33.40	32.40	32.20	29.00	24.40	21.80	17.80	17.80	180
185						32.60	32.60	31.40	31.20	28.40	24.00	21.40	17.60	17.40	185
190						31.80	31.80	30.40	30.20	27.60	24.00	20.80	17.20	17.00	190
195						31.20		29.60	29.40	27.00	23.80	20.40	17.00	16.40	195
200							28.60	28.40	26.60	23.60	20.00	16.80	16.00		200
205							28.00	27.80	26.00	23.40	19.40	16.80	15.80		205
210							27.40		25.60	23.40	19.00	16.60	15.40		210
215							27.00		25.20	23.20	18.60	16.40	15.00		215
220								24.80	23.20	18.20	16.40	14.60			220
225								24.20	23.20	18.00	16.20	14.40			225
230									22.00	17.60	16.20	14.00			230
235									21.60	17.20	16.20	13.80			235
240										17.00	16.20	13.40			240
245										16.60	16.20	13.20			245
250										16.20		12.80			250
255												12.60			255
260												12.40			260
265												12.20			265

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Luffing jib with MegaWingLift™


44,79 m
(147.0 ft)
80°


25 m - 79 m
(82.0 ft - 259.2 ft)


135,000 kg
(297,600 lb)


8,7 m x 8,5 m
(28.5 ft x 27.9 ft)
(100%)


360°



Pounds x 1000

Feet	82.0 0°	101.7 0°	121.4 0°	141.1 0°	160.8 0°	0°	180.5 22°	0°	200.1 22°	0°	219.8 22°	0°	239.5 22°	259.2 0°	Feet
60	107.00														60
65	100.00														65
70	94.00	92.00													70
75	88.00	87.00	79.00												75
80	83.00	82.00	79.00	64.00											80
85	79.00	77.00	76.00	64.00											85
90	75.00	73.00	72.00	64.00	53.00										90
95	72.00	70.00	69.00	64.00	53.00	43.60									95
100	69.00	66.00	65.00	64.00	53.00	43.60	43.80	36.60							100
105		63.00	62.00	61.00	53.00	43.60	43.80	36.60	30.40						105
110		61.00	59.00	58.00	53.00	43.60	43.80	36.60	30.40						110
115		59.00	57.00	55.00	53.00	43.60	43.80	36.60	37.00	30.40	25.00				115
120		57.00	54.00	53.00	52.00	43.60	43.80	36.60	37.00	30.40	25.00	20.60			120
125			52.00	50.00	50.00	43.60	43.80	36.60	37.00	30.40	29.00	25.00	20.60		125
130			49.00	48.00	48.00	43.60	43.80	36.60	37.00	30.40	28.40	25.00	20.60		130
135			48.00	47.00	46.00	43.60	43.80	36.60	37.00	30.40	27.80	25.00	20.60		135
140			45.00	44.00	42.40	42.40	36.60	37.00	30.40	27.20	25.00	20.80	20.60		140
145			43.40	42.40	40.80	40.60	36.60	37.00	30.40	26.60	25.00	20.40	20.60		145
150			42.00	40.80	39.20	39.00	36.60	37.00	30.40	26.40	25.00	20.00	20.60		150
155			40.80	39.40	37.60	37.60	36.60	36.60	30.40	26.00	24.80	19.60	20.40		155
160			39.80	38.20	36.20	36.20	35.40	35.20	30.40	25.60	24.20	19.40	19.80		160
165			37.00	35.00	35.00	34.20	34.00	30.40	25.40	23.80	19.00	19.40			165
170			35.80	33.80	33.80	32.80	32.80	30.40	25.00	23.20	18.80	19.00			170
175			35.00	32.60	32.60	31.80	31.60	30.00	24.80	22.80	18.40	18.40			175
180				31.60	31.60	30.60	30.40	29.40	24.40	22.40	18.20	18.00			180
185				30.80	30.60	29.60	29.40	28.80	24.20	21.80	18.00	17.60			185
190				29.80	29.80	28.60	28.40	27.80	24.00	21.40	17.60	17.20			190
195				29.20		27.80	27.60	27.00	23.80	21.00	17.40	16.80			195
200						27.00	26.80	26.00	23.60	20.40	17.20	16.40			200
205						26.20	26.00	25.20	23.40	20.00	17.00	16.00			205
210						25.60	24.40	23.40	19.60	16.80	15.60				210
215						25.00	23.80	23.20	19.20	16.60	15.20				215
220							23.20	23.00	18.80	16.60	14.80				220
225							22.60	22.40	18.40	16.40	14.60				225
230							20.60		18.00	16.20	14.20				230
235							20.00		17.80	16.20	13.80				235
240							19.60		17.40	16.20	13.60				240
245									17.20	16.20	13.40				245
250									16.80		13.00				250
255									16.60		12.80				255
260											12.60				260
265											12.20				265
270											12.00				270
275											11.80				275

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

Grove GMK6400 The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Luffing jib with MegaWingLift™

Pounds x 1000

Feet	82.0 0°	101.7 0°	121.4 0°	141.1 0°	160.8 0°	180.5 0° 22°	200.1 0° 22°	219.8 0° 22°	239.5 0° 22°	259.2 0°	Feet					
70	89.00										70					
75	84.00	83.00									75					
80	79.00	79.00	74.00								80					
85	75.00	74.00	73.00								85					
90	71.00	70.00	69.00	61.00							90					
95	68.00	67.00	66.00	61.00	50.00						95					
100	65.00	64.00	63.00	61.00	50.00	41.40					100					
105	62.00	61.00	60.00	58.00	50.00	41.40	42.00	35.00			105					
110	61.00	58.00	57.00	55.00	50.00	41.40	42.00	35.00			110					
115	56.00	54.00	53.00	50.00	41.40	42.00	35.00	29.80			115					
120	54.00	52.00	50.00	50.00	41.40	42.00	35.00	35.20	29.80	24.60	20.80	120				
125		50.00	48.00	48.00	41.40	42.00	35.00	35.20	29.80	24.60	20.80	125				
130		48.00	46.00	46.00	41.40	42.00	35.00	35.20	29.80	24.60	20.80	130				
135		46.00	45.00	43.80	41.40	42.00	35.00	35.20	29.80	28.00	24.60	20.80	135			
140		45.00	42.80	42.00	40.60	40.60	35.00	35.20	29.80	27.40	24.60	20.80	140			
145			41.20	40.40	39.00	38.80	35.00	35.20	29.80	26.80	24.60	20.60	145			
150				39.80	39.00	37.40	37.40	35.00	35.20	29.80	26.40	24.60	20.20	150		
155				38.60	37.60	36.00	35.80	35.00	35.20	29.80	26.00	24.60	19.80	20.40	155	
160					37.60	36.20	34.60	34.60	33.80	33.60	29.80	25.80	24.20	19.60	20.00	160
165						35.00	33.40	33.20	32.40	32.40	29.80	25.40	23.80	19.20	19.60	165
170						34.00	32.20	32.00	31.20	31.20	29.80	25.20	23.40	19.00	19.00	170
175						33.00	31.00	31.00	30.20	30.00	29.40	24.80	23.00	18.60	18.60	175
180						32.20	30.00	29.00	29.00	28.40	24.60	22.60	18.40	18.20	180	
185							30.00	28.20	28.00	28.00	27.40	24.40	22.00	18.00	17.80	185
190							29.00	27.40	27.20	27.00	26.40	24.20	21.60	17.80	17.40	190
195							28.20		26.20	26.00	25.40	23.80	21.20	17.60	17.00	195
200							27.40		25.40	25.20	24.60	23.80	20.80	17.40	16.60	200
205							26.80		24.60	24.60	23.80	23.60	20.40	17.20	16.20	205
210								24.00	23.80	23.00	23.00	20.00	17.00	15.80		210
215								23.40	23.20	22.40	22.20	19.40	16.80	15.40		215
220								22.80		21.60	21.60	19.00	16.60	15.20		220
225									21.00	21.00	18.80	16.40	14.80		225	
230									20.60	20.40	18.40	16.40	14.40		230	
235									20.00	19.80	18.00	16.20	14.20		235	
240									19.60		17.60	16.20	13.80		240	
245										17.40	16.00	13.60		245		
250										17.00	16.00	13.20		250		
255										16.80	16.00	13.00		255		
260										16.40		12.80		260		
265												12.40		265		
270												12.20		270		
275												12.00		275		

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Luffing jib with MegaWingLift™

	 54,59 m (179.1 ft) 80°	 25 m - 79 m (82.0 ft - 259.2 ft)	 135 000 kg (297,600 lb)	 8,7 m x 8,5 m (28.5 ft x 27.9 ft) (100%)	 360°						
					Pounds x 1000						
Feet	82.0 0°	101.7 0°	121.4 0°	141.1 0°	160.8 0°	0° 180.5 22°	0° 200.1 22°	0° 219.8 22°	0° 239.5 22°	0° 259.2 0°	Feet
75	81.00										75
80	76.00	75.00									80
85	72.00	71.00									85
90	68.00	67.00	67.00								90
95	65.00	64.00	63.00	58.00							95
100	62.00	61.00	60.00	58.00	48.00	39.20	39.60				100
105	59.00	58.00	57.00	56.00	48.00	39.20	39.60				105
110	57.00	55.00	54.00	53.00	48.00	39.20	39.60				110
115		53.00	52.00	51.00	48.00	39.20	39.60	33.20			115
120		51.00	50.00	48.00	48.00	39.20	39.60	33.20	28.20		120
125		49.00	48.00	46.00	48.00	39.20	39.60	33.20	33.60	28.20	125
130		48.00	46.00	44.00	43.80	39.20	39.60	33.20	33.60	28.20	130
135			44.00	42.40	42.00	39.20	39.60	33.20	33.60	28.20	135
140			42.60	40.80	40.20	38.80	38.60	33.20	33.60	28.20	140
145			41.40	39.20	38.60	37.20	37.00	33.20	33.60	28.20	145
150			40.20	37.80	37.20	35.60	35.60	33.20	33.60	28.20	150
155				36.60	35.80	34.20	34.20	33.20	33.40	28.20	155
160				35.40	34.60	33.00	32.80	32.00	32.00	28.20	160
165				34.40	33.40	31.60	31.60	30.80	30.80	28.20	165
170				33.60	32.20	30.60	30.40	29.60	29.60	28.20	170
175					31.20	29.40	29.40	28.60	28.40	28.00	175
180					30.20	28.40	28.40	27.60	27.40	26.80	180
185					29.60	27.40	27.40	26.60	26.40	25.80	185
190					29.00	26.60	26.40	25.60	25.60	25.00	190
195						25.80	25.60	24.80	24.60	24.00	195
200						25.00	25.00	24.00	23.80	23.20	23.80
205						24.40	23.20	23.00	22.40	23.00	20.60
210							22.40	22.40	21.60	22.20	20.20
215							21.80	21.60	21.00	21.40	19.80
220							21.20	21.20	20.20	20.80	19.40
225								20.80	19.60	20.20	19.00
230									19.20	19.60	16.40
235									18.60	19.00	16.40
240									18.20	18.60	16.20
245									17.80		16.20
250											16.00
255											16.00
260											13.00
265											12.60
270											12.40
275											12.20
280											12.00


THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

Grove GMK6400 The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Working range

Luffing jib with MegaWingLift™

Main boom, luffing jib and MegaWingLift™ - 70°

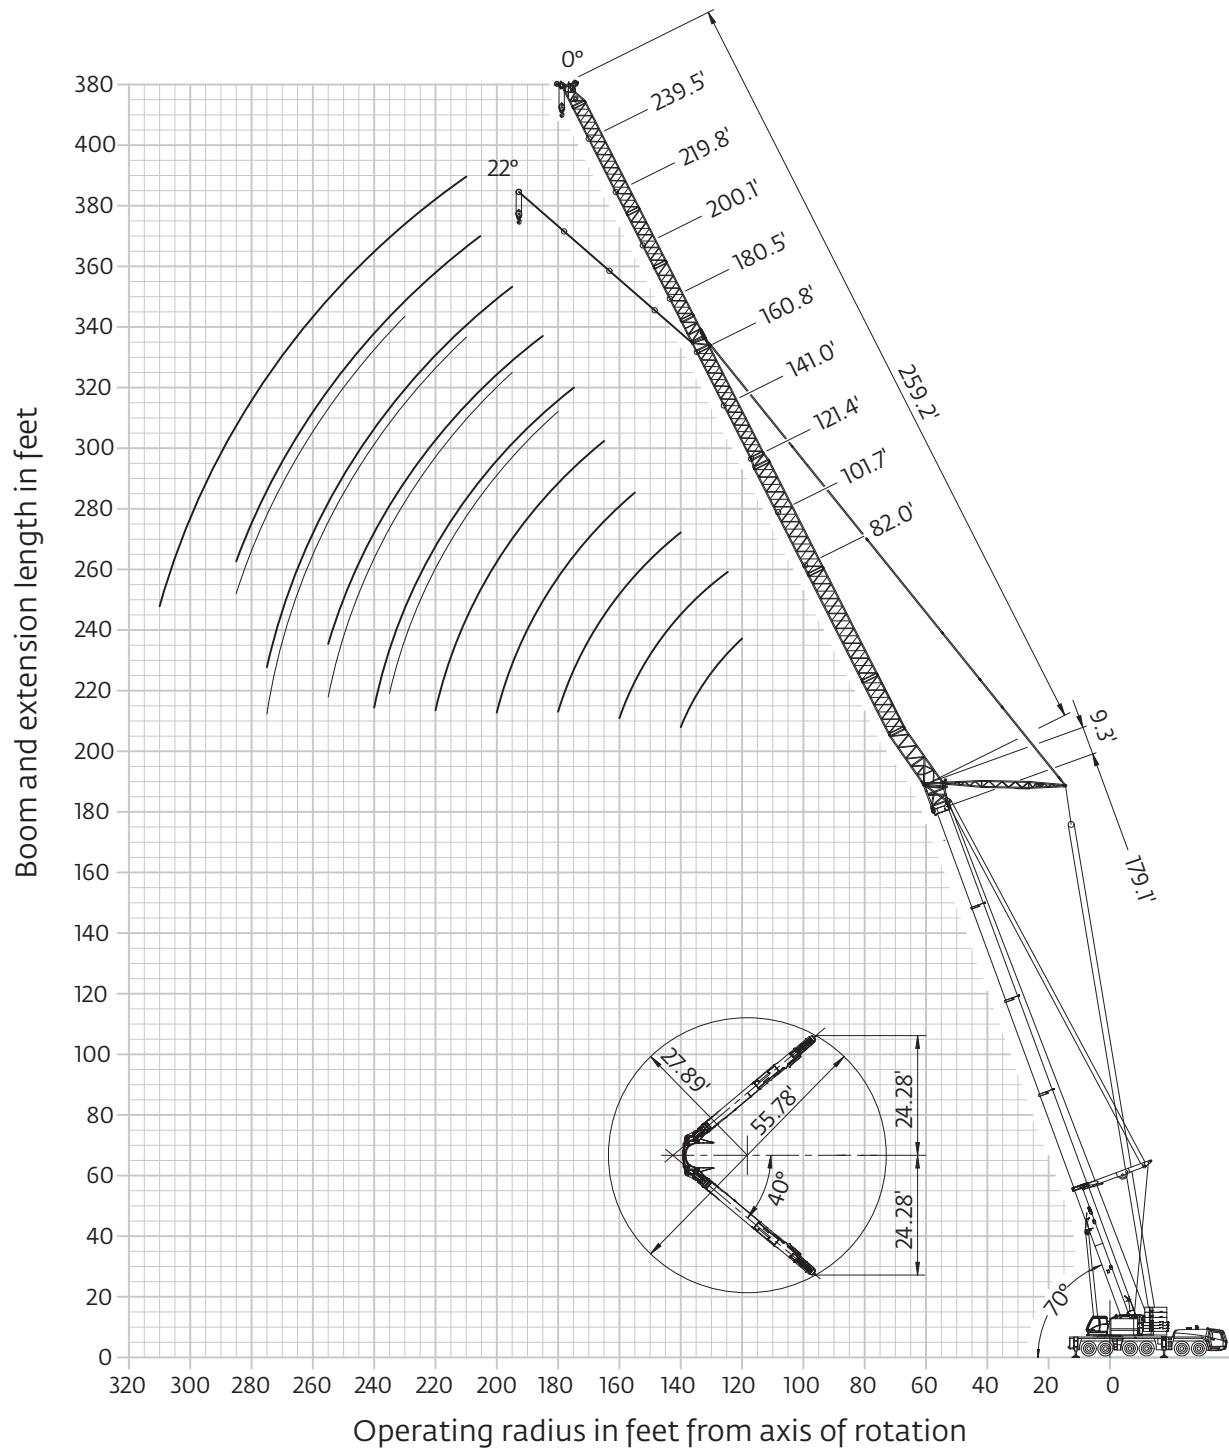

Hook heights shown in the working diagram do not consider loaded boom deflection.

Load chart

Luffing jib with MegaWingLift™


34,99 m
(114.8 ft)
70°


25 m - 79 m
(82.0 ft - 259.2 ft)


135 000 kg
(297,600 lb)


8,7 m x 8,5 m
(28.5 ft x 27.9 ft)
(100%)


360°



Pounds x 1000

Feet	82.0 0°	101.7 0°	121.4 0°	141.1 0°	160.8 0°	0°	180.5 22°	0°	200.1 22°	0°	219.8 22°	0°	239.5 22°	259.2 0°	Feet					
90	78.00														90					
95	74.00														95					
100	70.00	69.00													100					
105	66.00	65.00													105					
110	62.00	62.00													110					
115	59.00	58.00	58.00												115					
120	55.00	55.00	54.00												120					
125	53.00	52.00	51.00												125					
130	50.00	50.00	49.00												130					
135	48.00	47.00	47.00	46.00											135					
140		45.00	45.00	44.00	43.20										140					
145		43.40	42.80	42.00	41.20	41.20									145					
150		41.60	41.00	40.20	39.60	39.40									150					
155		39.80	39.20	38.60	37.80	37.80	37.20								155					
160			37.60	37.00	36.20	36.20	35.80	35.60	35.20						160					
165			36.20	35.60	34.80	34.80	34.20	34.20	32.00			25.00			165					
170			34.80	34.20	33.40	33.40	32.80	32.80	31.60			24.60			170					
175			33.40	32.80	32.20	32.00	31.60	31.60	31.20			24.00			175					
180				31.60	31.00	30.80	30.40	30.40	30.00	25.20	23.60		19.20		180					
185					30.40	29.80	29.80	29.20	29.20	28.80	25.00		18.80		185					
190						29.20	28.60	28.60	28.20	28.20	27.80	24.60		18.40		190				
195							28.20	27.60	27.20	27.20	26.80	24.20		18.00		195				
200								26.60	26.60	26.20	25.80	23.40		17.80	17.60	200				
205									25.60	25.20	25.20	24.80		21.40	17.60	205				
210										24.20	24.20	24.00		20.80	17.40	16.80	210			
215											23.40	23.40		23.00	20.80	17.20	16.40	215		
220											22.60	22.60		22.20	20.00	17.00	15.80	220		
225												21.80		21.40	19.40	19.60	16.80	15.60	225	
230														20.80	18.60	19.20	16.60	15.20	230	
235														20.00	18.00	18.80	16.40	14.80	235	
240															19.20	17.40	18.40	16.20	14.40	240
245															18.60	18.00	16.20	14.20	245	
250																17.60	16.20	13.80	250	
255																17.20	16.20	13.60	255	
260																16.40	16.00	13.20	260	
265																15.80		13.00	265	
270																		12.80	270	
275																		12.40	275	
280																		12.20	280	
285																		12.00	285	

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

Grove GMK6400 The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Luffing jib with MegaWingLift™


39,89 m
(130.9 ft)
70°


25 m - 79 m
(82.0 ft - 259.2 ft)


135 000 kg
(297,600 lb)


8,7 m x 8,5 m
(28.5 ft x 27.9 ft)
(100%)


360°



Pounds x 1000

Feet	82.0 0°	101.7 0°	121.4 0°	141.1 0°	160.8 0°	180.5 0°	22°	200.1 0°	22°	219.8 0°	22°	239.5 0°	22°	259.2 0°	Feet											
95	70.00														95											
100	67.00														100											
105	63.00	62.00													105											
110	60.00	59.00													110											
115	57.00	56.00													115											
120	54.00	51.00	52.00												120											
125		53.00	50.00	49.00											125											
130		51.00	47.00	46.00											130											
135		48.00	45.00	44.00											135											
140		46.00	43.20	42.20	41.80										140											
145		44.00	41.40	40.40	40.00	38.80									145											
150			39.60	38.60	38.40	37.20									150											
155			38.00	37.00	36.80	35.60	35.60								155											
160			36.40	35.60	35.20	34.20	34.20	33.40							160											
165				34.20	33.80	32.80	32.80	32.00	32.00	31.40					165											
170					32.80	32.40	31.40	31.40	30.60	30.60	30.00				170											
175						31.60	31.20	30.20	30.20	29.40	29.40	28.80	24.40		175											
180							30.20	29.00	29.00	28.40	28.40	27.60	24.00		180											
185								29.00	27.80	27.80	27.20	27.20	26.60	25.20	19.20	185										
190									27.80	26.80	26.80	26.20	26.20	25.60	25.00	18.80	190									
195										26.80	25.80	25.80	25.20	25.20	24.60	22.60	18.20	195								
200											25.80	24.80	24.80	24.20	24.20	22.20	18.20	17.80	200							
205												24.00	24.00	23.40	23.40	21.80	17.80	17.40	205							
210													23.00	22.40	22.40	22.40	21.40	17.60	17.00	210						
215														22.20	21.60	21.00	21.60	21.00	17.40	16.80	215					
220															20.80	20.80	20.40	20.80	20.20	17.20	16.40	220				
225																20.00	20.00	19.60	20.00	19.40	17.00	16.00	225			
230																	19.20	18.80	19.40	18.60	16.80	15.60	230			
235																	18.60	18.20	18.60	18.00	16.60	15.20	235			
240																		17.40	18.00	17.20	16.40	15.00	240			
245																			16.80	17.40	16.60	16.40	14.60	245		
250																			16.20	16.00	16.00	14.20	12.50	250		
255																			15.60	15.40	15.40	14.00	12.50	255		
260																				14.80	15.00	13.60	12.50	11.50	260	
265																				14.20	14.40	13.40	12.50	11.50	265	
270																				13.80	13.00	12.50	12.00	11.50	270	
275																				13.20	12.60	12.00	11.50	11.00	275	
280																					12.00	12.00	11.50	11.00	10.50	280
285																					11.60	11.60	11.00	10.50	10.00	285
290																					11.20	11.20	10.50	10.00	9.50	290
295																					10.60	10.60	10.00	9.50	9.00	295

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Luffing with MegaWingLift™


44,79 m
(147.0 ft)
70°


25 m - 79 m
(82.0 ft - 259.2 ft)


135 000 kg
(297,600 lb)


8,7 m x 8,5 m
(28.5 ft x 27.9 ft)
(100%)


360°



Pounds x 1000

Feet	82.0 0°	101.7 0°	121.4 0°	141.1 0°	160.8 0°	0°	180.5 22°	0°	200.1 22°	0°	219.8 22°	0°	239.5 22°	259.2 0°	Feet
100	63.00														100
105	60.00														105
110	57.00														110
115	54.00	53.00													115
120	51.00	51.00													120
125	49.00	48.00	47.00												125
130	46.00	46.00	45.00												130
135		44.00	43.00	42.00											135
140		42.00	41.20	40.20											140
145		40.00	39.40	38.40	38.00										145
150		38.20	37.60	36.80	36.40										150
155		36.00	35.20	34.80											155
160		34.60	33.80	33.40	32.00	32.00									160
165		33.20	32.40	32.00	30.60	30.60	29.80								165
170		31.80	31.00	30.80	29.40	29.40	28.60								170
175			29.80	29.60	28.20	28.20	27.40		26.80						175
180			28.80	28.40	27.00	27.00	26.20	26.20	25.60		24.20				180
185			27.60	27.40	26.00	26.00	25.20	25.20	24.60		23.80				185
190			26.40	26.40	25.00	25.00	24.20	24.20	23.60		23.40				190
195			25.40	24.00	24.00	23.20	23.40	22.60	23.20		22.40				195
200			24.40	23.00	23.00	22.40	22.40	21.80	22.40	21.60		18.20	17.80		200
205			23.40	22.20	22.20	21.60	21.60	21.00	21.60	20.80	18.20	17.80			205
210				21.40	21.40	20.60	20.80	20.20	20.60	20.00	18.00	17.40			210
215					20.60	20.60	20.00	20.00	19.40	20.00	19.20	17.60	17.20		215
220					19.80	19.20	19.20	18.60	19.20	18.40	17.40	16.80			220
225						18.40	18.40	17.80	18.40	17.60	17.20	16.40			225
230						17.80	17.80	17.20	17.80	17.00	17.00	16.00			230
235						17.00	17.00	16.60	17.00	16.40	16.40	15.60			235
240						16.40	16.40	16.00	16.40	15.80	15.80	15.00			240
245								15.40	15.80	15.20	15.20	14.40			245
250								14.80	15.20	14.60	14.60	13.80			250
255								14.20	14.60	14.00	14.00	13.20			255
260								13.60	13.60	13.40	13.40	12.60			260
265										12.80	13.00	12.20			265
270										12.40	12.40	11.60			270
275										11.80	12.00	11.20			275
280										11.40		10.60			280
285											10.20				285
290											9.80				290
295											9.40				295
300											9.00				300

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

Grove GMK6400 The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Luffing jib with MegaWingLift™

	 49,69 m (163.0 ft) 70°	 25 m - 79 m (82.0 ft - 259.2 ft)	 135 000 kg (297,600 lb)	 8,7 m x 8,5 m (28.5 ft x 27.9 ft) (100%)	 360°																				
Feet	82.0 0°	101.7 0°	121.4 0°	141.1 0°	160.8 0°	0° 180.5 22°	0° 200.1 22°	0° 219.8 22°	0° 239.5 22°	259.2 0°	Feet														
115	52.00										115														
120	50.00	48.00									120														
125	47.00	46.00									125														
130	45.00	44.00									130														
135	42.80	42.00	41.00								135														
140		40.00	39.20								140														
145		38.40	37.40	36.60							145														
150		36.60	35.80	35.00							150														
155		35.00	34.40	33.60	32.80						155														
160			33.00	32.20	31.40						160														
165				31.60	30.80	30.20	28.60	28.00			165														
170					30.20	29.60	29.00	27.40	27.40		170														
175						29.00	28.40	27.80	26.40	25.60	175														
180							27.40	26.80	25.20	25.20	24.40	180													
185								26.20	25.80	24.20	24.20	23.40	185												
190									25.20	24.80	23.20	23.20	22.40	190											
195										24.20	23.80	22.40	22.40	21.60	195										
200											22.80	21.40	21.40	20.80	20.60	19.80	200								
205												22.00	20.60	20.60	19.80	19.20	19.80	19.00	18.20	205					
210													21.20	19.80	19.80	19.20	19.00	18.40	19.00	18.20	210				
215														20.20	19.00	19.00	18.40	18.40	17.80	18.20	17.60	16.80	215		
220														18.20	18.20	17.60	17.60	17.60	17.60	16.80	16.00	220			
225															17.60	17.00	17.00	16.40	16.80	16.20	16.20	15.40	225		
230																16.20	16.20	15.60	16.20	15.40	15.60	14.80	230		
235																	15.60	15.60	15.00	15.60	14.80	15.00	14.00	235	
240																	15.00	15.00	14.40	15.00	14.20	14.40	13.40	240	
245																	14.40	13.80	14.40	13.60	13.80	13.00	13.00	245	
250																		13.20	13.80	13.20	13.20	12.40	12.40	250	
255																			12.80	13.20	12.60	12.60	11.80	11.80	255
260																			12.20	12.60	12.00	12.20	11.40	11.40	260
265																			11.80	12.20	11.60	11.60	10.80	10.80	265
270																				11.00	11.20	10.40	10.40	270	
275																				10.60	10.60	9.80	9.80	275	
280																				10.20	10.20	9.40	9.40	280	
285																					9.60	9.00	8.20	8.20	285
290																						8.60	8.20	290	
295																						8.20	8.20	295	
300																						7.80	7.80	300	
305																						7.40	7.40	305	

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Luffing jib with MegaWingLift™


54,59 m
(179.1 ft)
70°


25 m - 79 m
(82.0 ft - 259.2 ft)


135 000 kg
(297,600 lb)


8,7 m x 8,5 m
(28.5 ft x 27.9 ft)
(100%)


360°



Pounds x 1000

Feet	82.0 0°	101.7 0°	121.4 0°	141.1 0°	160.8 0°	0°	180.5 22°	0°	200.1 22°	0°	219.8 22°	0°	239.5 22°	259.2 0°	Feet				
120	47.00														120				
125	45.00	43.60													125				
130	43.00	41.80													130				
135	41.00	39.80													135				
140	39.20	38.20	36.80												140				
145		36.40	35.20												145				
150		35.00	33.80												150				
155		33.40	32.40	31.40											155				
160		32.00	31.00	30.20											160				
165			29.80	29.00	28.00										165				
170			28.60	27.80	26.80										170				
175			27.40	26.60	25.80	24.60									175				
180			26.20	25.60	24.80	23.60	23.60								180				
185				24.60	23.80	22.60	22.60	21.80							185				
190				23.60	22.80	21.60	21.60	20.80							190				
195				22.60	21.80	20.80	20.80	20.00	20.00	20.00					195				
200				21.80	21.00	20.00	20.00	19.20	19.20	19.20					200				
205					20.20	19.20	19.20	18.40	18.40	18.40		17.40			205				
210						19.40	18.40	18.40	17.60	17.60	17.60	16.60		15.60	210				
215							18.60	17.60	17.60	16.80	16.80	16.80	16.00		15.00	215			
220								17.80	17.00	17.00	16.20	16.20	16.20	15.40		14.40	220		
225									16.20	16.20	15.40	15.60	15.60	14.60		13.80	225		
230										15.60	15.60	14.80	14.80	15.00		14.00	13.20	230	
235										15.00	14.80	14.20	14.20	14.40	13.40	13.40	12.60	235	
240										14.20		13.60	13.60	13.80	12.80	12.80	12.00	240	
245											13.00	13.20	13.20	13.20	12.40	12.20	11.60	245	
250											12.60	12.60	12.60	12.60	11.80	11.80	11.00	250	
255											12.00	12.00	12.00	12.00	11.20	11.20	10.40	255	
260												11.60	11.60	10.80	10.80	10.00		260	
265												11.00	11.00	10.20	10.20	9.60		265	
270													10.60	10.60	9.80	9.80	9.00		270
275													10.00	10.00	9.40	9.40	8.60		275
280															9.00	9.00	8.20		280
285															8.60	8.60	7.80		285
290																	7.40		290
295																	7.00		295
300																	6.60		300
305																	6.20		305
310																	5.80		310


THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

Grove GMK6400 The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Working range

Luffing jib with MegaWingLift™

Main boom, luffing jib and MegaWingLift™ - 60°

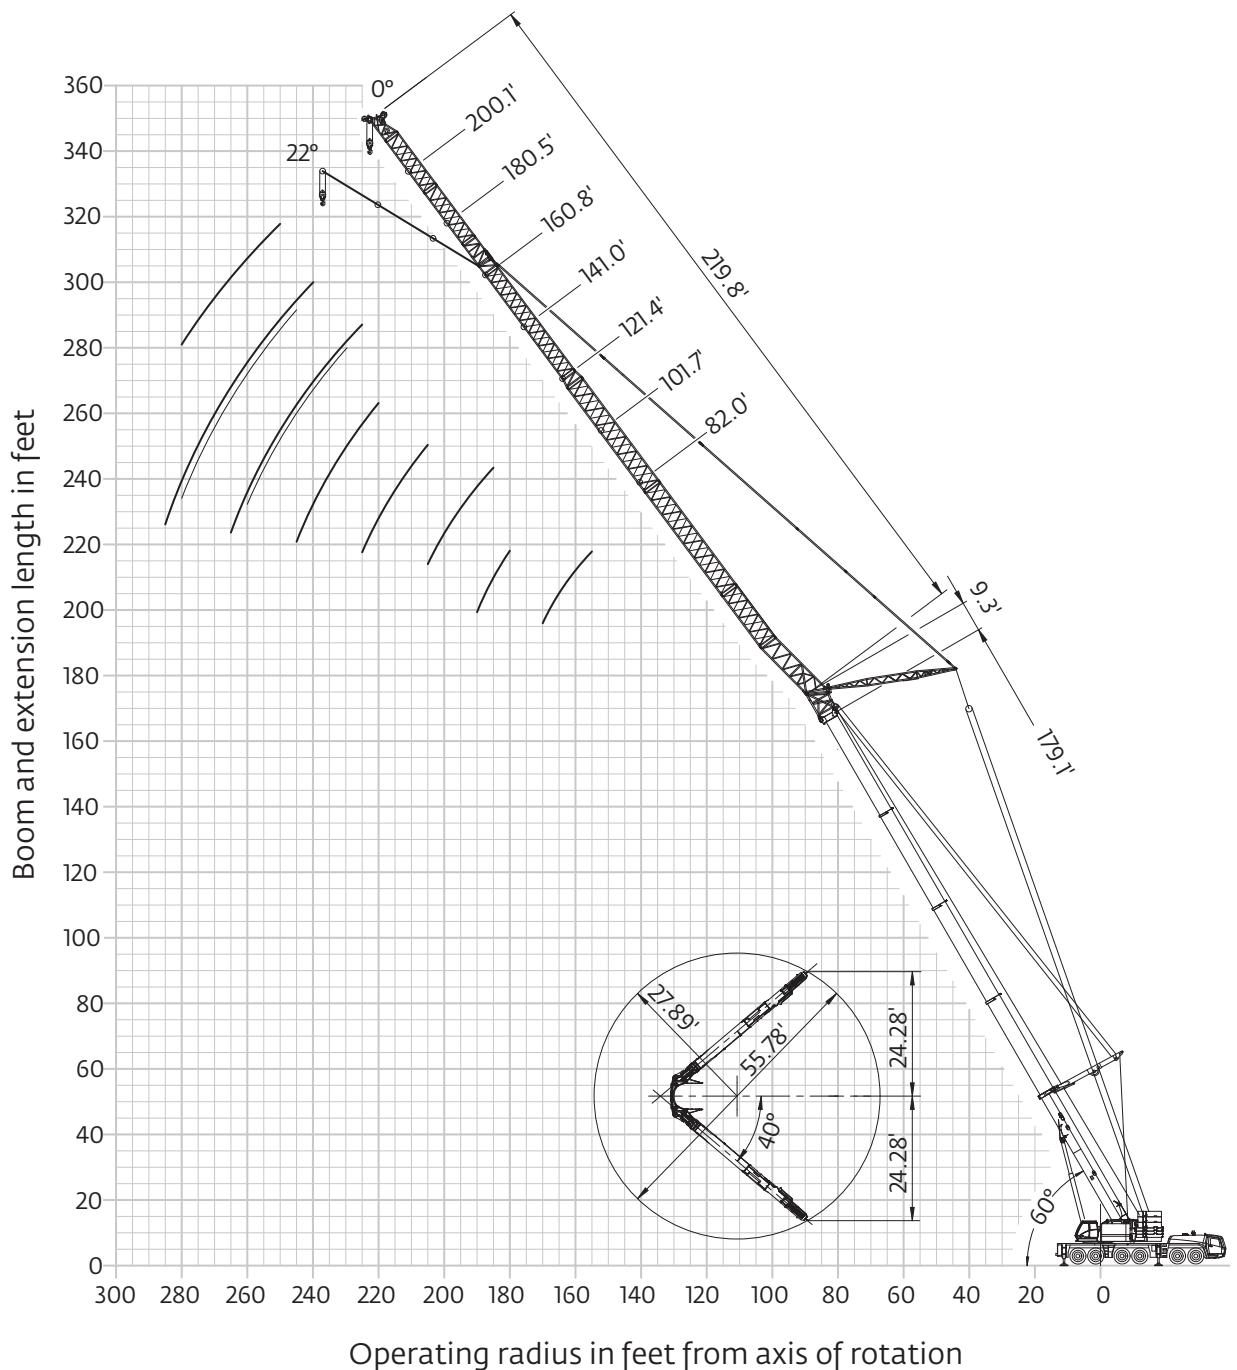

Hook heights shown in the working diagram do not consider loaded boom deflection.

Load chart

Luffing jib with MegaWingLift™

 34,99 m
(114.8 ft)
60°

 25 m - 67 m
(82.0 ft - 219.8 ft)

 135 000 kg
(297,600 lb)

 8,7 m x 8,5 m
(28.5 ft x 27.9 ft)
(100%)

 360°



Pounds x 1000

Feet	82.0 0°	101.7 0°	121.4 0°	141.1 0°	160.8 0°	0°	180.5 22°	0°	200.1 22°	219.8 0°	Feet
120	49.00										120
125	47.00										125
130	45.00										130
135	42.60	41.60									135
140		39.80									140
145		38.00	37.20								145
150		36.40	35.60								150
155		34.80	24.00								155
160			23.60	31.80							160
165			31.40	30.60							165
170			30.00	29.40							170
175			28.80	28.20	27.80						175
180				27.00	26.80						180
185				26.00	25.60	24.20					185
190				25.00	24.60	23.20					190
195				24.00	23.80	22.40	22.40				195
200					22.80	21.40	21.40	20.60			200
205					22.00	20.60	20.60	19.80	19.80		205
210					21.20	19.80	19.80	19.00	19.00	18.40	210
215					20.40	19.00	19.00	18.40	18.40	17.80	215
220						18.40	18.40	17.60	17.60	17.00	220
225						17.60		17.00	17.00	16.40	225
230						17.00		16.20	16.20	15.80	230
235						16.20		15.60	15.60	15.00	235
240								15.00	15.00	14.40	240
245								14.40		14.00	245
250										13.40	250
255										12.80	255
260										12.40	260
265										11.80	265

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

Grove GMK6400 The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Luffing jib with MegaWingLift™

Pounds x 1000

Feet	82.0 0°	101.7 0°	121.4 0°	141.1 0°	160.8 0°	0°	180.5 22°	0°	200.1 22°	219.8 0°	Feet
125	43.80										125
130	41.60										130
135	39.60										135
140	37.80	37.20									140
145		35.60									145
150		34.00									150
155		32.60									155
160		31.20	30.40								160
165			29.00								165
170			28.00								170
175			26.80	25.60							175
180			25.80	24.60							180
185				23.60	22.60						185
190				22.60	21.80						190
195				21.80	20.80	22.40					195
200				20.80	20.00	18.60	21.40				200
205					19.20	17.80	20.60				205
210					18.40	17.00	19.80	16.20	16.20		210
215						17.80	16.40	19.00	15.60	15.60	
220						17.00	15.60	18.40	14.80	15.00	
225							15.00		14.20	14.20	225
230							14.40		13.60	13.60	230
235							13.80		13.00	13.20	235
240							13.20		12.60	12.60	240
245								12.00	12.00	11.80	245
250								11.40	11.40	11.40	250
255								11.00	11.00	10.80	255
260								10.40		10.40	260
265										10.00	265
270										9.40	270
275										9.00	275

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Luffing jib with MegaWingLift™

	44,79 m (147.0 ft) 60°		25 m - 67 m (82.0 ft - 219.8 ft)		135 000 kg (297,600 lb)		8,7 m x 8,5 m (28.5 ft x 27.9 ft) (100%)		360°		
Pounds x 1000											
Feet	82.0 0°	101.7 0°	121.4 0°	141.1 0°	160.8 0°	0°	180.5 22°	0°	200.1 22°	219.8 0°	Feet
140	35.40										140
145	33.80										145
150	32.40										150
155	30.00										155
160	28.60										160
165	27.40	26.40									165
170	26.20	25.20									170
175	24.20										175
180		23.20	21.80								180
185		22.20	21.00								185
190		21.40	20.20								190
195		19.40	18.40								195
200			18.60	17.60		18.60					200
205				17.80	16.80	15.40	17.80				205
210					16.20	14.60	17.00				210
215					15.40	14.00	16.40				215
220					14.80	13.40	15.60	13.00			220
225					14.20	12.80	15.00	12.60	12.60		225
230						12.20	14.40	12.00	12.00	11.40	230
235						11.60	13.80	11.40	11.40	10.80	235
240						11.20		10.80	10.80	10.20	240
245						10.60		10.40	10.40	9.80	245
250								9.80	9.80	9.40	250
255								9.40	9.40	8.80	255
260								8.80	9.00	8.40	260
265								8.40		8.00	265
270										7.60	270
275										7.20	275
280										6.80	280
285										6.40	285

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

Grove GMK6400 The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Luffing jib with MegaWingLift™



49,69 m
(163.0 ft)
60°



25 m - 67 m
(82.0 ft - 219.8 ft)



135 000 kg
(297,600 lb)



8,7 m x 8,5 m
(28.5 ft x 27.9 ft)
(100%)



360°



Pounds x 1000

Feet	82.0 0°	101.7 0°	121.4 0°	141.1 0°	160.8 0°	0°	180.5 22°	0°	200.1 22°	219.8 0°	Feet
145	31.40										145
150	30.00										150
155	28.60										155
160	27.40										160
165		25.20									165
170		24.00									170
175		23.00									175
180		22.00	21.00								180
185			20.20								185
190			19.20								190
195			18.40	17.20							195
200			17.60	16.40							200
205				15.80	14.80						205
210				15.00	14.00						210
215				14.40	13.40						215
220				13.60	12.80	12.00	11.80				220
225					12.20	11.40	11.40				225
230					11.80	10.80	10.80	10.00			230
235					11.20	10.20	10.20	9.40			235
240					10.60	9.80	9.80	9.00	9.00	8.40	240
245						9.20	9.20	8.60	8.60	7.80	245
250						8.80	8.20	8.00	8.00	7.40	250
255						8.20		7.60	7.60	7.00	255
260						7.80		7.20	7.20	6.60	260
265								6.80	6.80	6.20	265
270								6.40		5.80	270
275								6.00		5.40	275
280								5.60		5.00	280
285										4.80	285
290										4.40	290
295										4.00	295

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Luffing jib with MegaWingLift™

 54,59 m
(179.1 ft)
60°

 25 m - 67 m
(82.0 ft - 219.8 ft)

 135 000 kg
(297,600 lb)

 8,7 m x 8,5 m
(28.5 ft x 27.9 ft)
(100%)

 360°



Pounds x 1000

Feet	82.0 0°	101.7 0°	121.4 0°	141.1 0°	160.8 0°	0°	180.5 22°	0°	200.1 22°	219.8 0°	Feet			
155	26.40										155			
160	25.40										160			
165	24.20										165			
170	23.20										170			
175											175			
180		20.00									180			
185		19.20	18.00								185			
190		18.40	17.20								190			
195			16.60								195			
200			15.80								200			
205			15.20	13.80							205			
210				13.20							210			
215				12.60							215			
220				12.00	11.80						220			
225					11.40	11.00	9.40				225			
230						10.40	9.00	9.00			230			
235						10.00	8.40	8.40			235			
240						9.40	8.00	8.00	7.20		240			
245						9.00	7.60	7.60	6.80	6.80	245			
250							7.20	7.20	6.40	6.40	5.60	250		
255								6.60	6.60	6.00	6.00	5.20	255	
260									6.20	6.20	5.60	4.80	260	
265										5.80	5.20	5.20	4.60	265
270											4.80	4.80	4.20	270
275											4.40	4.40	3.80	275
280											4.00	4.00	3.40	280
285											3.60			285


THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

Grove GMK6400 The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Working range

Heavy duty jib

Main boom and 4,0 m (13.1 ft) heavy duty jib

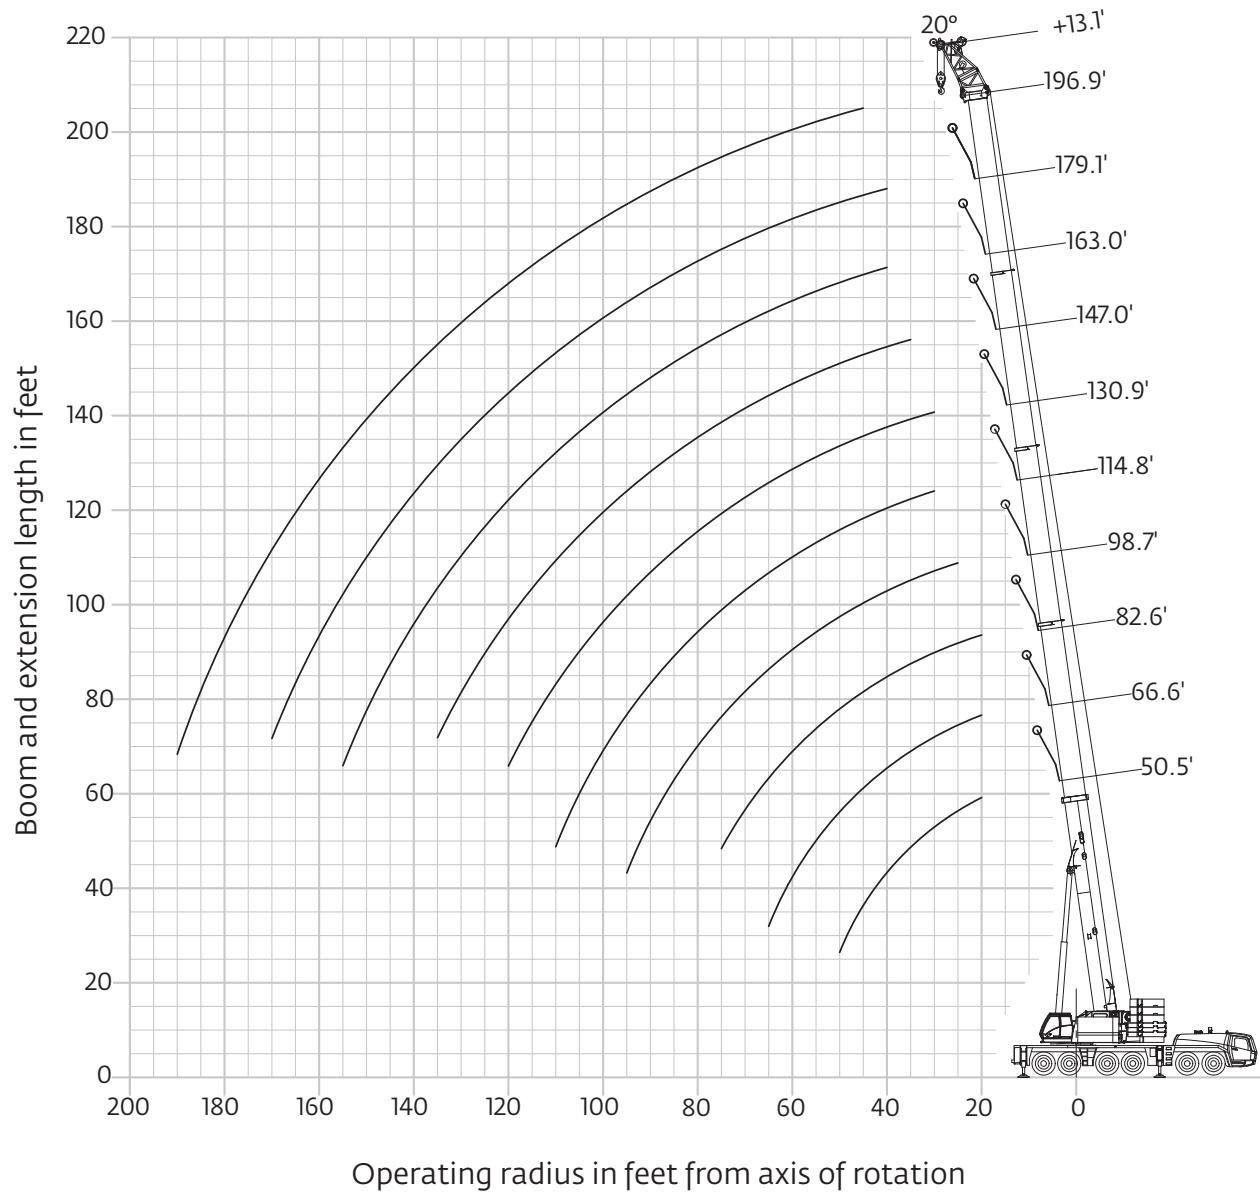

Hook heights shown in the working diagram do not consider loaded boom deflection.

Load chart

Heavy duty jib

 34,9 m - 60,0 m
(114.8 ft - 196.9 ft)


 4,0 m
(13.1 ft)
20°

 135 000 kg
(297,600 lb)

 8,7 m x 8,5 m
(28.5 ft x 27.9 ft)
(100%)

 360°

Feet	114.8	130.9	147.0	163.0	179.1	196.9	Feet
35	165.00	137.00	120.00				35
40	164.00	126.00	112.00	99.00	82.00		40
45	155.00	116.00	104.00	94.00	82.00	66.00	45
50	146.00	106.00	97.00	89.00	81.00	66.00	50
55	138.00	99.00	90.00	83.00	77.00	66.00	55
60	126.00	91.00	83.00	77.00	72.00	65.00	60
65	114.00	84.00	77.00	72.00	68.00	62.00	65
70	104.00	78.00	72.00	68.00	64.00	59.00	70
75	95.00	73.00	68.00	64.00	60.00	56.00	75
80	87.00	68.00	64.00	59.00	57.00	52.00	80
85	80.00	63.00	59.00	56.00	53.00	49.00	85
90	74.00	59.00	56.00	53.00	50.00	47.00	90
95	69.00	55.00	52.00	49.00	47.00	44.00	95
100	64.00	52.00	49.00	47.00	45.00	41.80	100
105	60.00	49.00	46.00	44.00	42.40	39.80	105
110	53.00	46.00	43.00	41.60	40.20	37.60	110
115		43.40	40.60	39.40	38.20	35.60	115
120		41.20	38.40	37.20	36.20	33.80	120
125			36.20	35.00	34.40	32.00	125
130			34.20	33.00	32.60	30.40	130
135			32.40	31.40	31.00	28.80	135
140				29.60	29.60	27.20	140
145				28.00	28.00	25.60	145
150				26.60	26.50	24.40	150
155				25.00	25.00	23.20	155
160					23.60	22.00	160
165					22.20	20.80	165
170					21.00	19.80	170
175						18.80	175
180						18.00	180
185						17.00	185
190						16.20	190

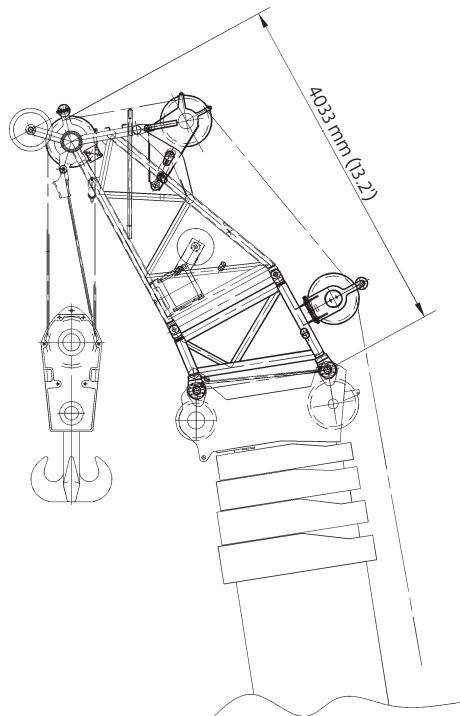


THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

Grove GMK6400 The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Working range

Heavy duty jib

Main boom and 7,5 m (24.6 ft) heavy duty jib

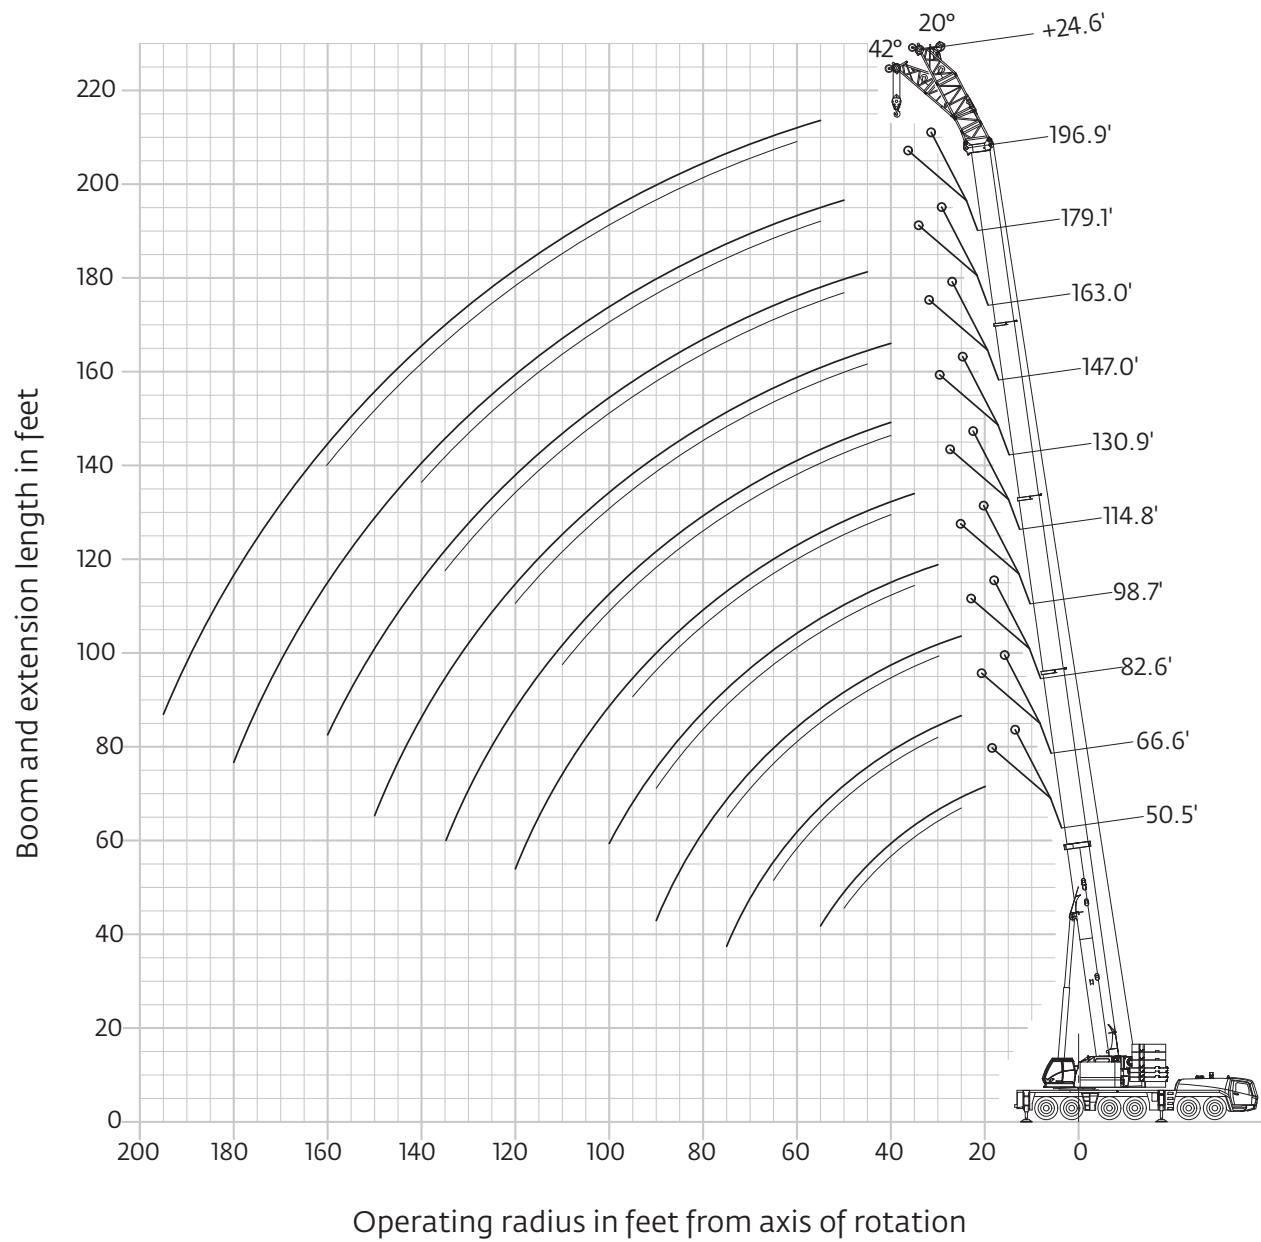

Load chart

Heavy duty jib


34,9 m - 60,0 m
(114.8 ft - 196.9 ft)



7,5 m
(24.6 ft)
20°


135 000 kg
(297,600 lb)


8,7 m x 8,5 m
(28.5 ft x 27.9 ft)
(100%)


360°

Feet	114.8	130.9	147.0	163.0	179.1	196.9	Feet
35	93.00						35
40	89.00	90.00	94.00				40
45	86.00	87.00	92.00	85.00			45
50	83.00	84.00	90.00	83.00	72.00		50
55	80.00	82.00	84.00	78.00	70.00	59.00	55
60	77.00	79.00	78.00	73.00	67.00	59.00	60
65	75.00	77.00	73.00	68.00	64.00	58.00	65
70	73.00	73.00	68.00	64.00	60.00	55.00	70
75	71.00	69.00	64.00	60.00	57.00	52.00	75
80	69.00	65.00	60.00	56.00	53.00	49.00	80
85	68.00	61.00	56.00	52.00	50.00	47.00	85
90	67.00	57.00	53.00	49.00	47.00	44.00	90
95	65.00	53.00	50.00	46.00	45.00	41.80	95
100	64.00	50.00	47.00	43.80	42.20	39.40	100
105	60.00	47.00	43.80	41.40	40.00	37.40	105
110	56.00	44.00	41.20	39.20	37.80	35.20	110
115	52.00	41.40	38.80	37.00	35.80	33.40	115
120	49.00	39.20	36.60	35.00	34.00	31.60	120
125		37.00	34.40	33.20	32.00	29.80	125
130		35.00	32.60	31.40	30.40	27.80	130
135		33.00	30.80	29.60	28.80	26.20	135
140			29.00	27.60	27.00	25.00	140
145			27.40	25.80	25.40	23.60	145
150			25.80	24.60	24.20	22.40	150
155				23.20	23.00	21.20	155
160				21.80	21.80	20.20	160
165					20.60	19.00	165
170					19.40	18.00	170
175					18.40	17.00	175
180					17.40	16.20	180
185						15.20	185
190						14.40	190
195						13.60	195

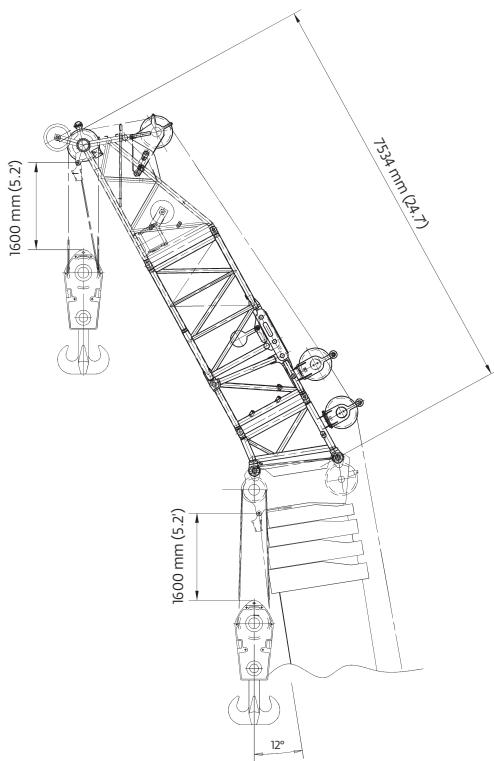

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.


Grove GMK6400 The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Heavy duty jib

	34,9 m - 60,0 m (114.8 ft - 196.9 ft)		7,5 m (24.6 ft) 42°		135 000 kg (297,600 lb)		8,7 m x 8,5 m (28.5 ft x 27.9 ft) (100%)		360°
--	--	--	---------------------------	--	----------------------------	--	--	--	------

Feet	114.8	130.9	147.0	163.0	179.1	196.9	Feet
40	83.00	84.00					40
45	81.00	82.00	80.00				45
50	80.00	80.00	79.00	75.00			50
55	78.00	79.00	78.00	74.00	67.00		55
60	77.00	77.00	77.00	73.00	65.00	56.00	60
65	76.00	76.00	73.00	69.00	63.00	56.00	65
70	75.00	73.00	68.00	64.00	60.00	55.00	70
75	74.00	69.00	64.00	60.00	57.00	53.00	75
80	73.00	65.00	60.00	57.00	54.00	50.00	80
85	72.00	61.00	56.00	53.00	51.00	47.00	85
90	72.00	57.00	53.00	50.00	48.00	45.00	90
95	70.00	53.00	50.00	47.00	45.00	42.40	95
100		50.00	47.00	44.00	42.80	40.00	100
105		47.00	44.00	41.80	40.40	37.80	105
110		44.00	41.60	39.40	38.20	35.80	110
115			39.20	37.40	36.20	34.00	115
120			37.00	35.40	34.20	32.20	120
125				33.40	32.40	30.40	125
130				31.60	30.80	28.80	130
135				30.00	29.20	27.00	135
140					27.40	25.20	140
145						24.00	145
150						22.80	150
155						21.40	155
160						20.20	160

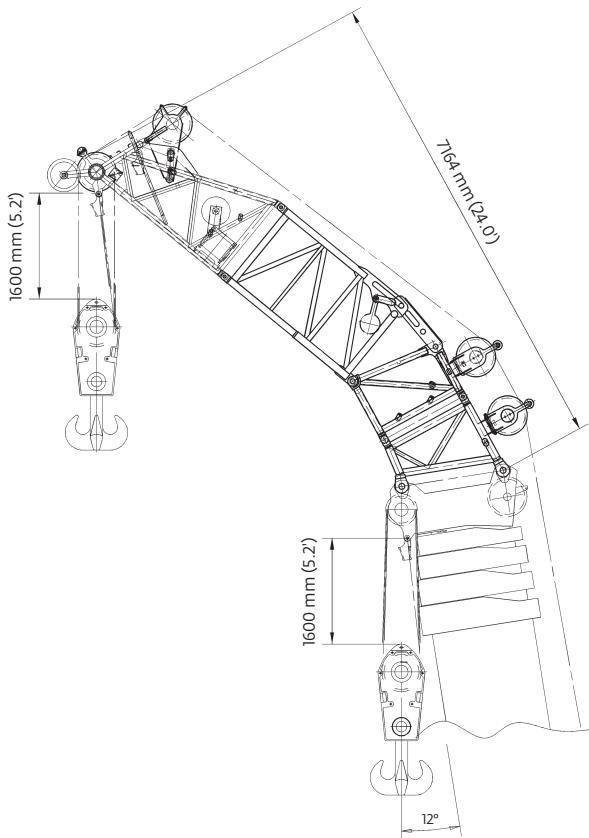


THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Working range

Heavy duty jib and MegaWingLift™

Main boom, 4.0 m (13.1 ft) heavy duty jib and MegaWingLift™

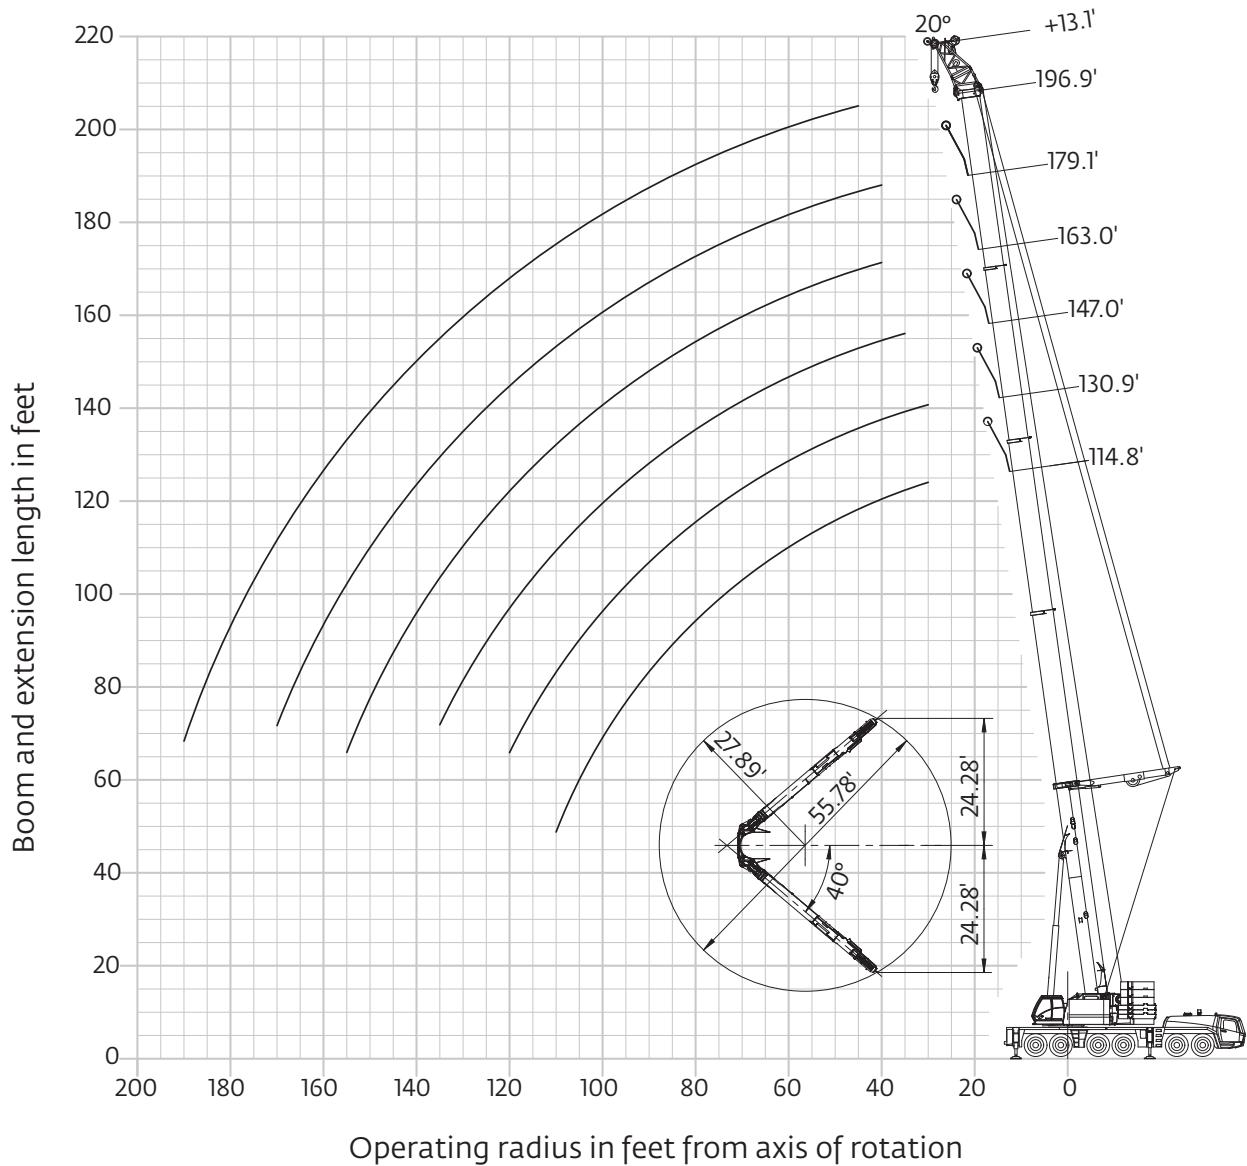

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.


Grove GMK6400 The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Heavy duty jib and MegaWingLift™

	34,9 m - 60,0 m (114.8 ft - 196.9 ft)		4,0 m (13.1 ft) 20°		135 000 kg (297,600 lb)		8,7 m x 8,5 m (28.5 ft x 27.8 ft) (100%)		360°
--	--	--	---------------------------	--	----------------------------	--	--	--	------

Feet	114.8	130.9	147.0	163.0	179.1	196.9	Feet
30	165.00	165.00					30
35	165.00	165.00					35
40	165.00	165.00	165.00	157.00	150.00		40
45	160.00	152.00	161.00	143.00	141.00	128.00	45
50	148.00	140.00	147.00	132.00	130.00	121.00	50
55	134.00	131.00	135.00	122.00	120.00	114.00	55
60	121.00	120.00	126.00	114.00	111.00	108.00	60
65	110.00	109.00	117.00	107.00	104.00	101.00	65
70	100.00	99.00	110.00	100.00	98.00	95.00	70
75	91.00	90.00	100.00	92.00	93.00	89.00	75
80	83.00	82.00	91.00	84.00	85.00	85.00	80
85	76.00	75.00	83.00	77.00	78.00	78.00	85
90	70.00	69.00	75.00	70.00	72.00	72.00	90
95	64.00	63.00	69.00	65.00	66.00	67.00	95
100	59.00	58.00	64.00	60.00	61.00	62.00	100
105	52.00	54.00	59.00	55.00	56.00	57.00	105
110	45.00	49.00	54.00	51.00	52.00	53.00	110
115		45.00	50.00	47.00	49.00	49.00	115
120		38.80	46.00	43.80	45.00	46.00	120
125			42.80	40.80	42.20	42.60	125
130				39.60	37.80	39.20	130
135				35.40	35.20	36.60	135
140				30.20	32.80	34.20	140
145					28.60	31.80	145
150					24.20	29.80	150
155					23.00	27.20	155
160						23.80	160
165						20.00	165
170						18.60	170
175						19.20	175
180						16.00	180
185						13.80	185
190						11.60	190

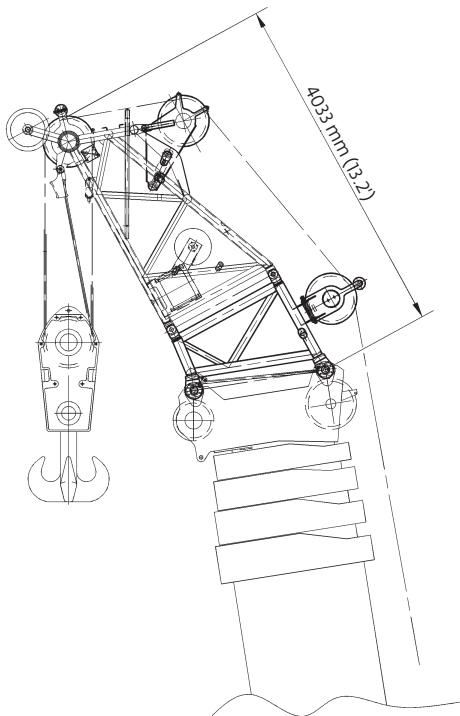


THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Working range

Heavy duty jib and MegaWingLift™

Main boom, 7,5 m (24.6 ft) heavy duty jib and Mega Wing Lift™

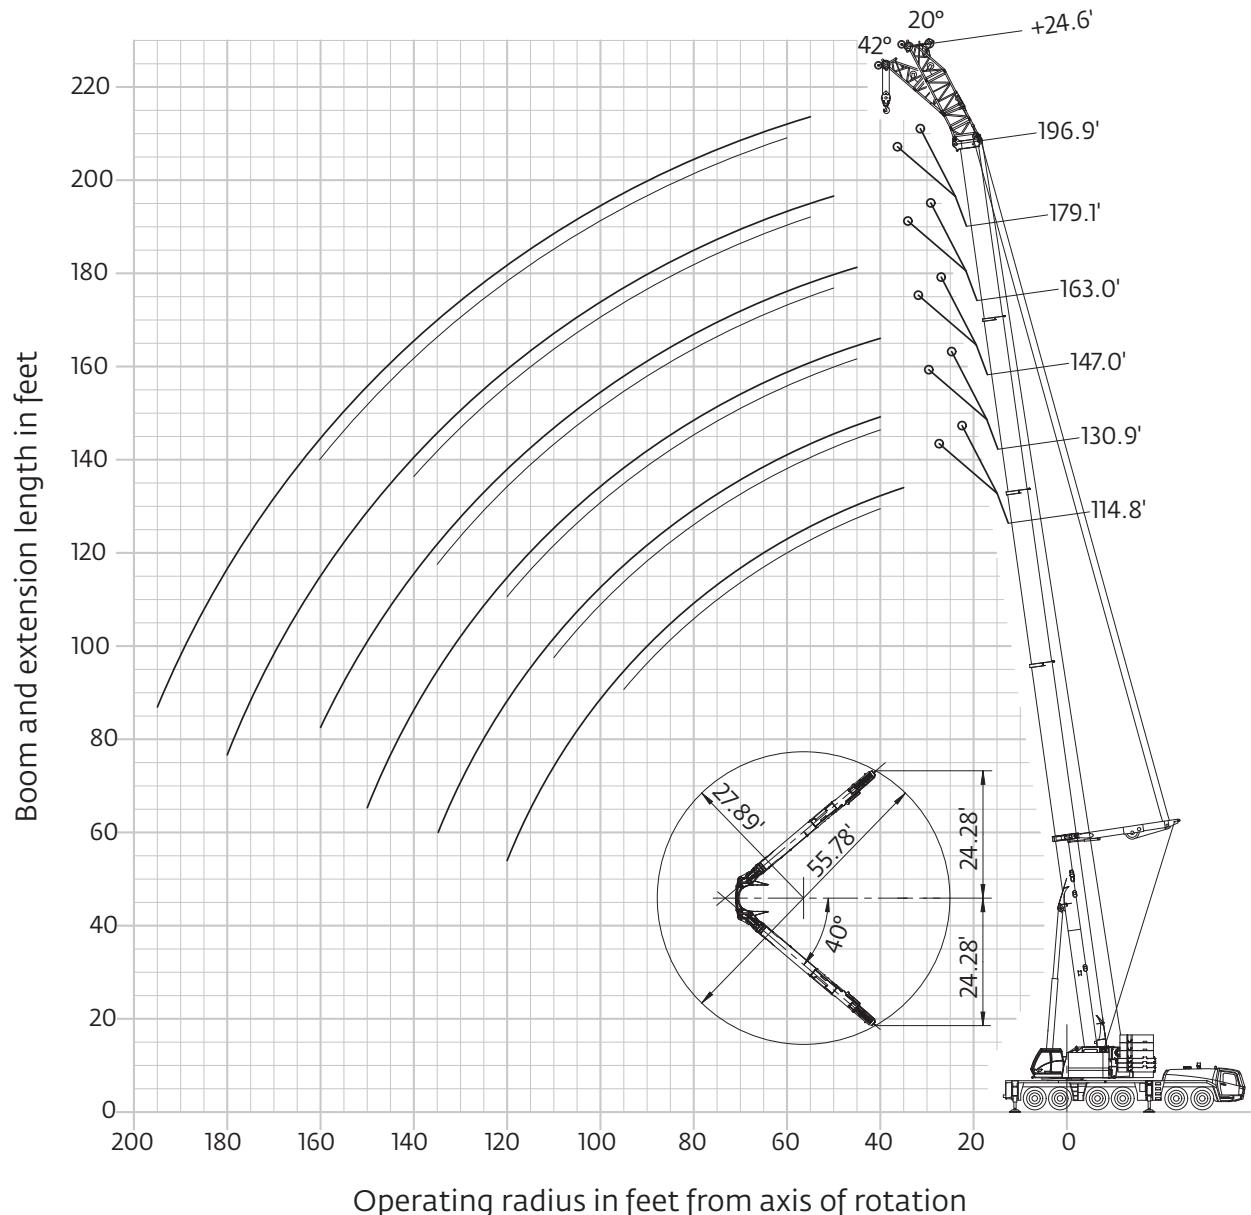


Hook heights shown in the working diagram do not consider loaded boom deflection.

Load chart

Heavy duty jib and MegaWingLift™

Feet	114.8	130.9	147.0	163.0	179.1	196.9	Feet
35	97.00						35
40	94.00	95.00	97.00				40
45	91.00	93.00	94.00	95.00			45
50	89.00	90.00	92.00	93.00	93.00		50
55	86.00	88.00	90.00	91.00	91.00	91.00	55
60	84.00	86.00	88.00	89.00	90.00	89.00	60
65	82.00	84.00	86.00	87.00	88.00	87.00	65
70	80.00	82.00	84.00	86.00	86.00	84.00	70
75	78.00	81.00	83.00	84.00	84.00	81.00	75
80	77.00	79.00	81.00	82.00	82.00	78.00	80
85	76.00	77.00	77.00	78.00	79.00	74.00	85
90	71.00	70.00	70.00	71.00	73.00	71.00	90
95	66.00	64.00	65.00	66.00	67.00	67.00	95
100	60.00	59.00	60.00	56.00	62.00	62.00	100
105	56.00	55.00	55.00	52.00	57.00	57.00	105
110	52.00	51.00	51.00	48.00	53.00	53.00	110
115	46.00	47.00	47.00	44.00	49.00	49.00	115
120	41.00	43.20	43.60	41.20	46.00	46.00	120
125		39.80	40.20	38.20	42.40	42.60	125
130		34.20	37.40	35.60	39.60	39.60	130
135			34.60	33.00	36.80	36.80	135
140			31.00	30.60	34.20	34.40	140
145			26.40	28.40	32.00	32.00	145
150			24.00	24.80	29.80	29.80	150
155				20.80	27.60	27.80	155
160					25.80	26.00	160
165					23.40	24.20	165
170					20.20	22.40	170
175					16.80	20.80	175
180					16.00	18.40	180
185						15.80	185
190						13.00	190
195						11.20	195

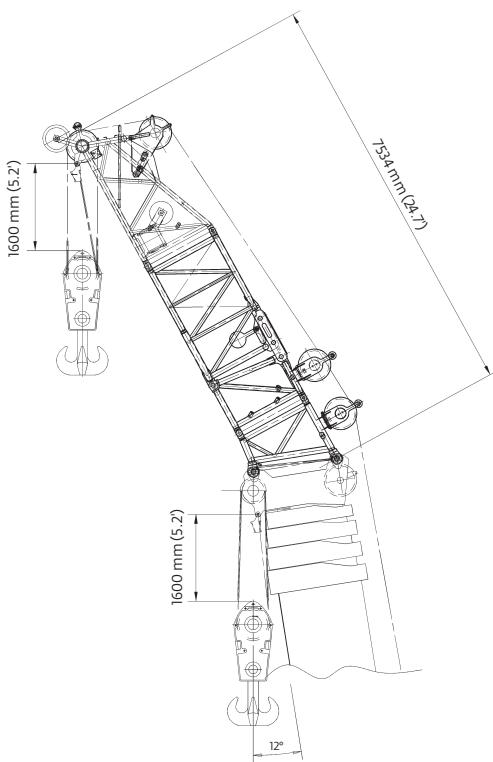

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load chart

Heavy duty jib and MegaWingLift™

 34,9 m - 60,0 m
(114.8 ft - 196.9 ft)


 7,5 m
(24.6 ft)
42°

 135 000 kg
(297,600 lb)

 8,7 m x 8,5 m
(28.5 ft x 27.8 ft)
(100%)

 360°

Feet	114.8	130.9	147.0	163.0	179.1	196.9	Feet
40	77.00						40
45	76.00	78.00	77.00				45
50	75.00	77.00	77.00	77.00			50
55	74.00	76.00	76.00	76.00	76.00		55
60	73.00	75.00	75.00	75.00	75.00	76.00	60
65	73.00	74.00	74.00	74.00	75.00	75.00	65
70	72.00	73.00	73.00	74.00	74.00	74.00	70
75	72.00	73.00	73.00	73.00	74.00	74.00	75
80	72.00	72.00	72.00	73.00	73.00	72.00	80
85	72.00	72.00	72.00	72.00	73.00	70.00	85
90	72.00	71.00	66.00	72.00	72.00	68.00	90
95	66.00	66.00	61.00	67.00	68.00	66.00	95
100		60.00	56.00	62.00	63.00	63.00	100
105		56.00	52.00	57.00	58.00	58.00	105
110		51.00	48.00	53.00	54.00	54.00	110
115			44.00	49.00	50.00	50.00	115
120				45.00	47.00	47.00	120
125				42.00	43.20	43.40	125
130				39.00	40.20	40.40	130
135				36.00	37.40	37.80	135
140					34.80	35.20	140
145						32.80	145
150						30.40	150
155						28.40	155
160						26.40	160

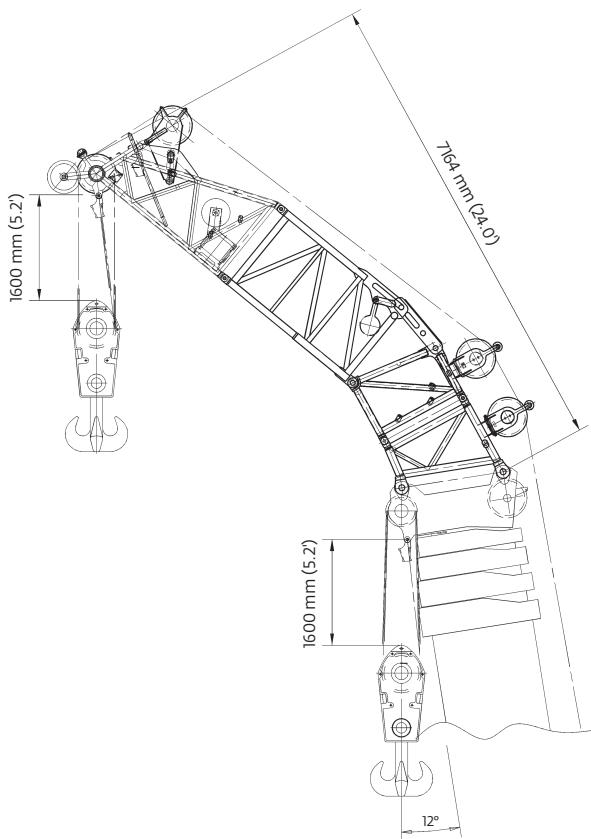

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

Grove GMK6400 The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Symbols glossary

	Axles		Counterweight		Grade		Radius
	Boom		Drive		Hoist		Rotation
	Boom elevation		Electrical system		Hookblock		Speed
	Boom extension		Engine		Hydraulic system		Steering
	Boom length		Extension		Lights		Suspension
	Boom nose		Frame		Oil		Swing
	Brakes		Fuel tank capacity		Outrigger controls		Tires
	Cab		Gear		Outriggers		Transmission

Notes

Notes

Notes

Manitowoc Cranes

Regional headquarters

Americas

Manitowoc, Wisconsin, USA
Tel: +1 920 684 6621
Fax: +1 920 683 6277

Shady Grove, Pennsylvania, USA

Tel: +1 717 597 8121
Fax: +1 717 597 4062

Europe, Middle East, Africa

Ecully, France
Tel: +33 (0)4 72 18 20 20
Fax: +33 (0)4 72 18 20 00

China

Shanghai, China
Tel: +86 21 6457 0066
Fax: +86 21 6457 4955

Greater Asia-Pacific

Singapore
Tel: +65 6264 1188
Fax: +65 6862 4040

Regional offices

Americas

Brazil
Alphaville
Mexico
Monterrey
Chile
Santiago

Europe, Middle East, Africa

France
Baudemont
Cergy
Decines
Germany
Langenfeld
Italy
Lainate
Netherlands
Breda
Poland
Warsaw
Portugal
Balta
Russia
Moscow
South Africa
Johannesburg
U.A.E.
Dubai
U.K.
Buckingham

China

Beijing
Chengdu
Guangzhou
Xian

Greater Asia-Pacific

Australia
Brisbane
Melbourne
Sydney
India
Chennai
Delhi
Hyderabad
Pune
Korea
Seoul
Philippines
Makati City
Singapore

Factories

Brazil
Passo Fundo
China
TaiAn
Zhangjiagang
France
Charlieu
Moulins
Germany
Wilhelmshaven
India
Pune
Italy
Niella Tanaro
Portugal
Baltar
Fânzeres
Slovakia
Saris
USA
Manitowoc
Port Washington
Shady Grove

This document is non-contractual. Constant improvement and engineering progress make it necessary that we reserve the right to make specification, equipment, and price changes without notice. Illustrations shown may include optional equipment and accessories and may not include all standard equipment.